

Parts Book



# Parts Book

**GENERATOR DIESEL ENGINE**

**D1146, D1146T  
P086TI, P086TI-I**

**POWER UNIT ENGINE**

**PU086, PU086T  
PU086TI**

D1146, D1146T, P086TI, P086TI-I, PU086, PU086T, PU086TI



**Doosan Infracore Co., Ltd.**  
Head Office & Incheon Plant  
7-11, Hwasu-Dong, Dong-Gu,  
Incheon, Korea 401-702  
TEL:+82-32-211-1114  
FAX:+82-32-211-1231

**Doosan Infracore**

# CONTENTS

Fig. 0110 Cylinder Block(1) . . . . .	2
0110 Cylinder Block(2) . . . . .	4
0110 Cylinder Block(3) . . . . .	6
0120 Cylinder Liner . . . . .	8
0130 Timing Gear Case(1) . . . . .	10
0130 Timing Gear Case(2) . . . . .	12
0140 Flywheel Housing(1) . . . . .	14
0140 Flywheel Housing(2) . . . . .	16
0140 Flywheel Housing(3) . . . . .	18
0140 Flywheel Housing(4) . . . . .	20
0150 Oil Seal . . . . .	22
0160 Oil Spray Nozzle(1) . . . . .	24
0160 Oil Spray Nozzle(2) . . . . .	26
0170 Water Chamber Cover . . . . .	28
0180 Breather . . . . .	30
0210 Crankshaft(1) . . . . .	32
0210 Crankshaft(2) . . . . .	34
0220 Vibration Damper . . . . .	36
0230 Flywheel(1) . . . . .	38
0230 Flywheel(2) . . . . .	40
0230 Flywheel(3) . . . . .	42
0230 Flywheel(4) . . . . .	44
0240 Connecting Rod(1) . . . . .	46
0240 Connecting Rod(2) . . . . .	48
0250 Piston(1) . . . . .	50
0250 Piston(2) . . . . .	52
0250 Piston(3) . . . . .	54
0250 Piston(4) . . . . .	56
0260 Crankshaft Pulley . . . . .	58
0310 Cylinder Head . . . . .	60
0340 Cylinder Head Cover . . . . .	62
0410 Valve . . . . .	64
0420 Rocker Arm . . . . .	66
0430 Tappet & Push Rod . . . . .	68

Fig. 0440 Camshaft . . . . .	70
0450 Camshaft Drive . . . . .	72
0510 Oil Pump . . . . .	74
0550 Oil Filter . . . . .	76
0560 Oil Cooler(1) . . . . .	78
0560 Oil Cooler(2) . . . . .	80
0580 Oil Pan. . . . .	82
0630 Cooling Water Pipe(1) . . . . .	84
0630 Cooling Water Pipe(2) . . . . .	86
0630 Cooling Water Pipe(3) . . . . .	88
0640 Thermostat(1) . . . . .	90
0640 Thermostat(2) . . . . .	92
0650 Water Pump(1) . . . . .	94
0650 Water Pump(2) . . . . .	96
0660 Cooling Fan(1) . . . . .	98
0660 Cooling Fan(2) . . . . .	100
0810 Exhaust Manifold(1) . . . . .	102
0810 Exhaust Manifold(2) . . . . .	104
0810 Exhaust Manifold(3) . . . . .	106
0820 Intake Manifold(1) . . . . .	108
0820 Intake Manifold(2) . . . . .	110
0820 Intake Manifold(3) . . . . .	112
0820 Intake Manifold(4) . . . . .	114
0910 Turbocharger(1) . . . . .	116
0910 Turbocharger(2) . . . . .	118
0910 Turbocharger(3) . . . . .	120
0940 Intake Stake(1) . . . . .	122
0940 Intake Stake(2) . . . . .	124
0940 Intake Stake(3) . . . . .	126
0940 Intake Stake(4) . . . . .	128
0950 Intercooler . . . . .	130
1010 Injection Nozzle(1) . . . . .	132
1010 Injection Nozzle(2) . . . . .	134
1010 Injection Nozzle(3) . . . . .	136


Fig. 1010 Injection Nozzle(4) . . . . .	138
1010 Injection Nozzle(5) . . . . .	140
1010 Injection Nozzle(6) . . . . .	142
1030 Injection Pipe(1) . . . . .	144
1030 Injection Pipe(2) . . . . .	146
1030 Injection Pipe(3) . . . . .	148
1110 Injection Pump(1) . . . . .	150
1110 Injection Pump(2) . . . . .	152
1110 Injection Pump(3) . . . . .	154
1110 Injection Pump(4) . . . . .	156
1110 Injection Pump(5) . . . . .	158
1110 Injection Pump(6) . . . . .	160
1110 Injection Pump(7) . . . . .	162
1130 Injection Pump Drive . . . . .	164
1140 Injection Pump Mounting(1) . . . . .	166
1140 Injection Pump Mounting(2) . . . . .	168
1140 Injection Pump Mounting(3) . . . . .	170
1160 Engine Control(1) . . . . .	172
1160 Engine Control(2) . . . . .	174
1160 Engine Control(3) . . . . .	176
1230 Fuel Line(1) . . . . .	178
1230 Fuel Line(2) . . . . .	180
1230 Fuel Line(3) . . . . .	182
1250 Fuel Filter(1) . . . . .	184
1250 Fuel Filter(2) . . . . .	186
1910 Alternator Mounting . . . . .	188
1920 Engine Lifting(1) . . . . .	190
1920 Engine Lifting(2) . . . . .	192
1920 Engine Lifting(3) . . . . .	194
2610 Alternator . . . . .	196
2620 Starter(1) . . . . .	198
2620 Starter(2) . . . . .	200
2740 Switch & Sensor(1) . . . . .	202
2740 Switch & Sensor(2) . . . . .	204

Fig. 2740 Switch & Sensor(3)	206
2740 Switch & Sensor(4)	208
2740 Switch & Sensor(5)	210
2910 Wire Harness	212
4150 Engine Mounting(1)	214
4150 Engine Mounting(2)	216
4150 Engine Mounting(3)	218
4150 Engine Mounting(4)	220
8900 Accessories(1)	222
8900 Accessories(2)	224
8900 Accessories(3)	226
8900 Accessories(4)	228
8900 Accessories(5)	230
8900 Accessories(6)	232
8900 Accessories(7)	234
8900 Accessories(8)	236
8900 Accessories(9)	238
8900 Accessories(10)	240
8900 Accessories(11)	242
8900 Accessories(12)	244
8900 Accessories(13)	246
8900 Accessories(14)	248
8900 Accessories(15)	250
8900 Accessories(16)	252
8900 Accessories(17)	254
8900 Accessories(18)	256
8900 Accessories(19)	258
8900 Accessories(20)	260
8900 Accessories(21)	262
8900 Accessories(22)	264
8900 Accessories(23)	266
8900 Accessories(24)	268
8900 Accessories(25)	270
8900 Accessories(26)	272

Fig. 8900 Accessories(27) ..... 274  
9880 Spare Part(1) ..... 276  
9880 Spare Part(2) ..... 278  
9880 Spare Part(3) ..... 280  
9880 Spare Part(4) ..... 282  
9880 Spare Part(5) ..... 284  
9880 Spare Part(6) ..... 286  
9880 Spare Part(7) ..... 288


● 국내 엔진부품 대리점 현황

 Fig.0110 CYLINDER BLOCK(1)

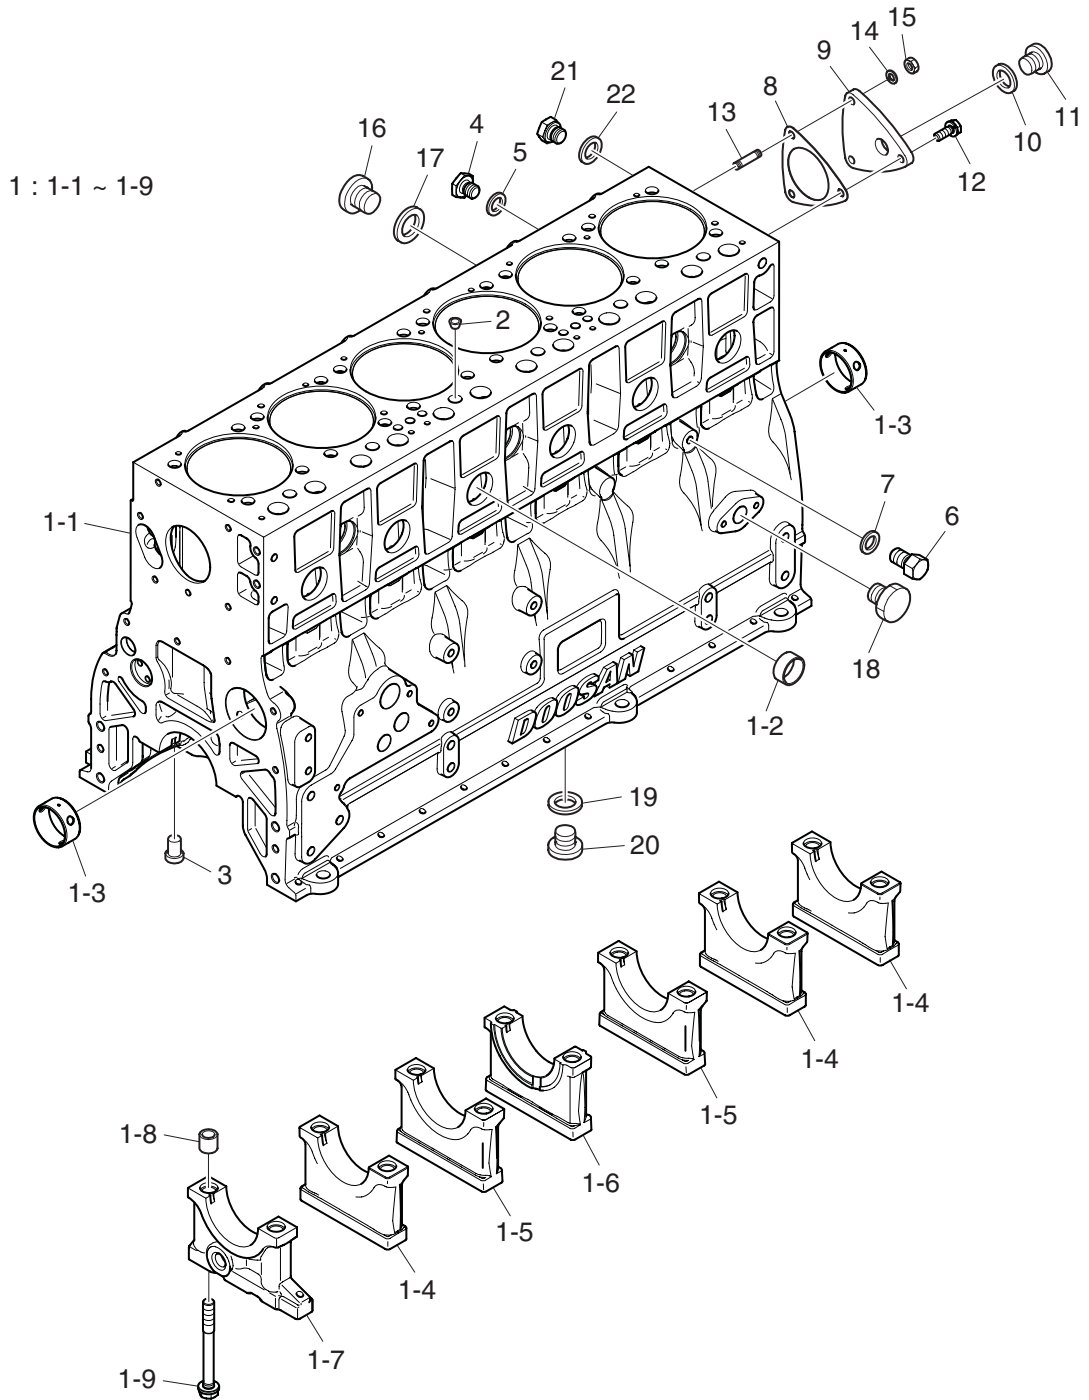

B011-DE08-005/121023

  
Fig.0110 CYLINDER BLOCK(2)

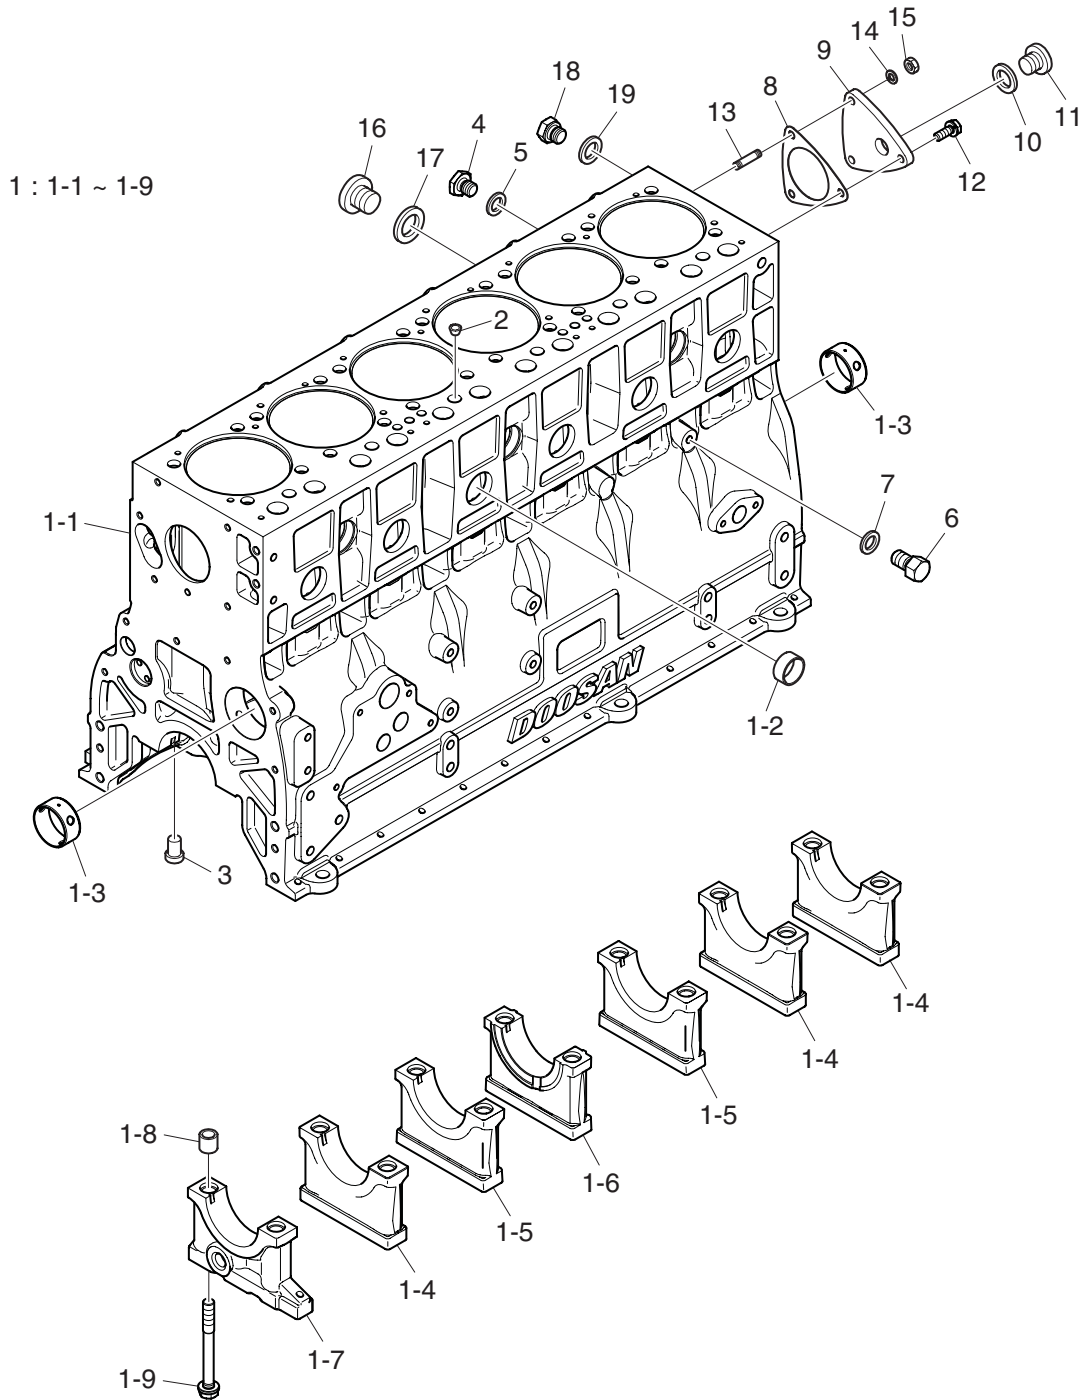

B011-DE08-008/121023

 


Fig.0110 CYLINDER BLOCK(3)

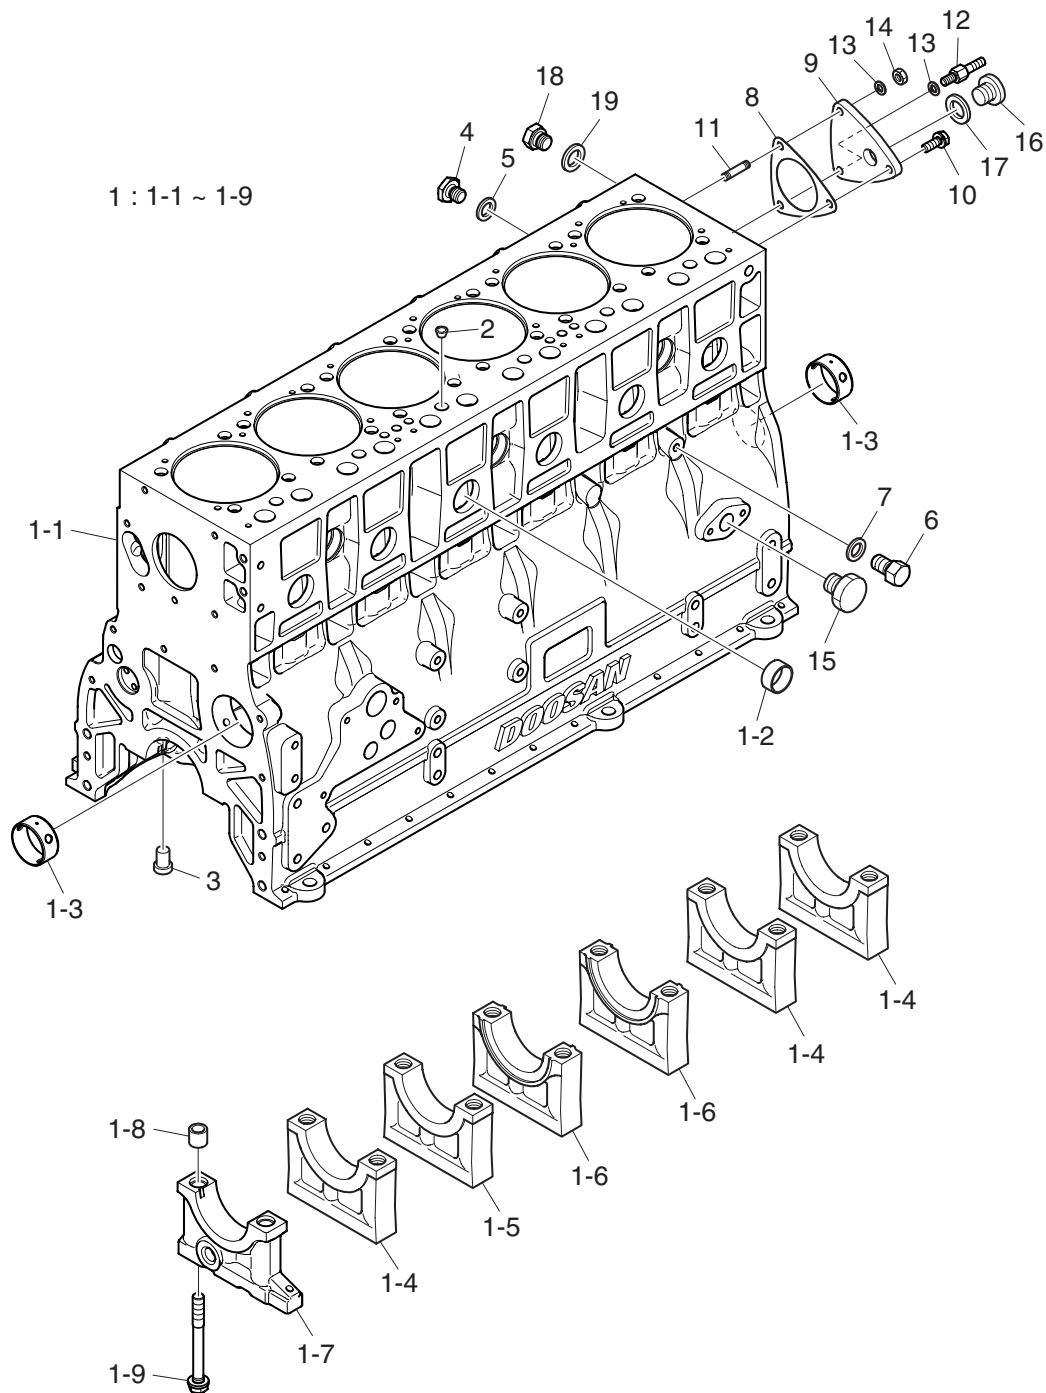


B011-DE08-014/121023

Fig.0120 CYLINDER LINER

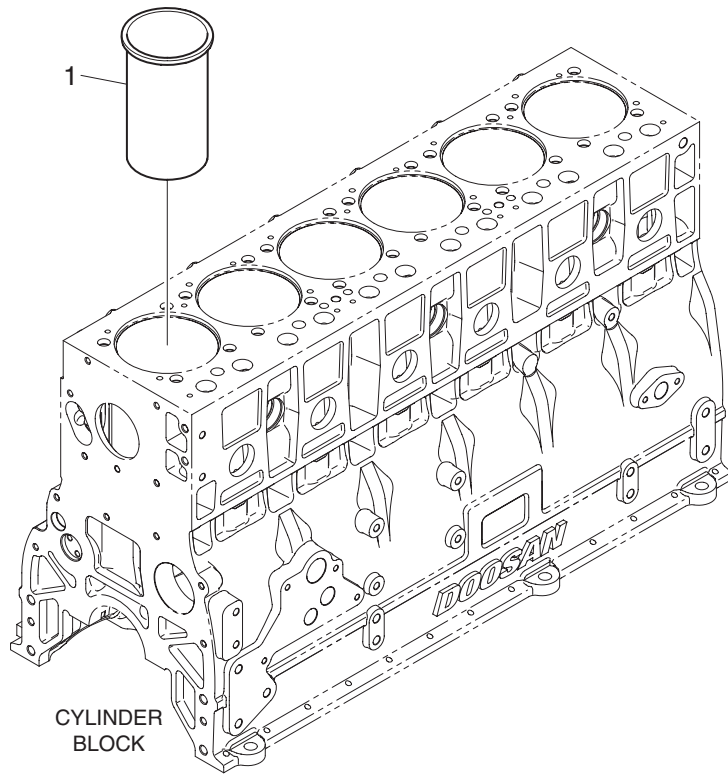


B012-DE08-001/121005

 Fig.0130 TIMING GEAR CASE(1)

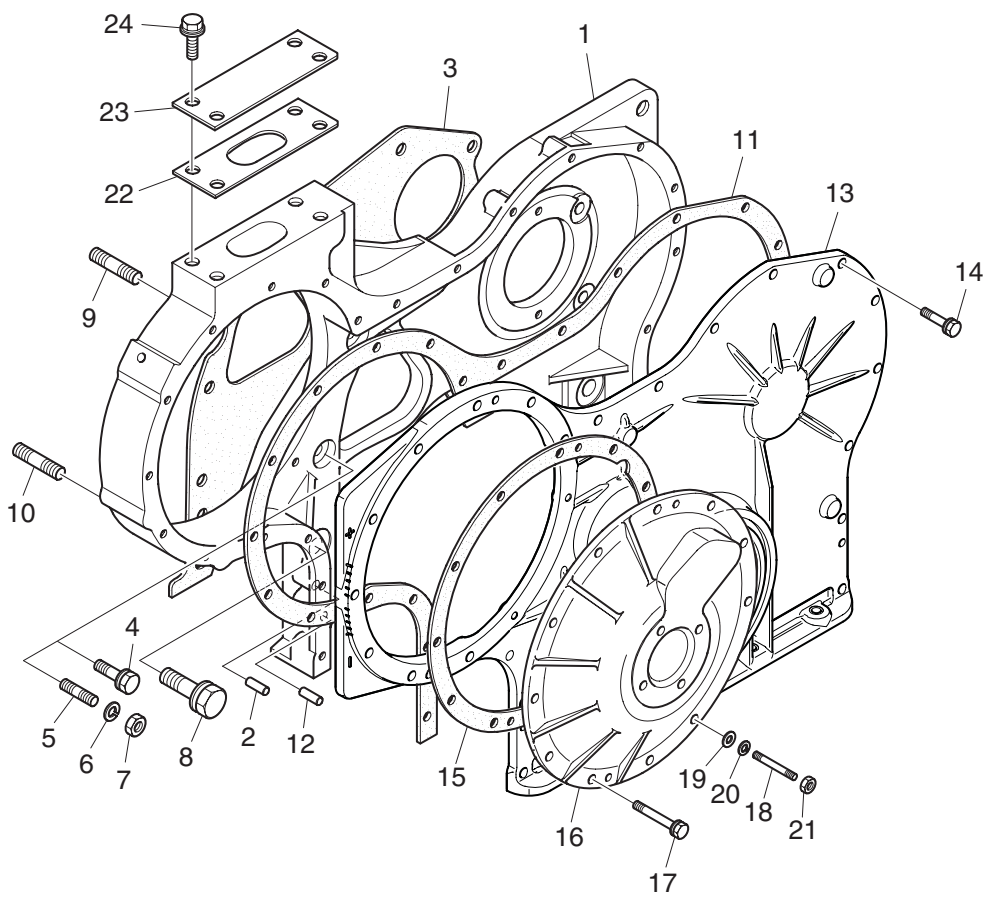


B013-DE08-003/121023

 Fig.0130 TIMING GEAR CASE(2)

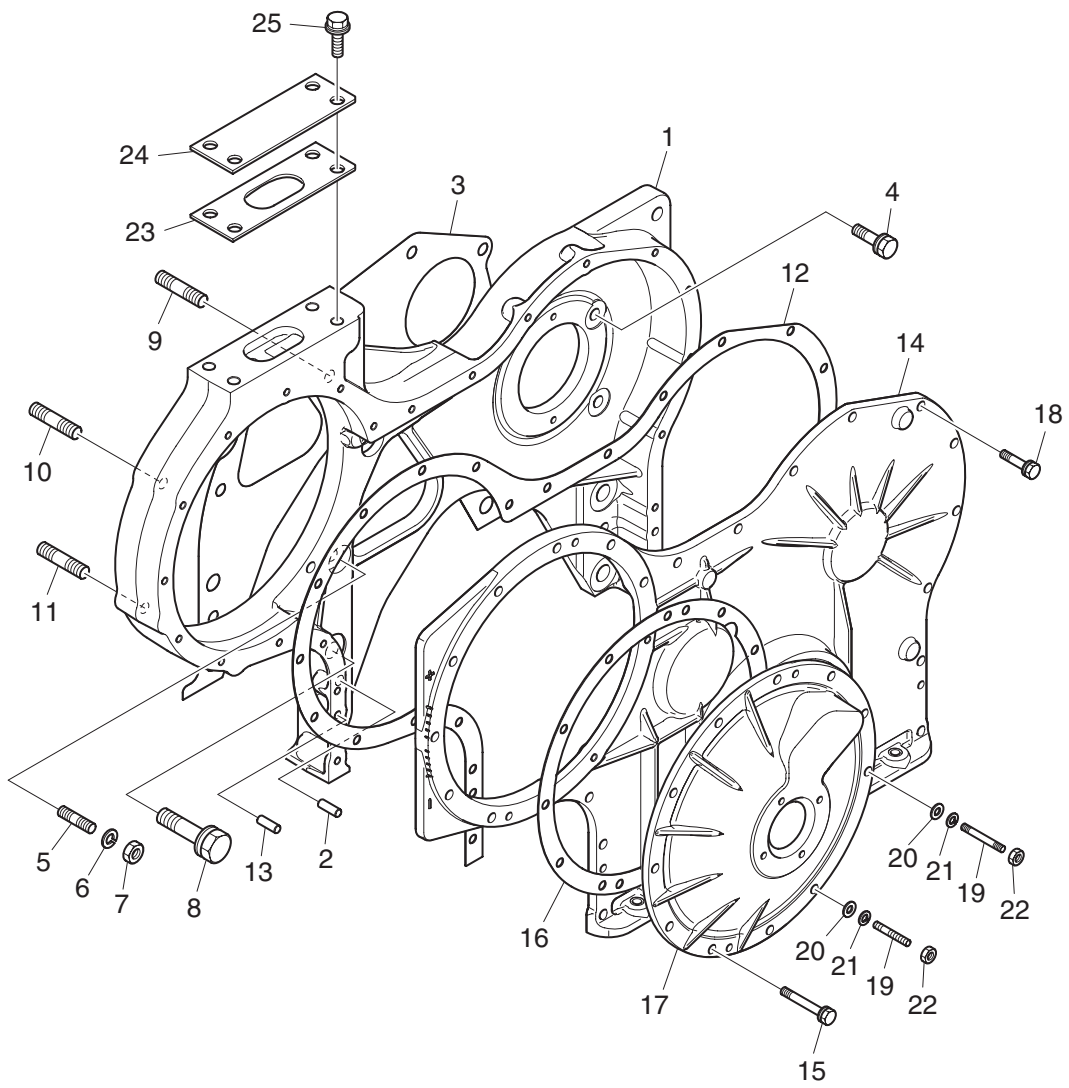


B013-DE08-007/121005

 Fig.0140 FLYWHEEL HOUSING(1)

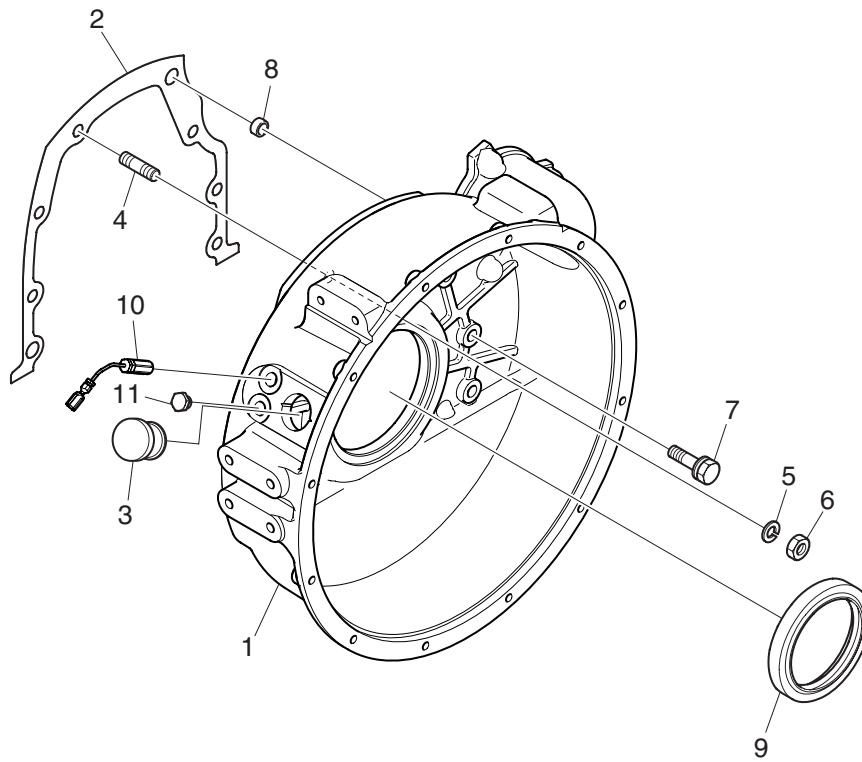


B014-DE08-003/121023

 Fig.0140 FLYWHEEL HOUSING(2)

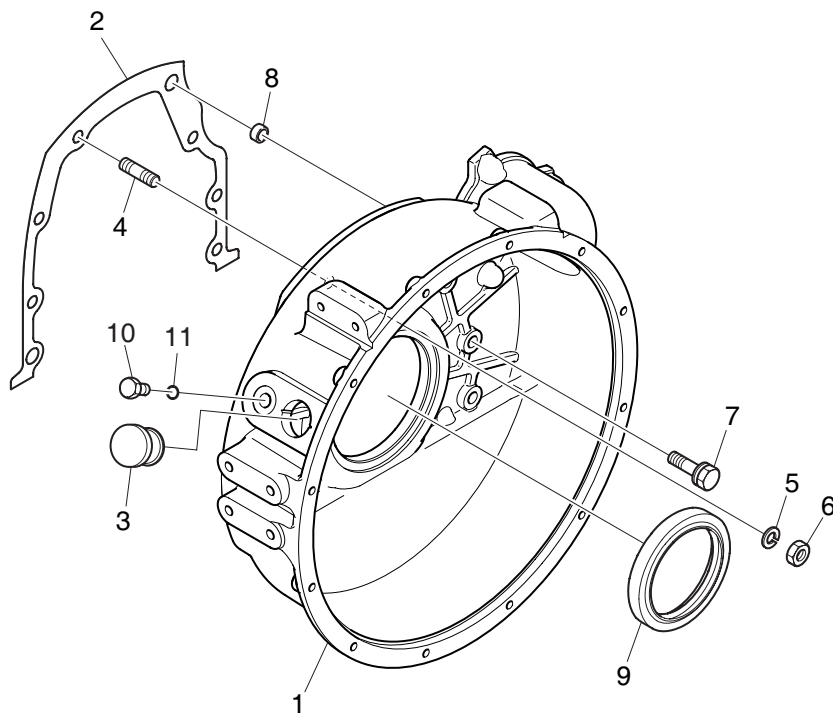


B014-DE08-006/121023

 Fig.0140 FLYWHEEL HOUSING(3)

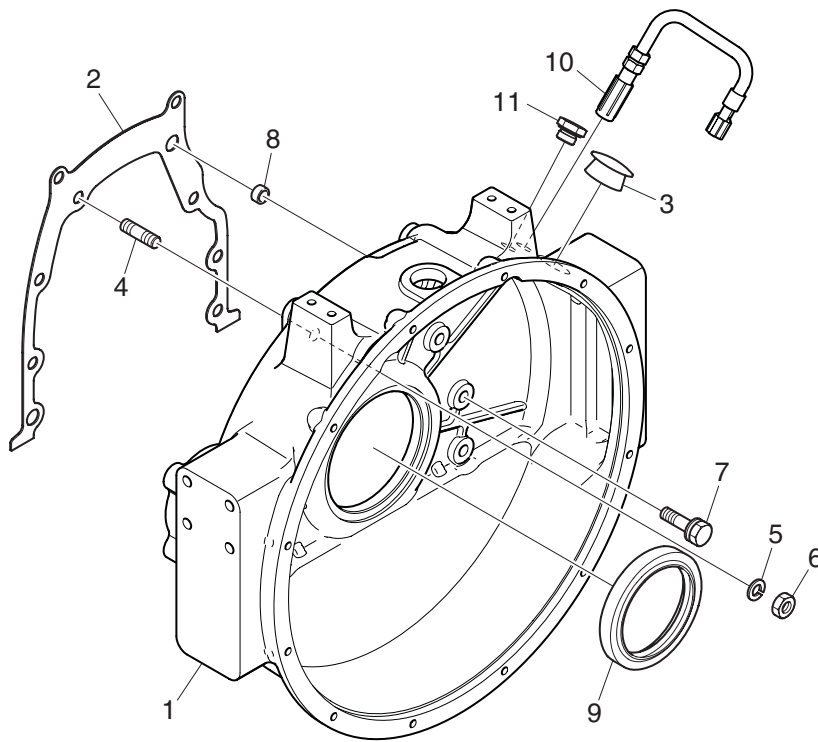

B014-DE08-014/121023

  
Fig.0140 FLYWHEEL HOUSING(4)

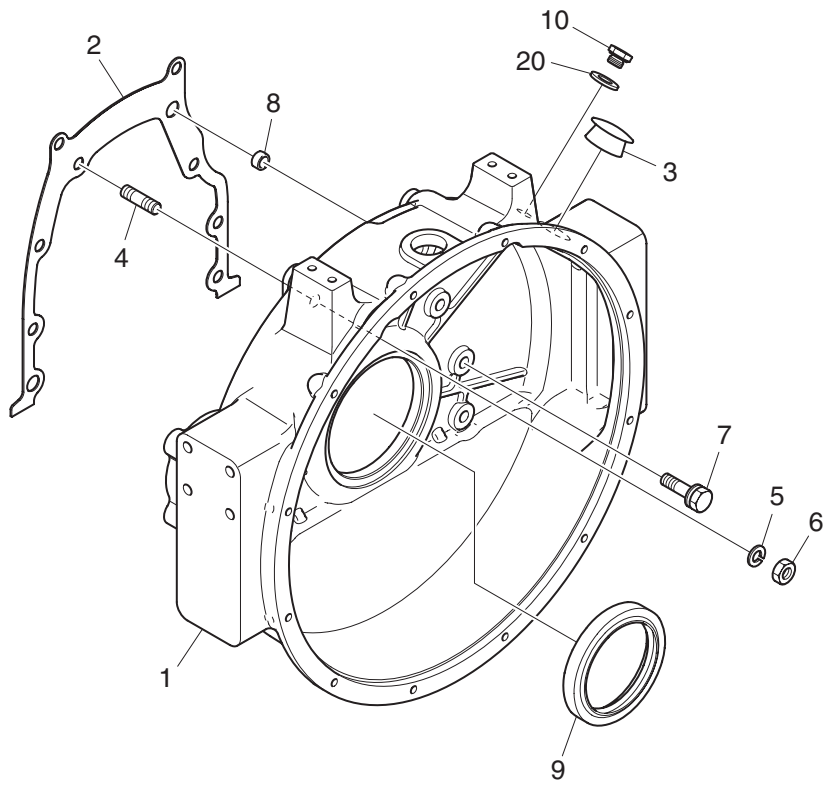

B014-DE08-015/121005

 


Fig.0150 OIL SEAL

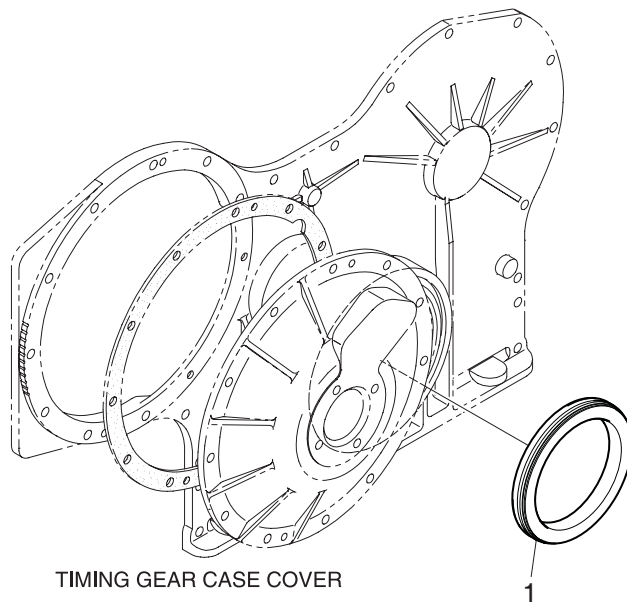


B015-DE08-001/121023

Fig.0160 OIL SPRAY NOZZLE(1)

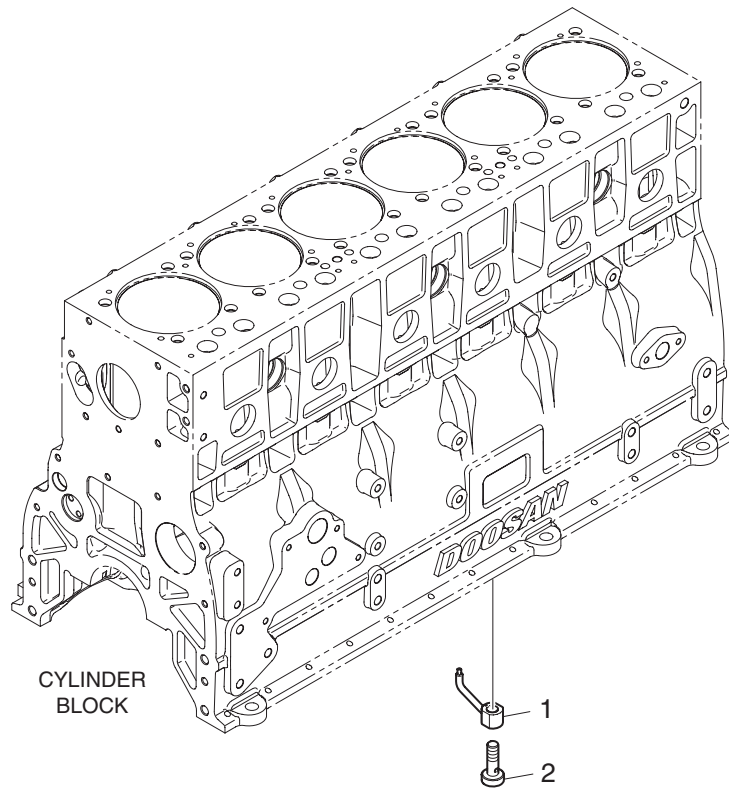


B016-DE08-001/121005

 Fig.0160 OIL SPRAY NOZZLE(2)

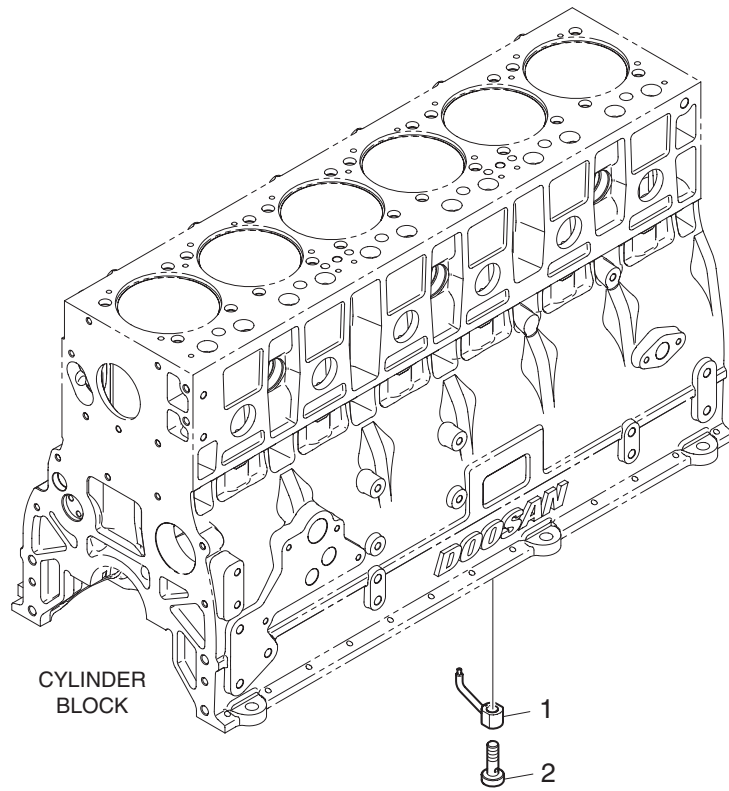


B016-DE08-002/121005

 Fig.0170 WATER CHAMBER COVER

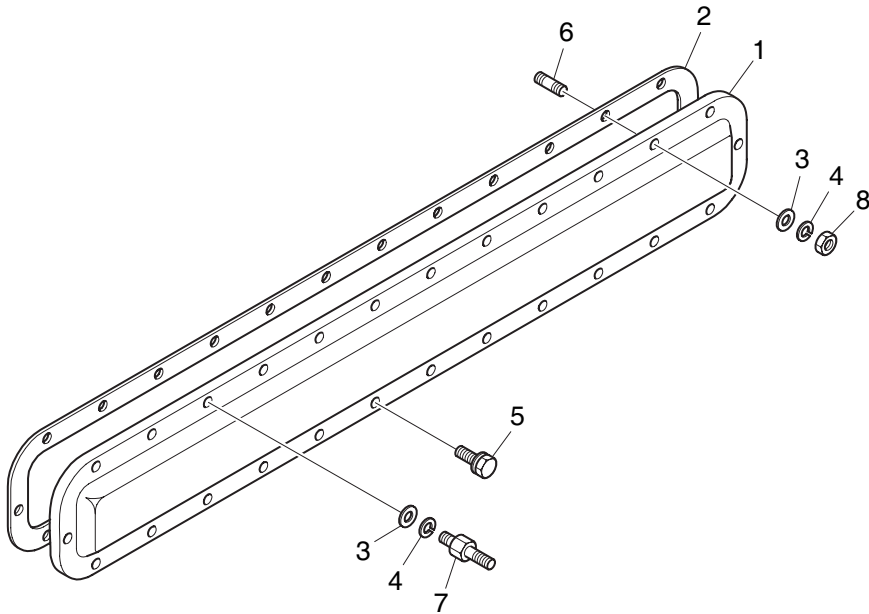


B017-DE08-015/121023

 Fig.0180 BREATHER

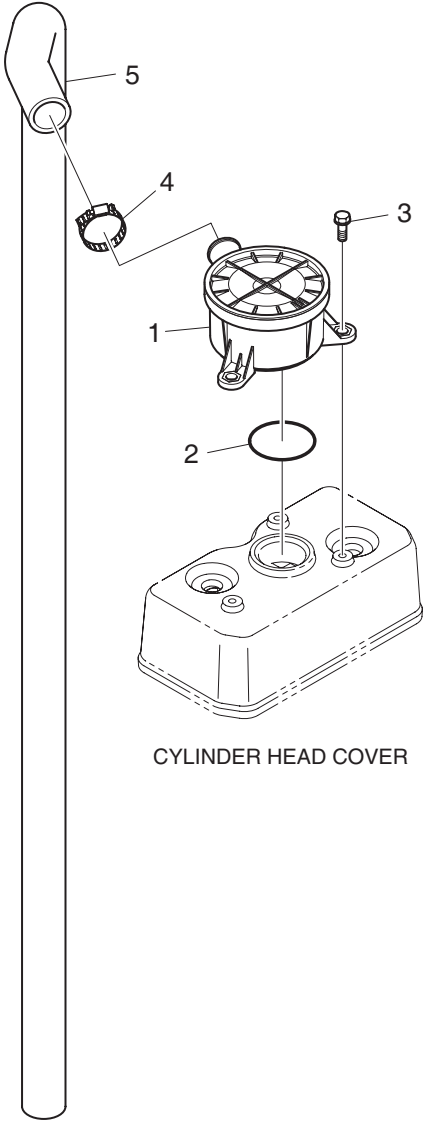


B018-DE08-005/121005

 Fig.0210 CRANKSHAFT(1)

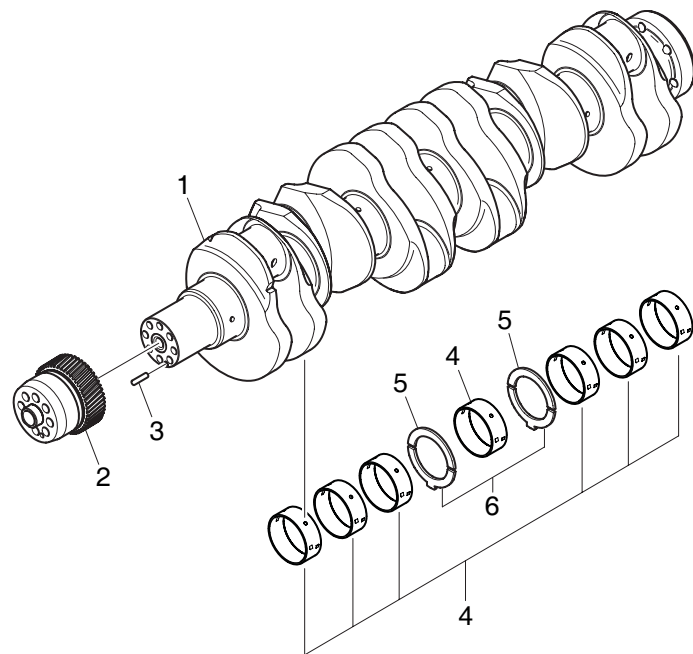


C021-DE08-002/121023

 Fig.0210 CRANKSHAFT(2)

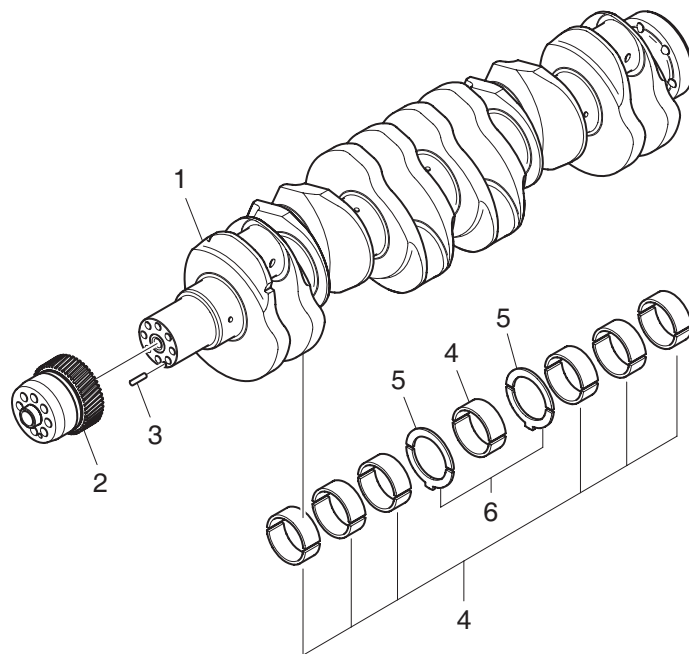

C021-DE08-007/121005

  
Fig.0220 VIBRATION DAMPER

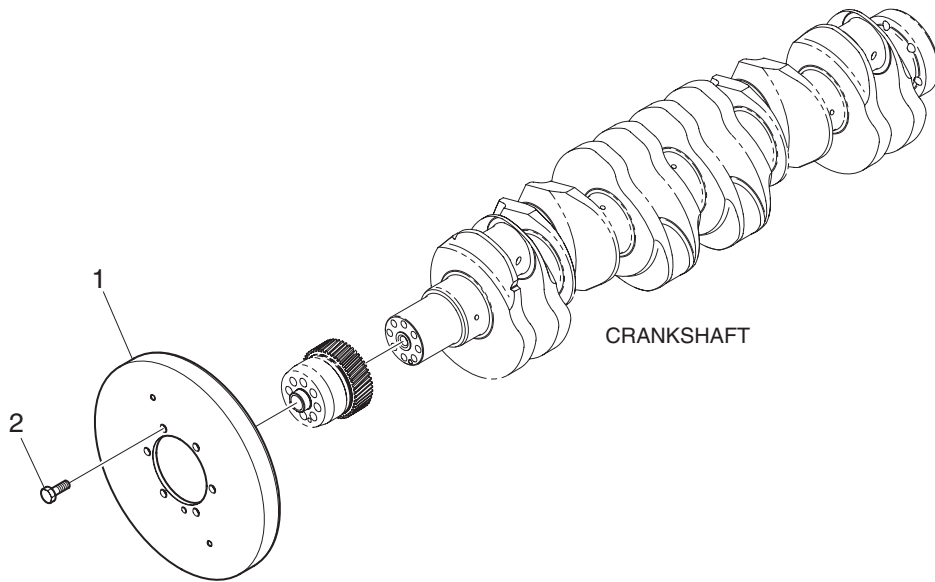

C022-DE08-002/121023

 


Fig.0230 FLYWHEEL(1)

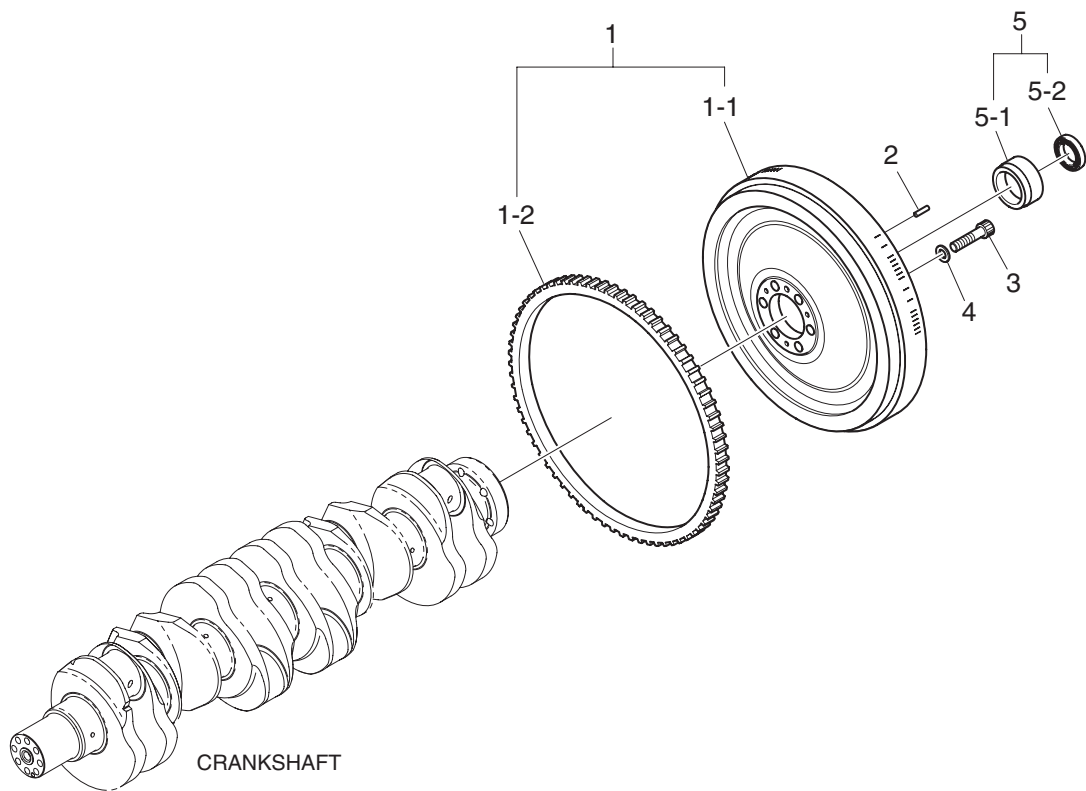


C023-DE08-007/121023

Fig.0230 FLYWHEEL(2)

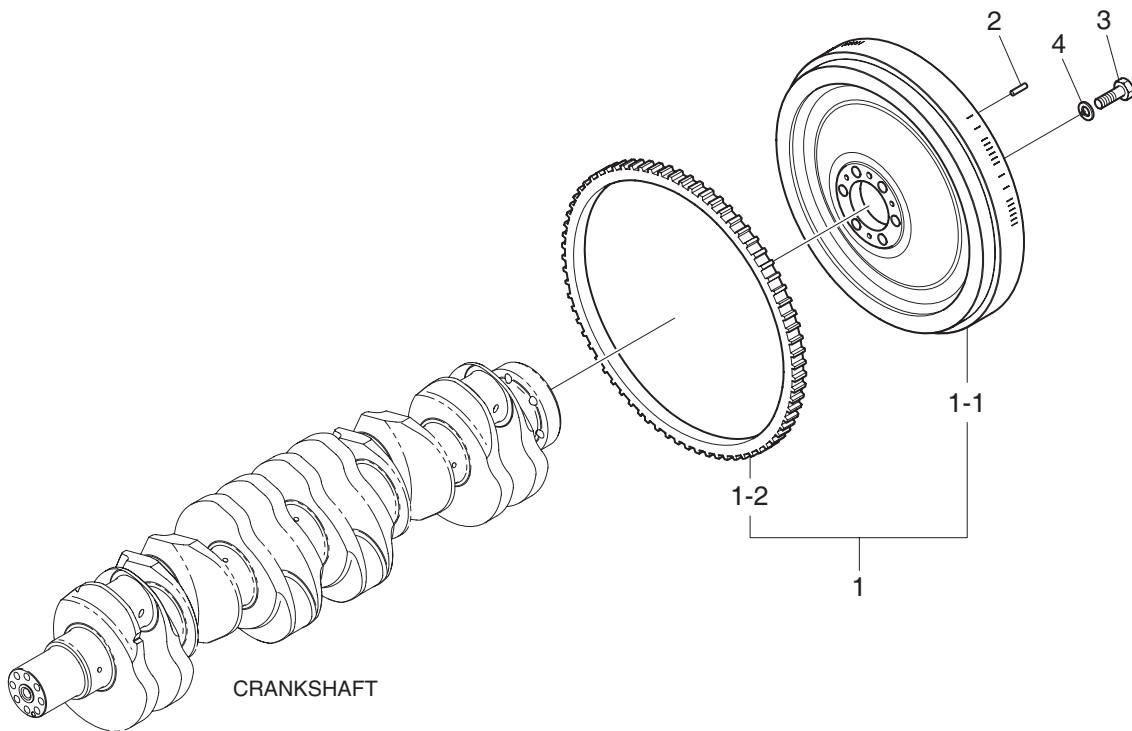


C023-DE08-004/121005

 Fig.0230 FLYWHEEL(3)

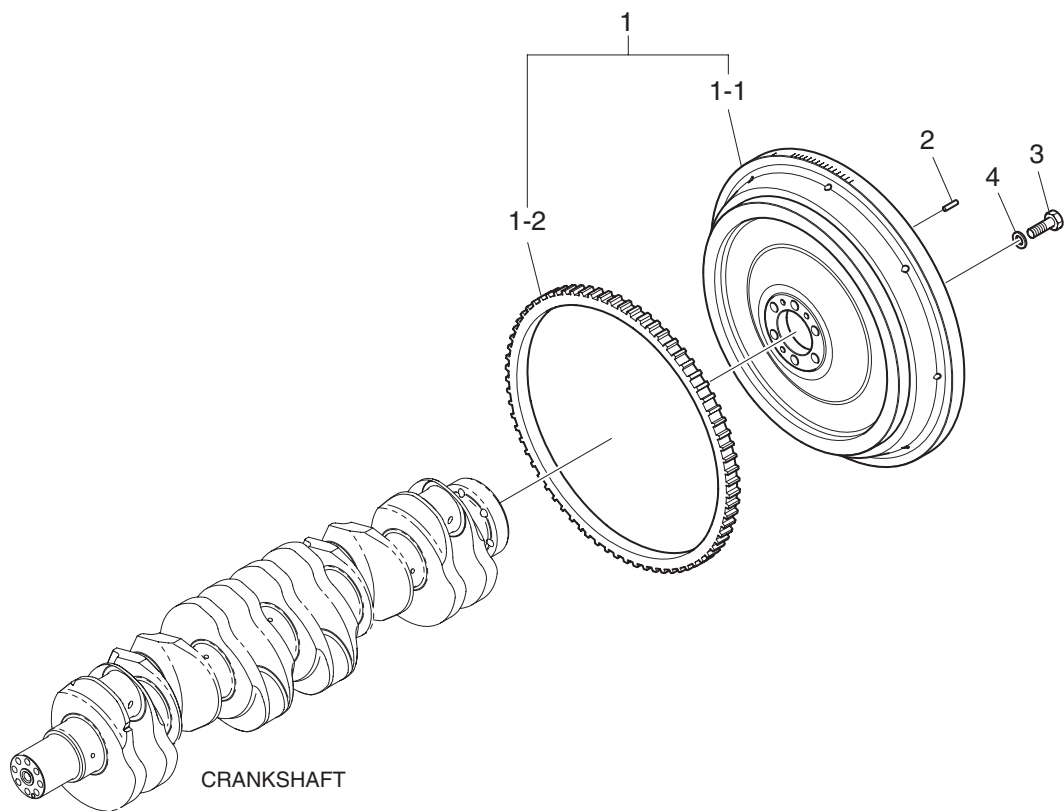


C023-DE08-014/121023

 Fig.0230 FLYWHEEL(4)

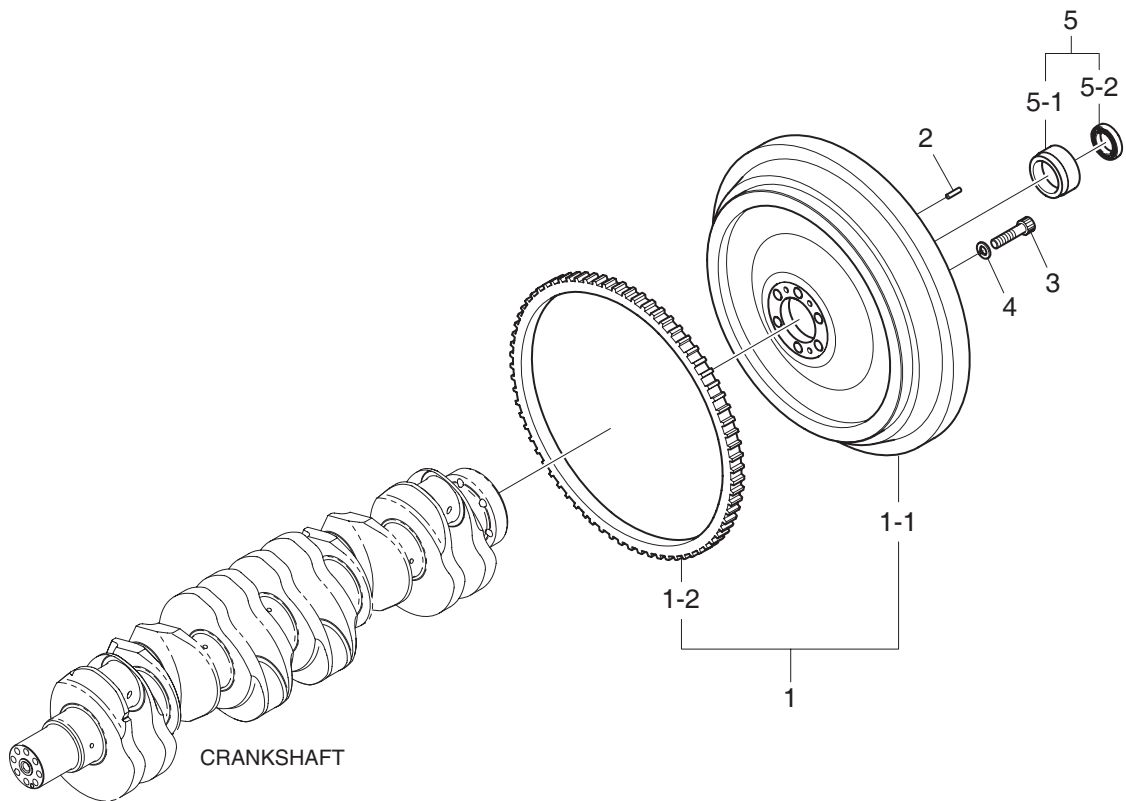


C023-DE08-015/121005

 Fig.0240 CONNECTING ROD(1)

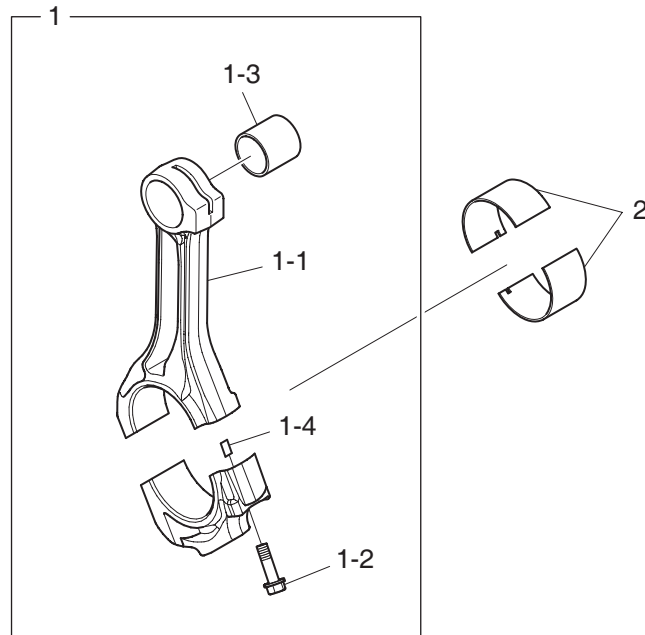


C024-DE08-001/121005

 Fig.0240 CONNECTING ROD(2)

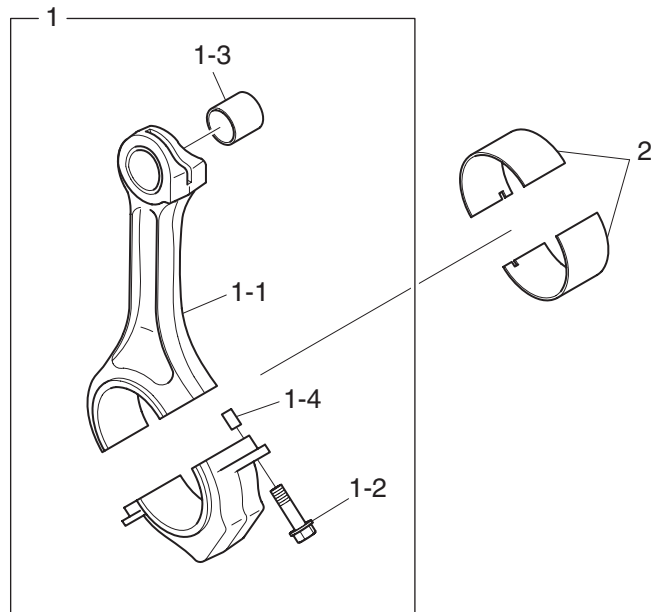


C024-DE08-004/121005

 Fig.0250 PISTON(1)

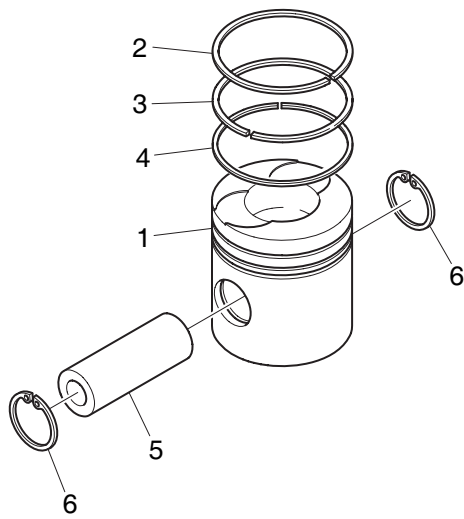

C025-DE08-001/121023

  
Fig.0250 PISTON(2)

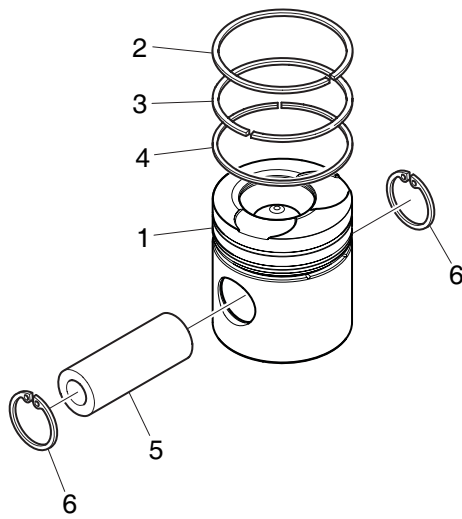

C025-DE08-002/121023

 


Fig.0250 PISTON(3)

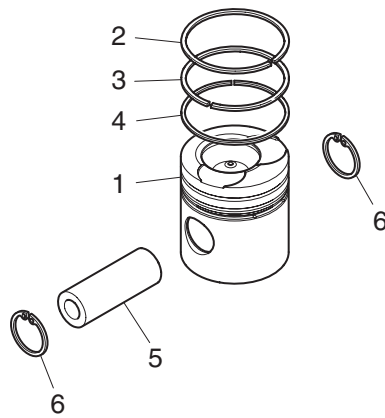


C025-DE08-003/121005

Fig.0250 PISTON(4)

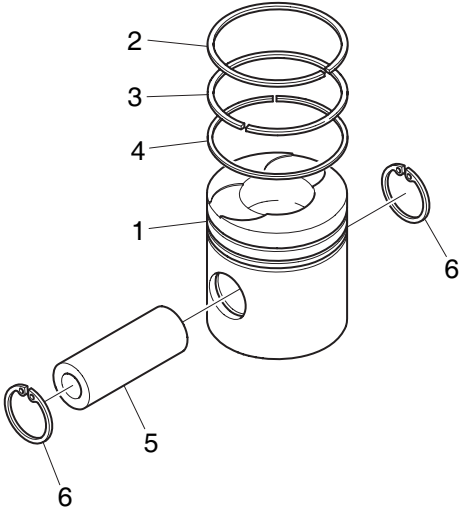


C025-DE08-004/121023

 Fig.0260 CRANKSHAFT PULLEY

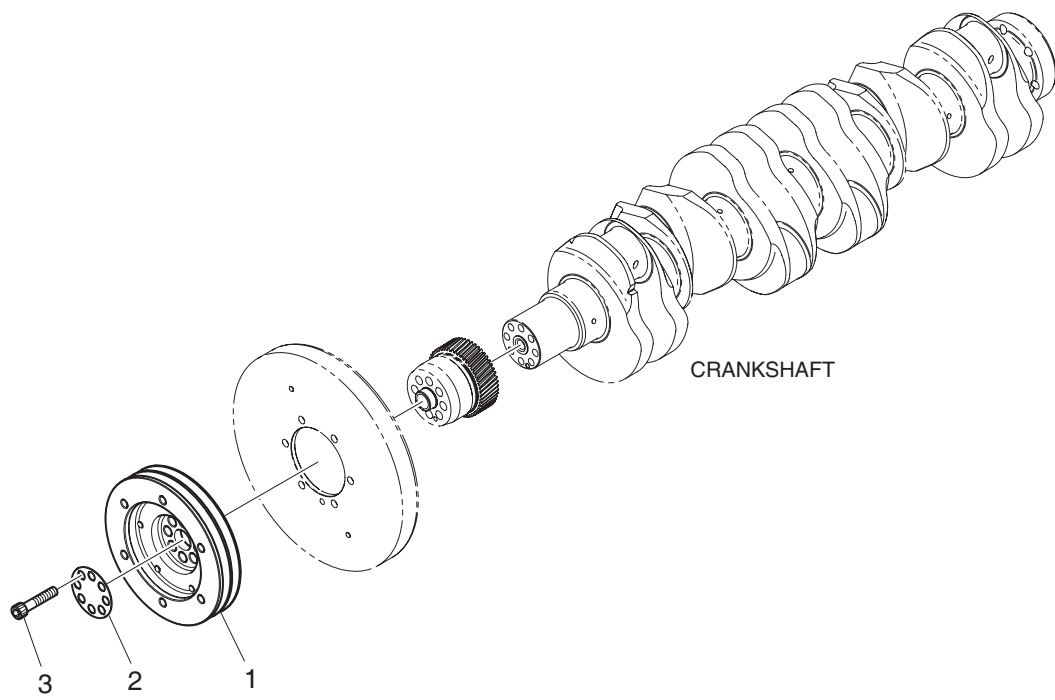


C026-DE08-002/121005

 Fig.0310 CYLINDER HEAD

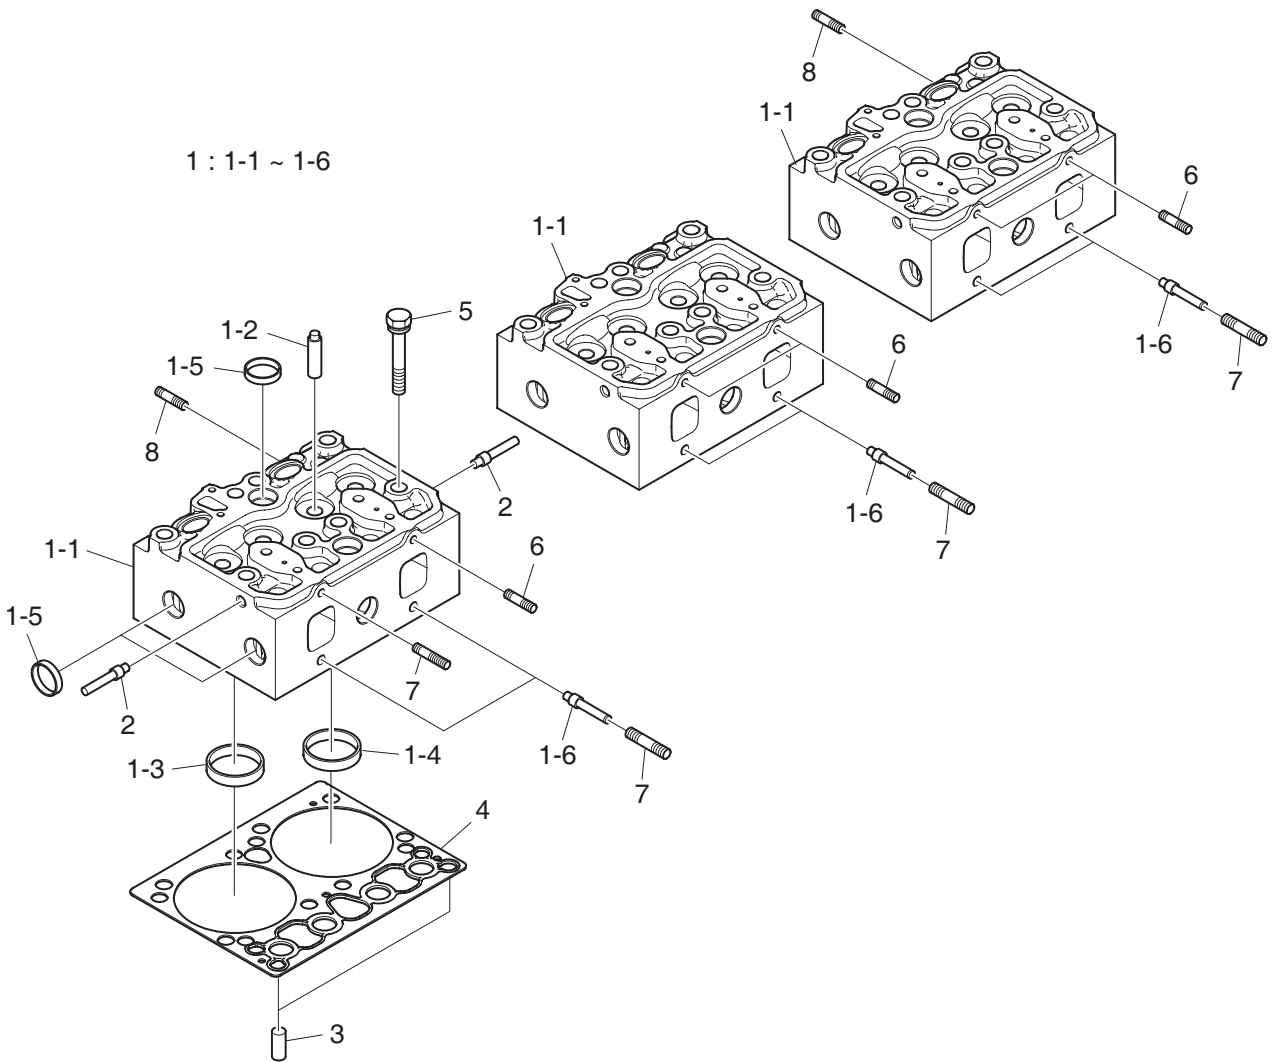


B031-DE08-001/121005

 Fig.0340 CYLINDER HEAD COVER

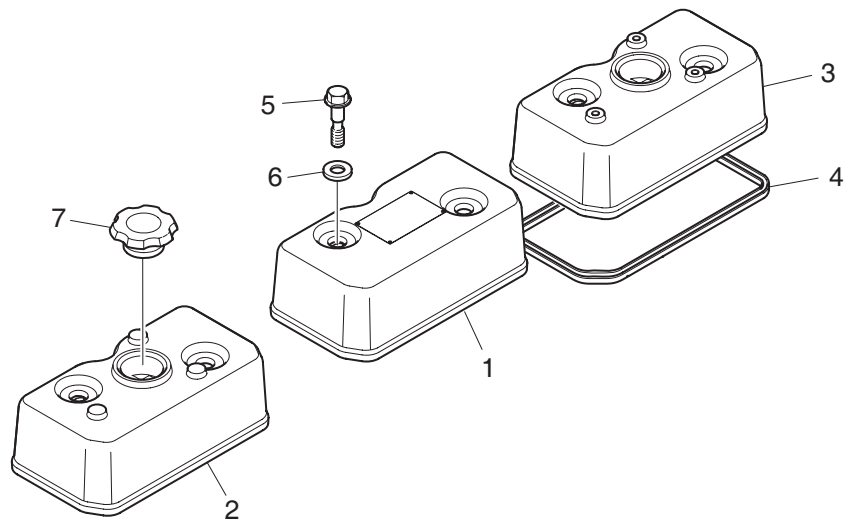


B034-DE08-003/121005

 Fig.0410 VALVE

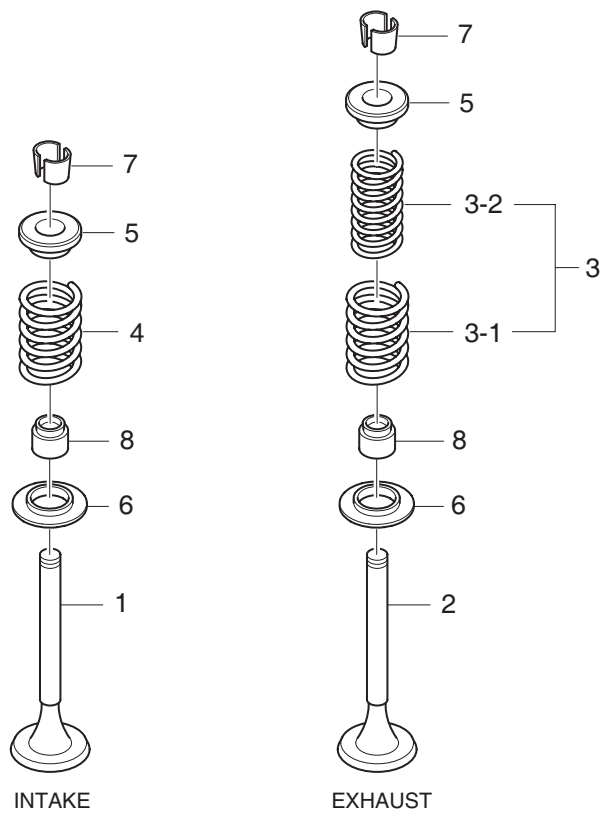


D041-DE08-001/121005

 Fig.0420 ROCKER ARM

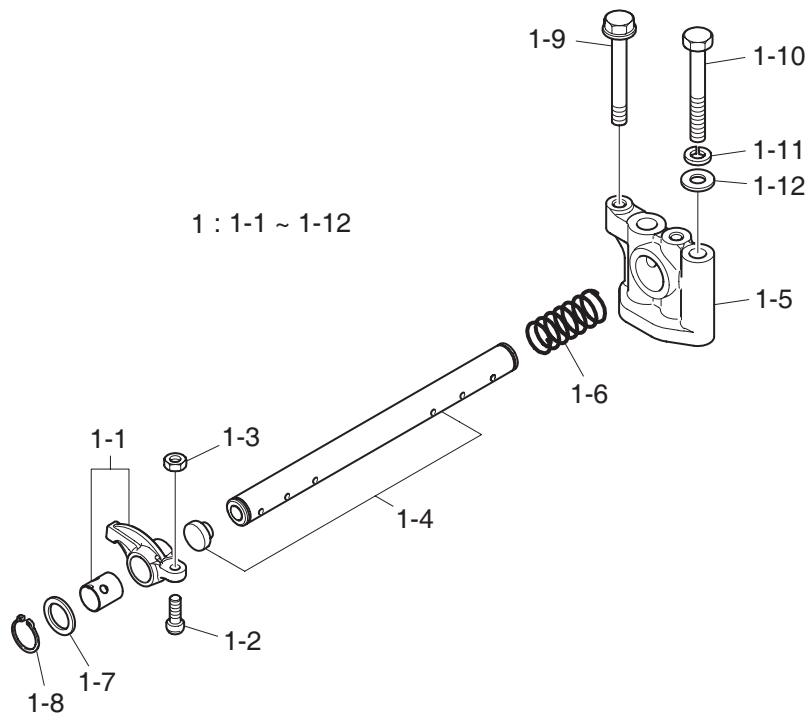

D042-DE08-001/121005

  
Fig.0430 TAPPET & PUSH ROD

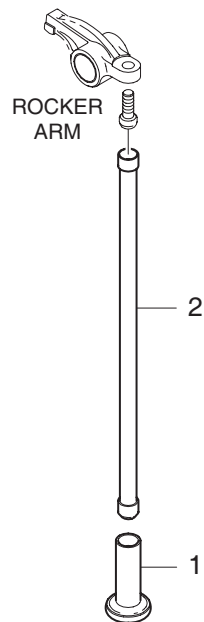

D043-DE08-001/121005

 


Fig.0440 CAMSHAFT

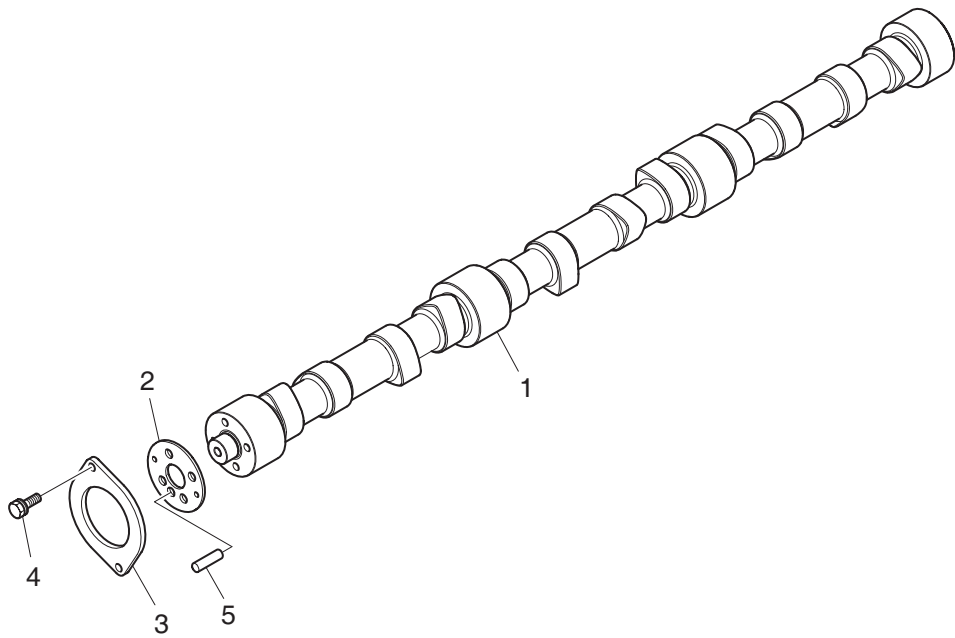


D044-DE08-001/121005

Fig.0450 CAMSHAFT DRIVE

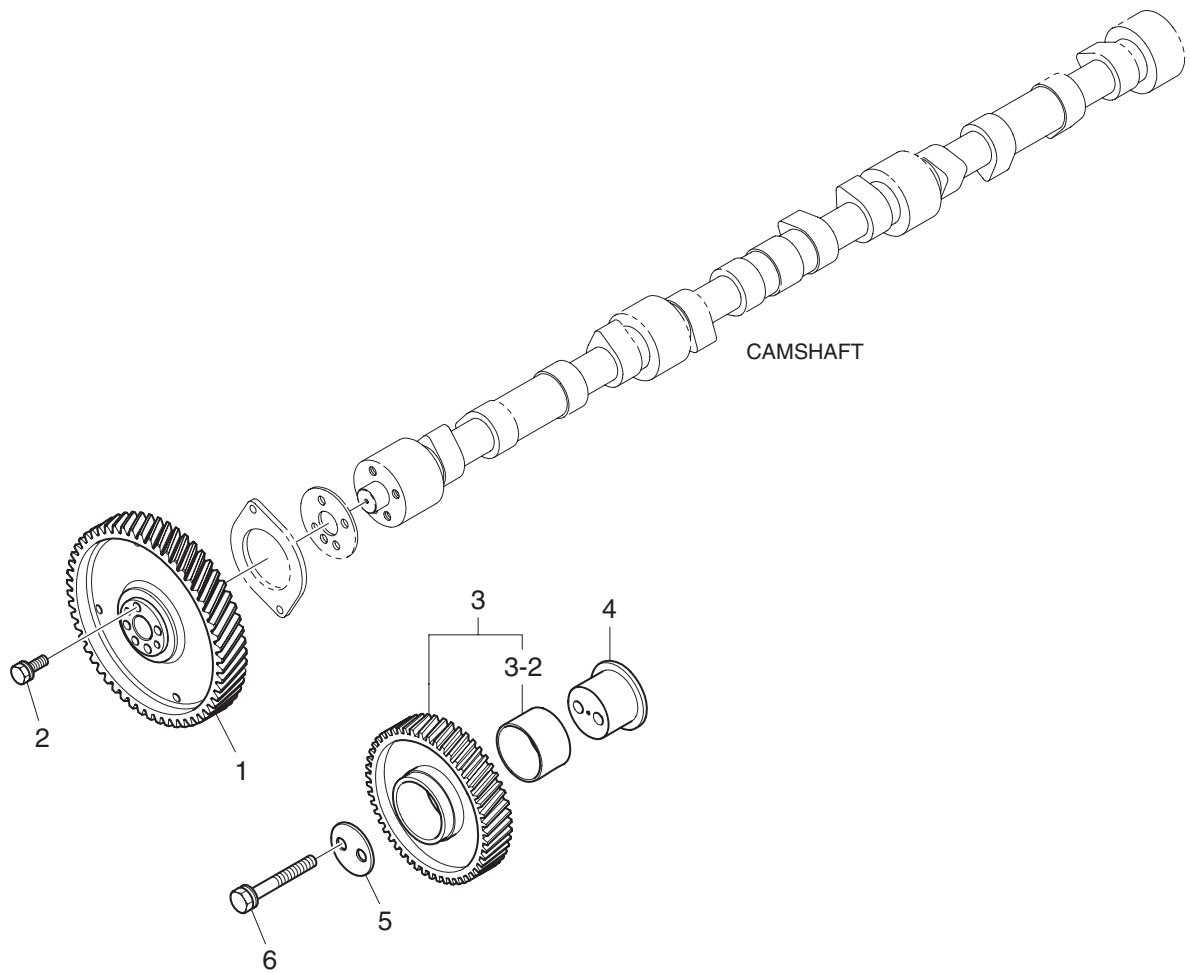


D045-DE08-001/121005

 Fig.0510 OIL PUMP

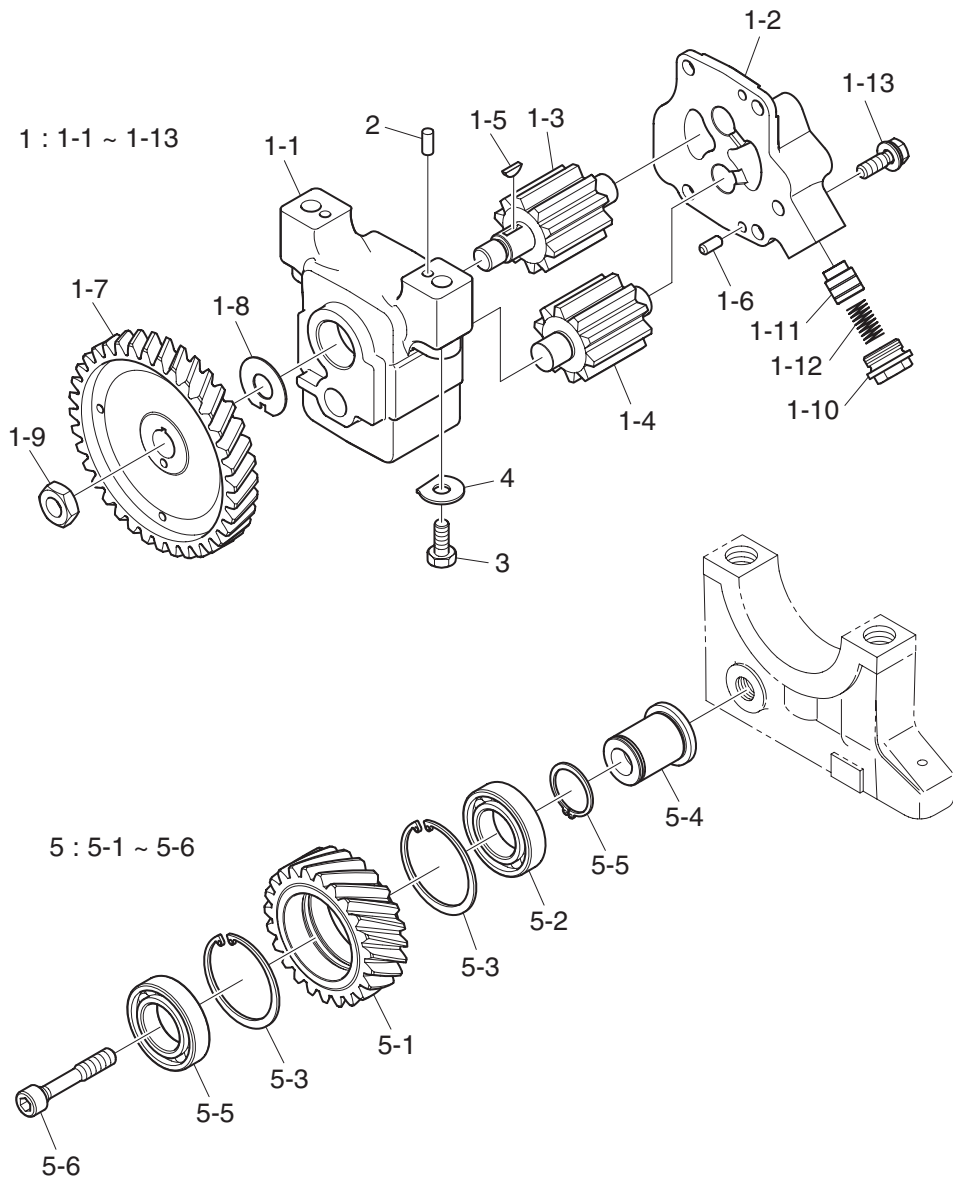


J051-DE08-001/121005

 Fig.0550 OIL FILTER

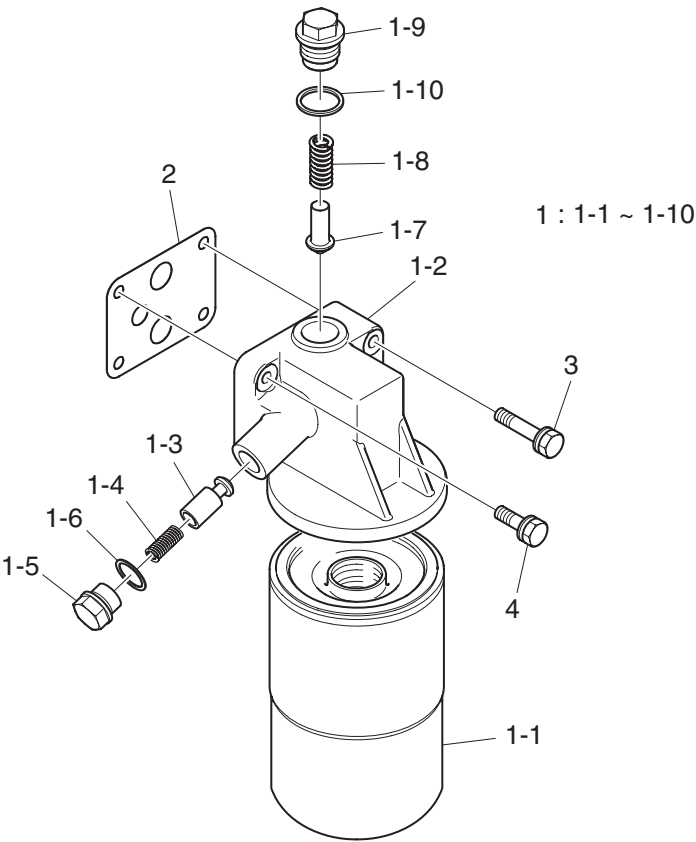


J055-DE08-003/121005

 Fig.0560 OIL COOLER(1)

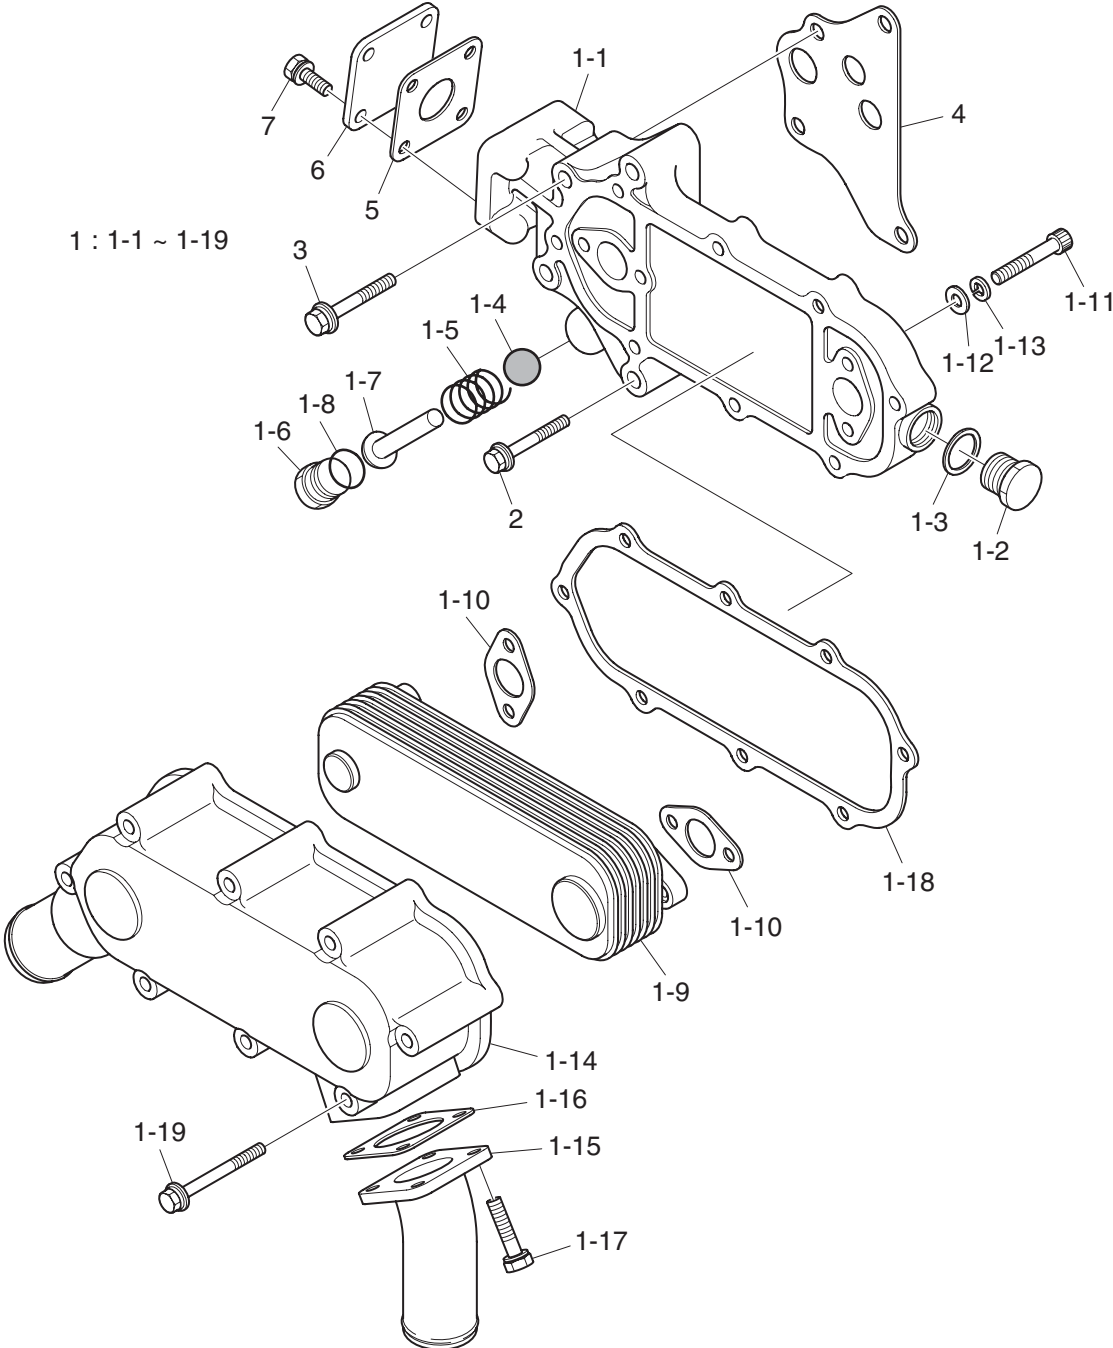


J056-DE08-002/121023

 Fig.0560 OIL COOLER(2)

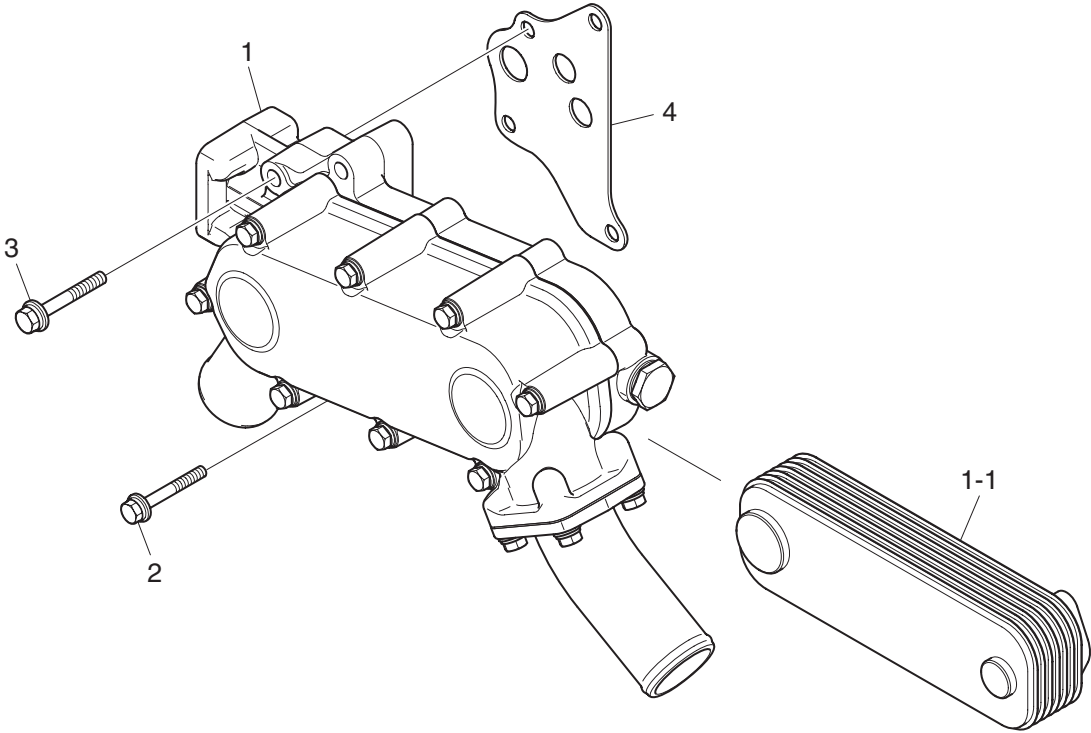


J056-DE08-007/121005

 Fig.0580 OIL PAN

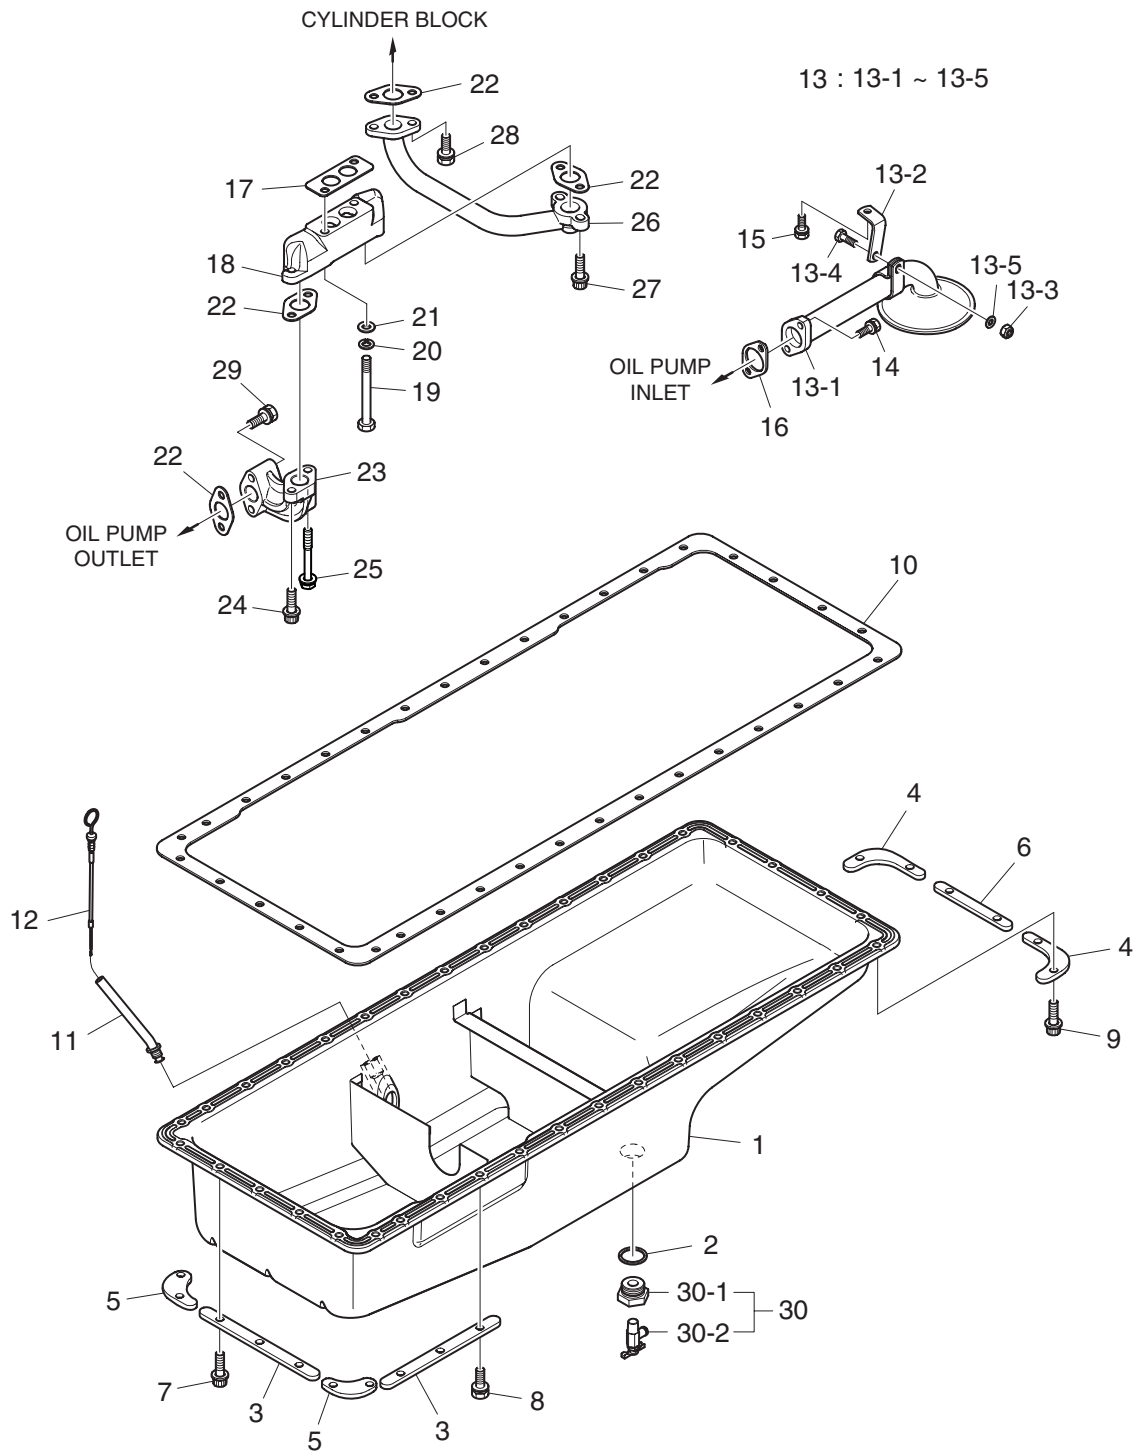

B058-DE08-002/121005

  
Fig.0630 COOLING WATER PIPE(1)

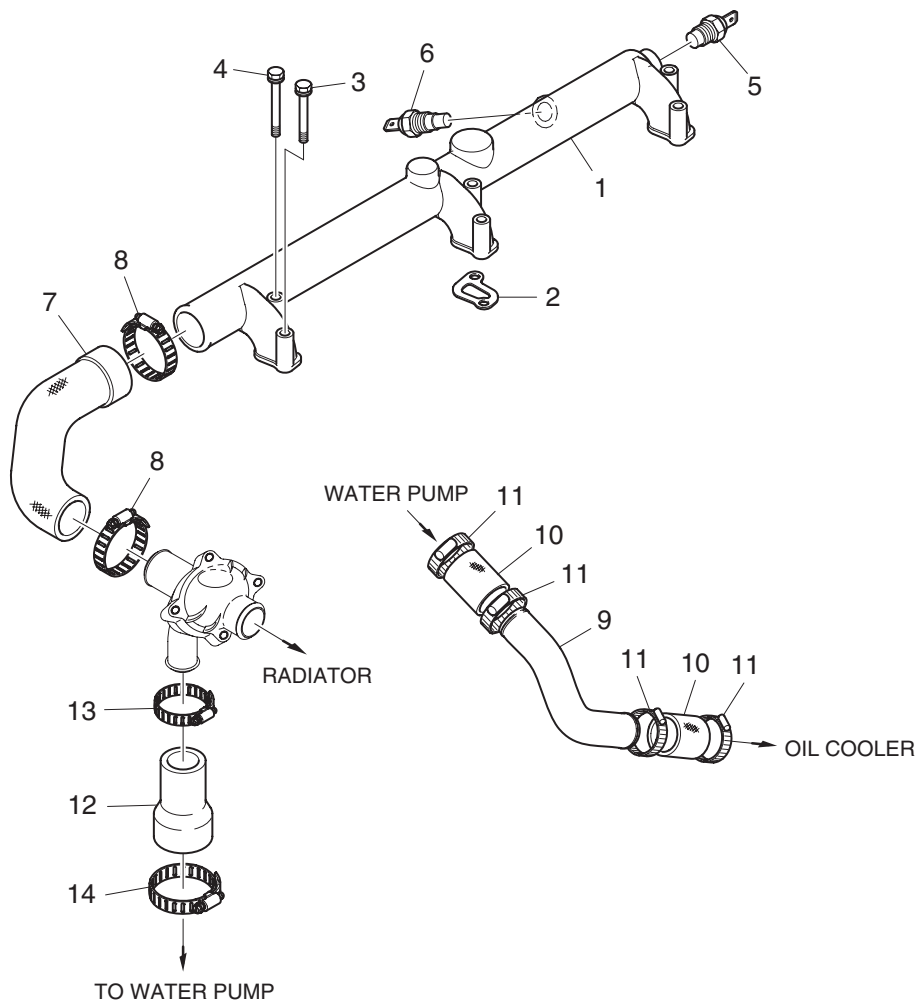

K063-DE08-007/121023

 


Fig.0630 COOLING WATER PIPE(2)

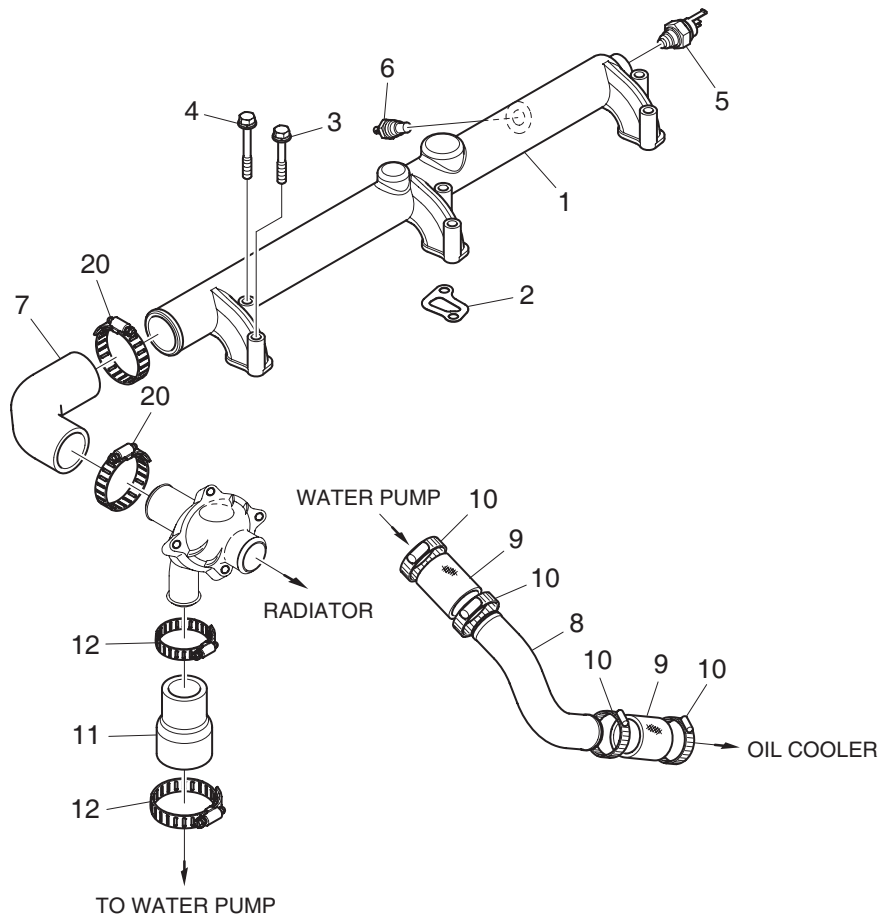


K063-DE08-015/121005

Fig.0630 COOLING WATER PIPE(3)

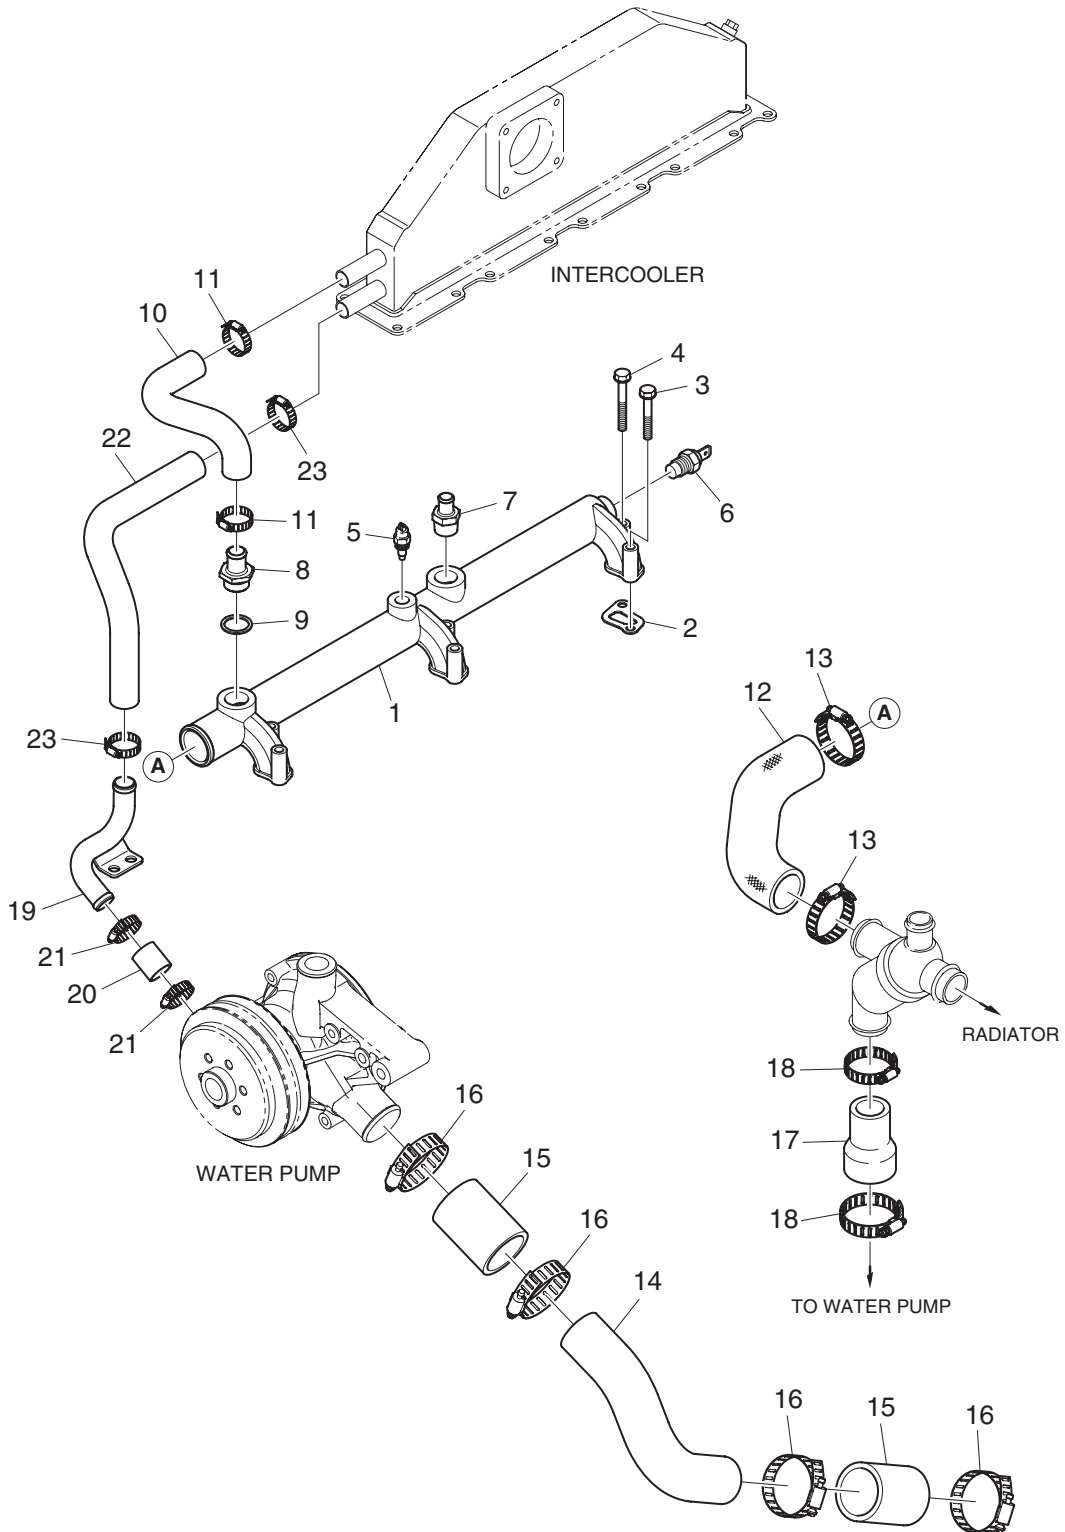


K063-DE08-017/121023

 Fig.0640 THERMOSTAT(1)

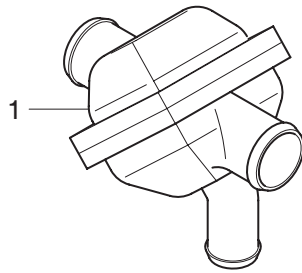


K064-DE08-002/121023

 Fig.0640 THERMOSTAT(2)

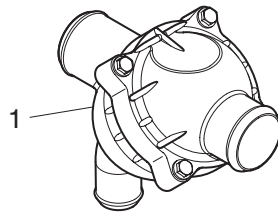


K064-DE08-006/121005

 Fig.0650 WATER PUMP(1)

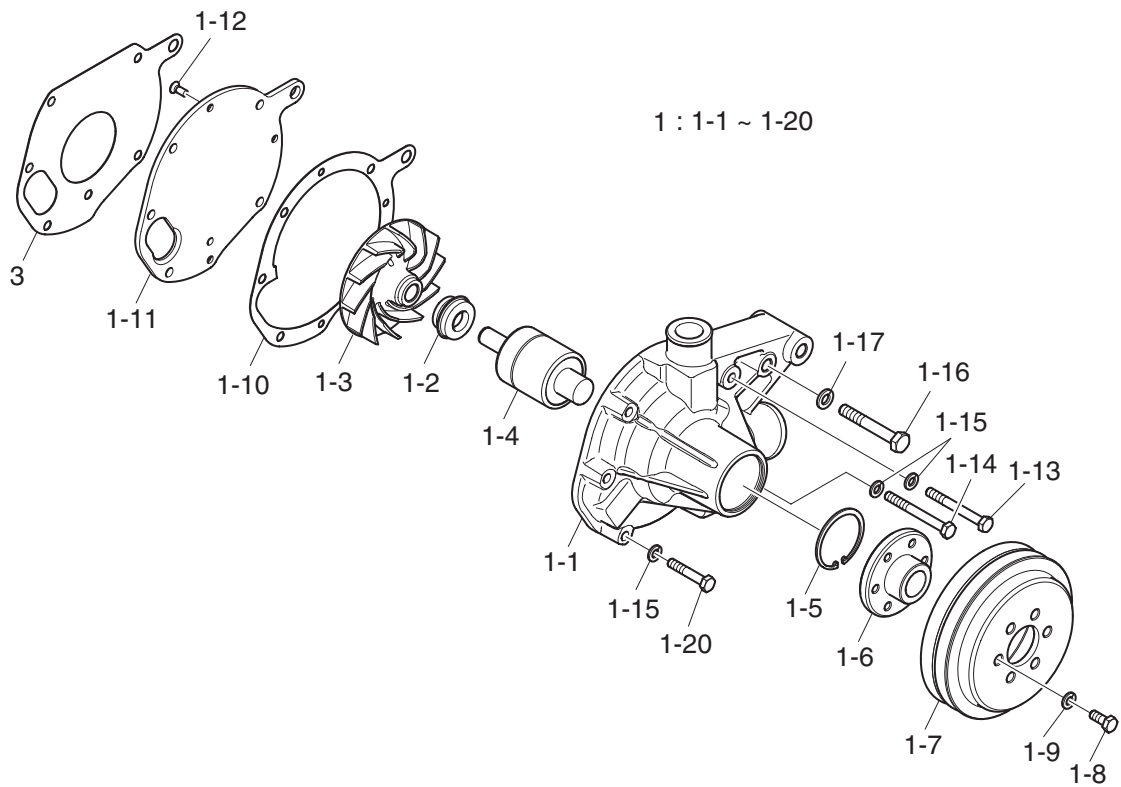


K065-DE08-002/121005

 Fig.0650 WATER PUMP(2)

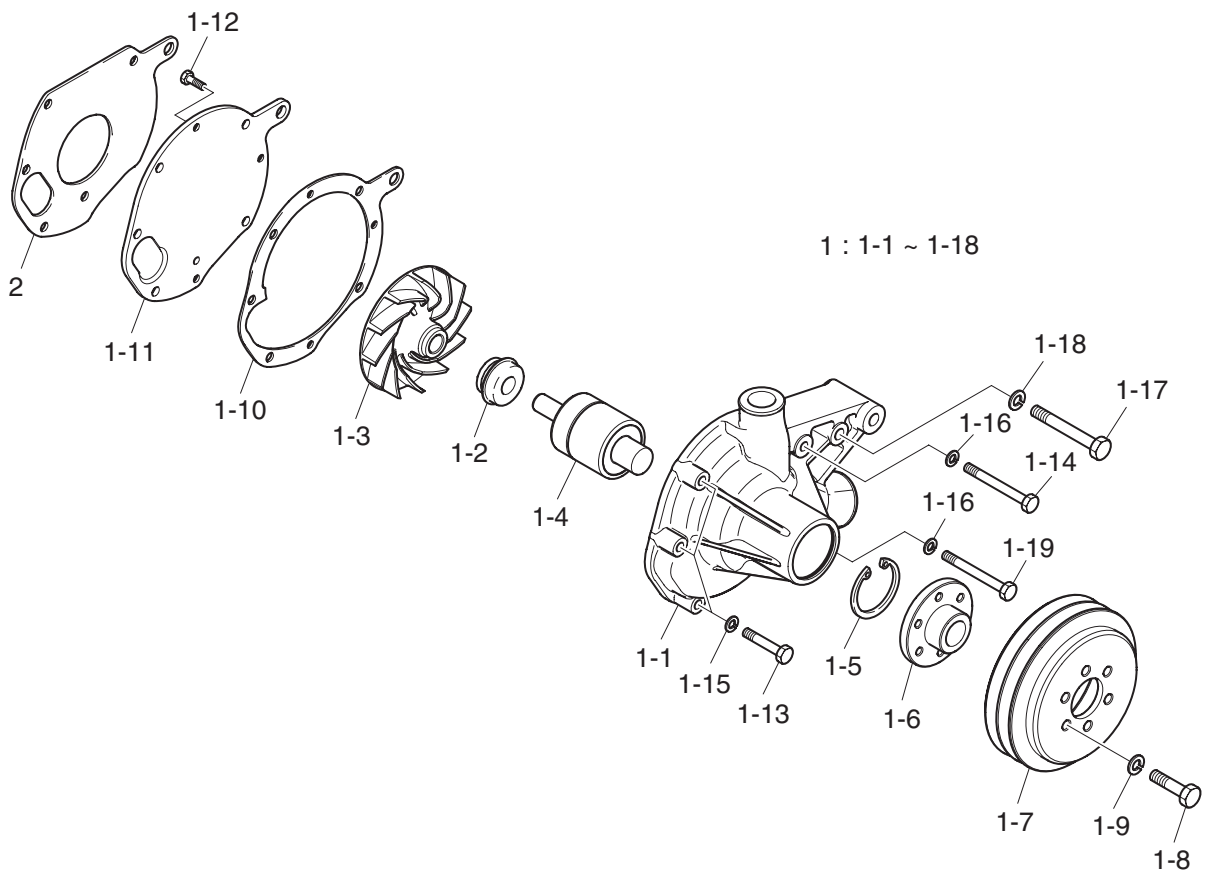


K065-DE08-008/121023

 Fig.0660 COOLING FAN(1)

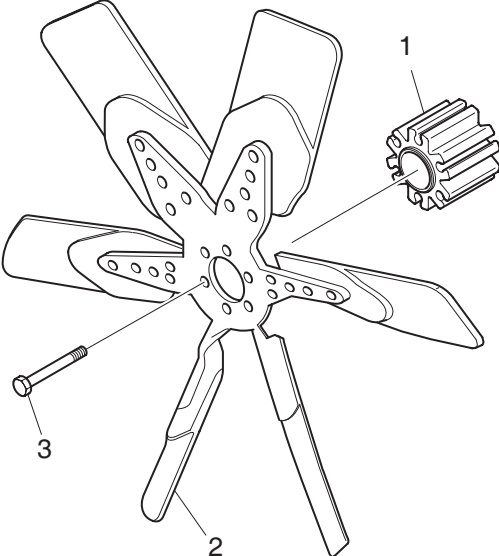

K066-DE08-002/121023

  
Fig.0660 COOLING FAN(2)

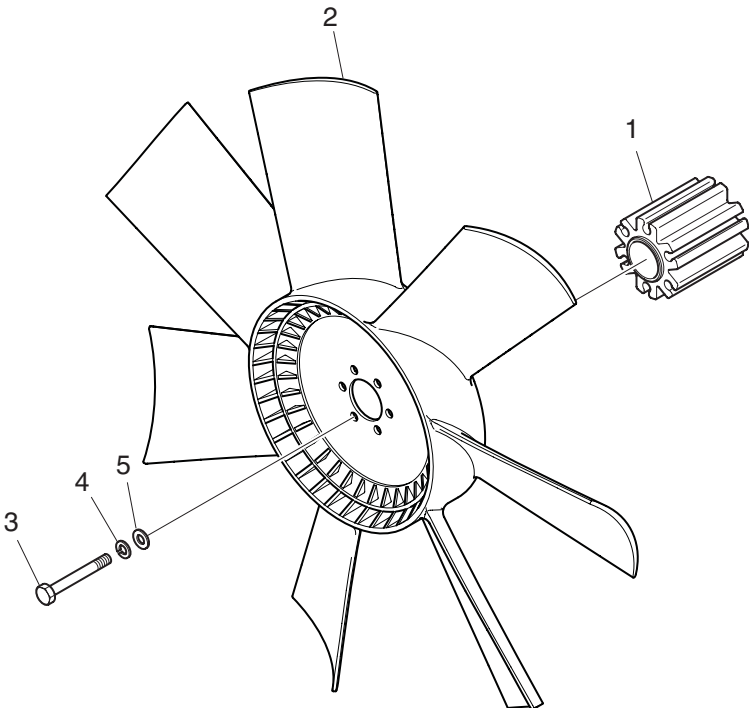

K066-DE08-009/121023

 


Fig.0810 EXHAUST MANIFOLD(1)

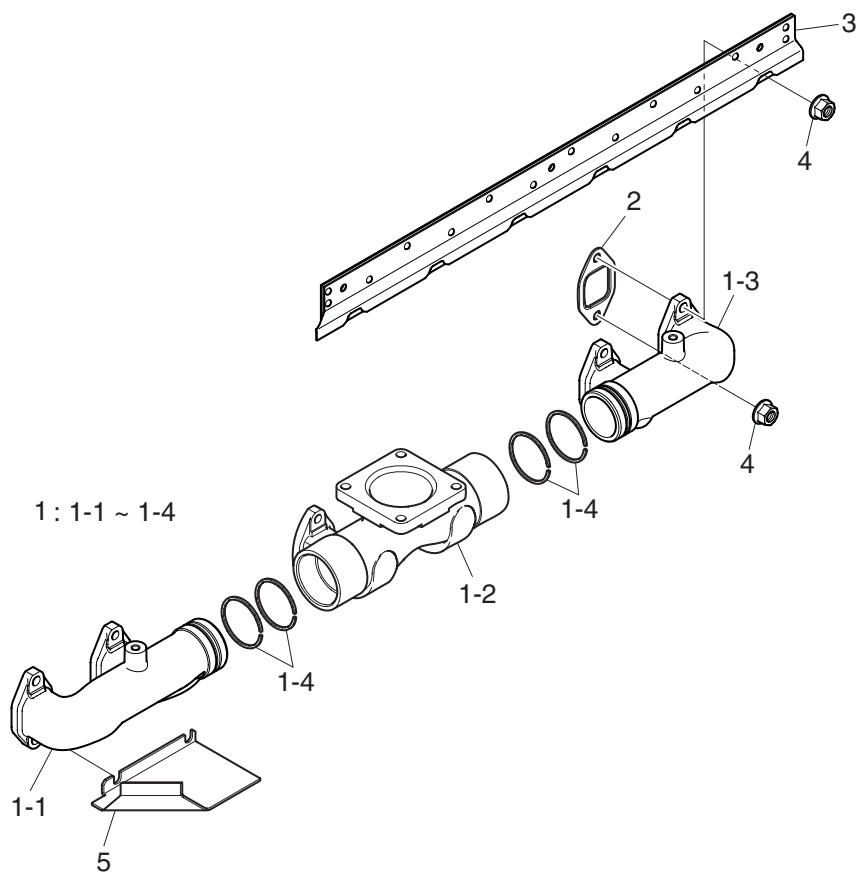


H081-DE08-004/121023

Fig.0810 EXHAUST MANIFOLD(2)

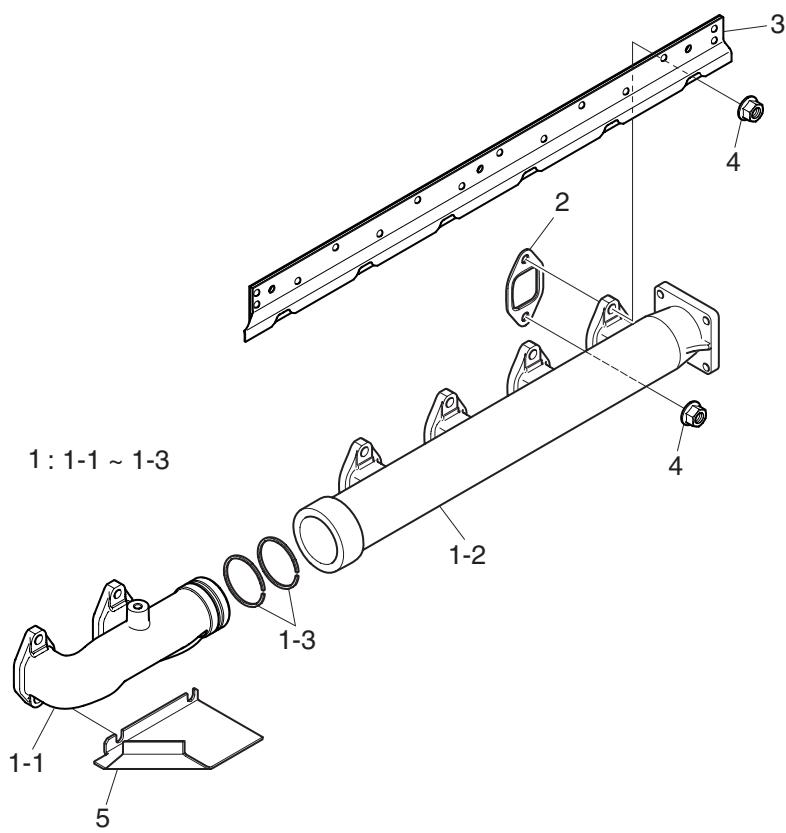


H081-DE08-005/121023

 Fig.0810 EXHAUST MANIFOLD(3)

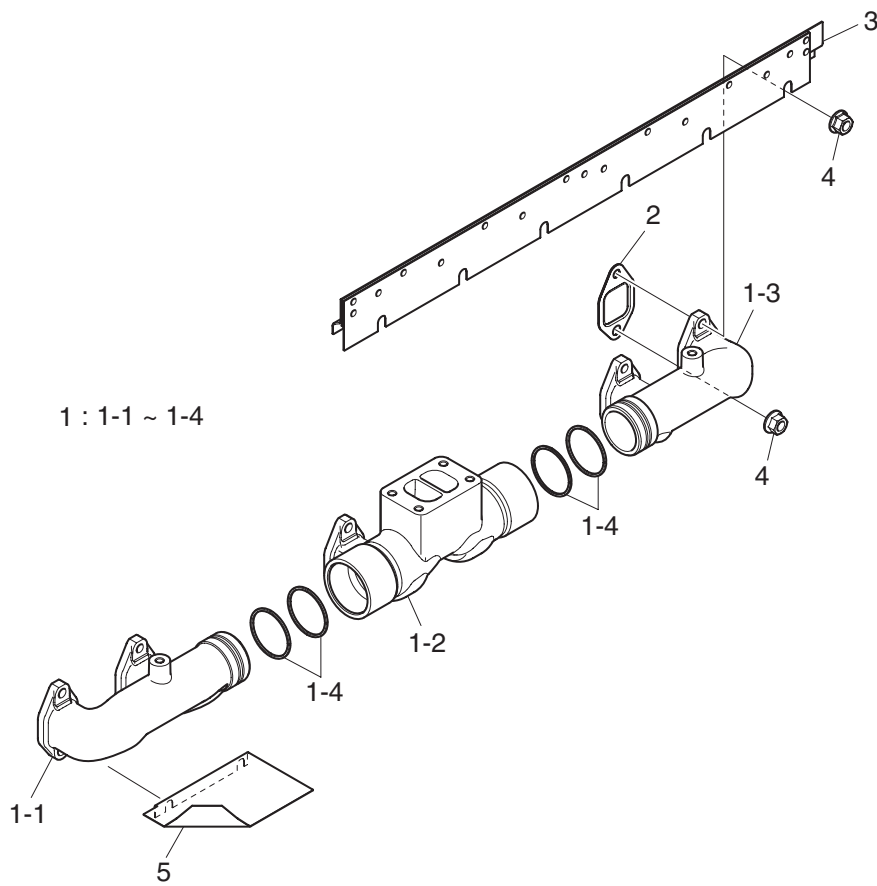


H081-DE08-006/121005

 Fig.0820 INTAKE MANIFOLD(1)

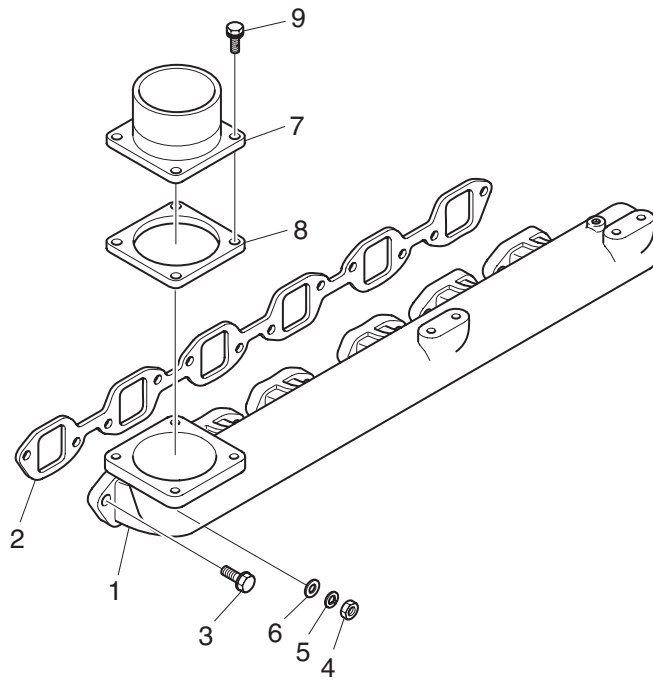


H082-DE08-004/121023

 Fig.0820 INTAKE MANIFOLD(2)

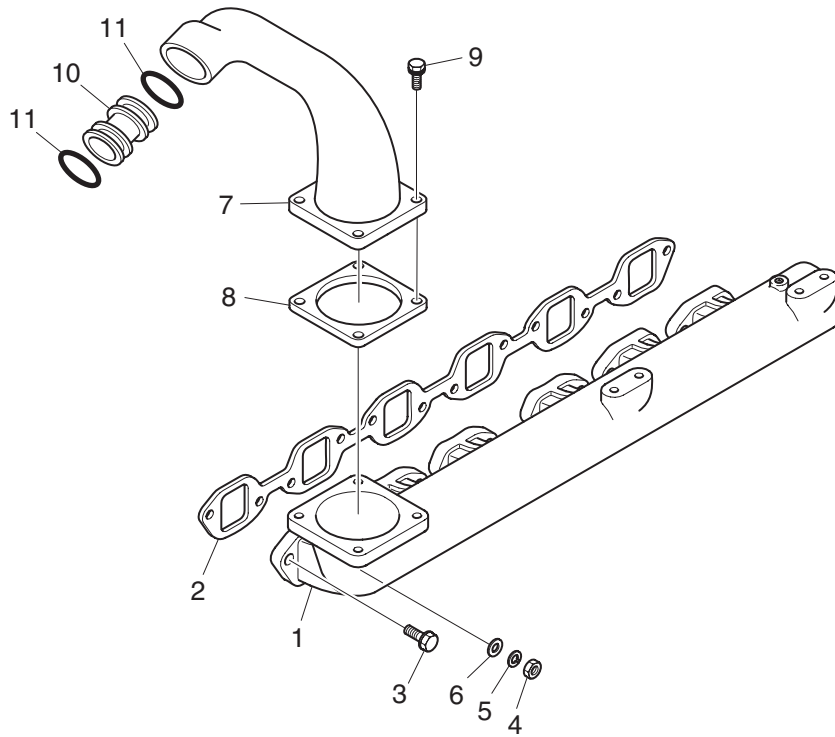


H082-DE08-006/121023

 Fig.0820 INTAKE MANIFOLD(3)

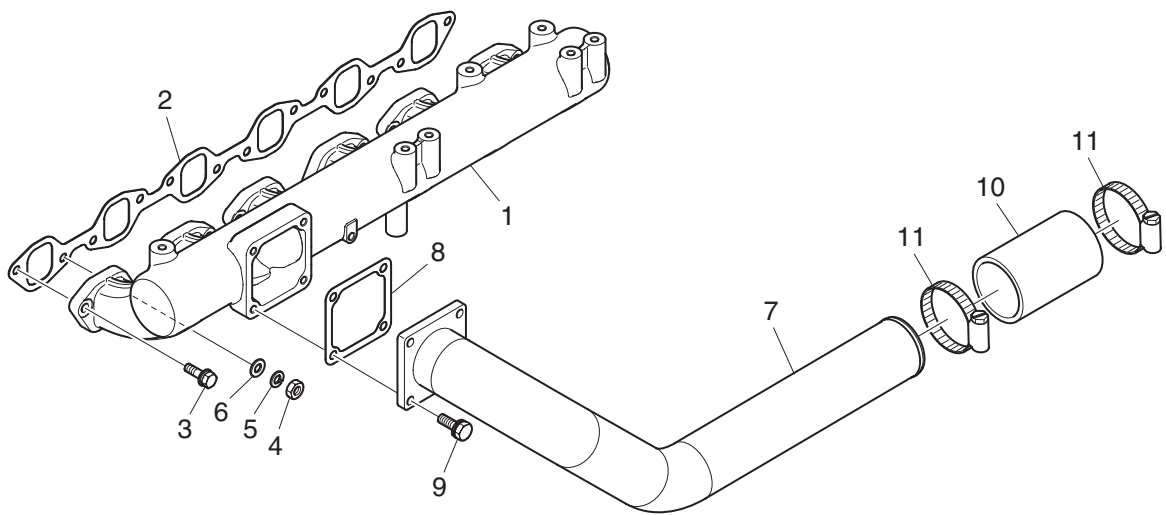


H082-DE08-017/121005

 Fig.0820 INTAKE MANIFOLD(4)

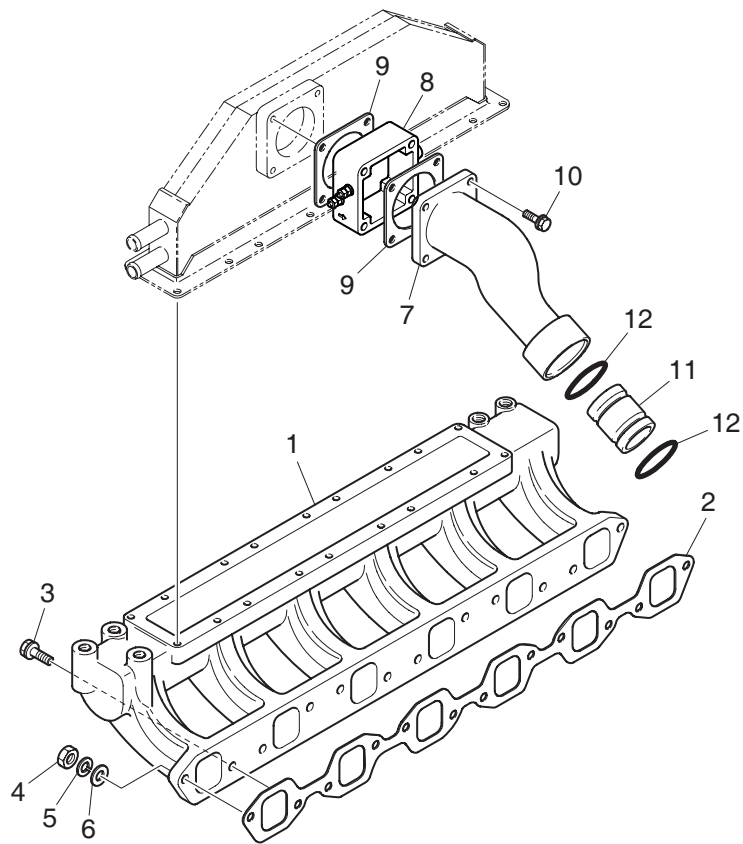

H082-DE08-018/121023

 Fig.0910 TURBOCHARGER(1)

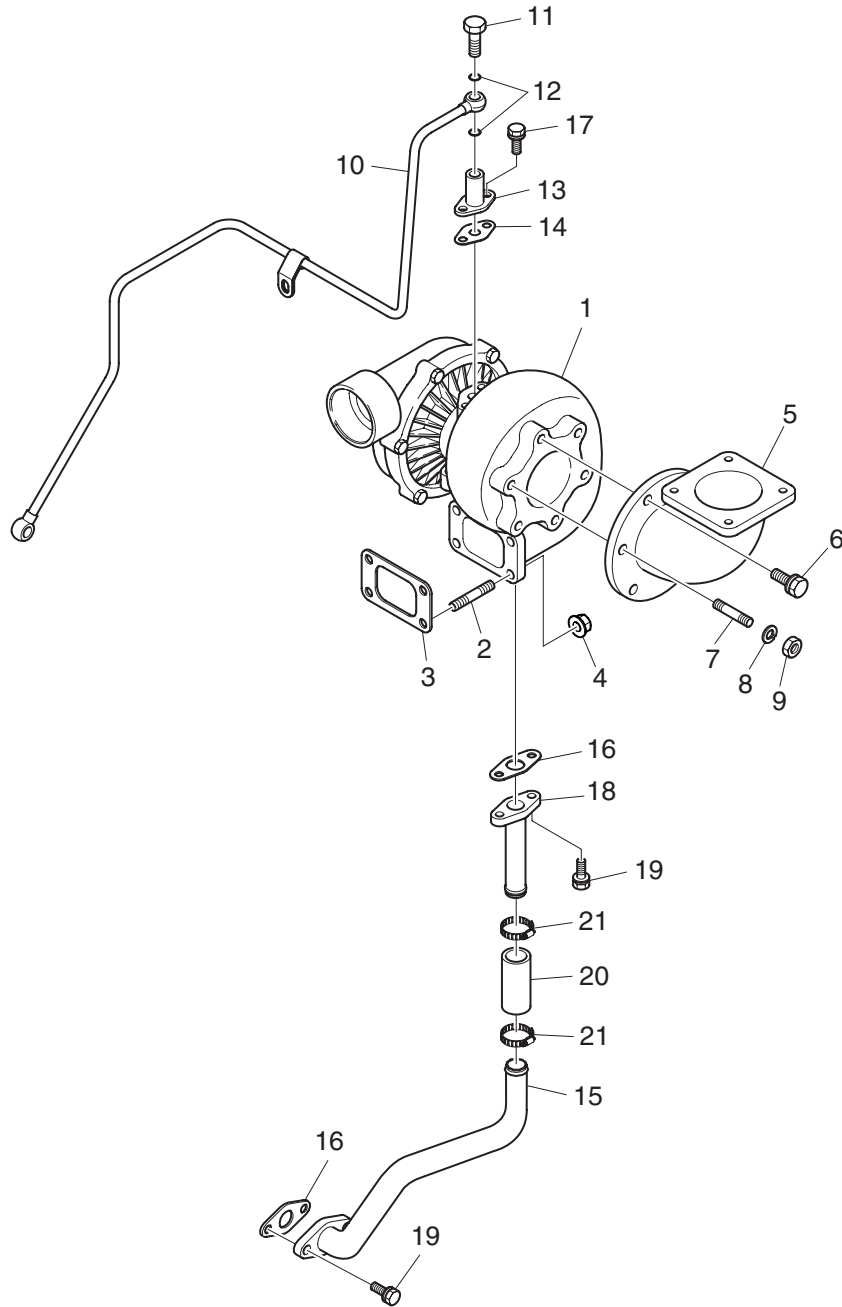


H091-DE08-002/121023

 

 


Fig.0910 TURBOCHARGER(3)

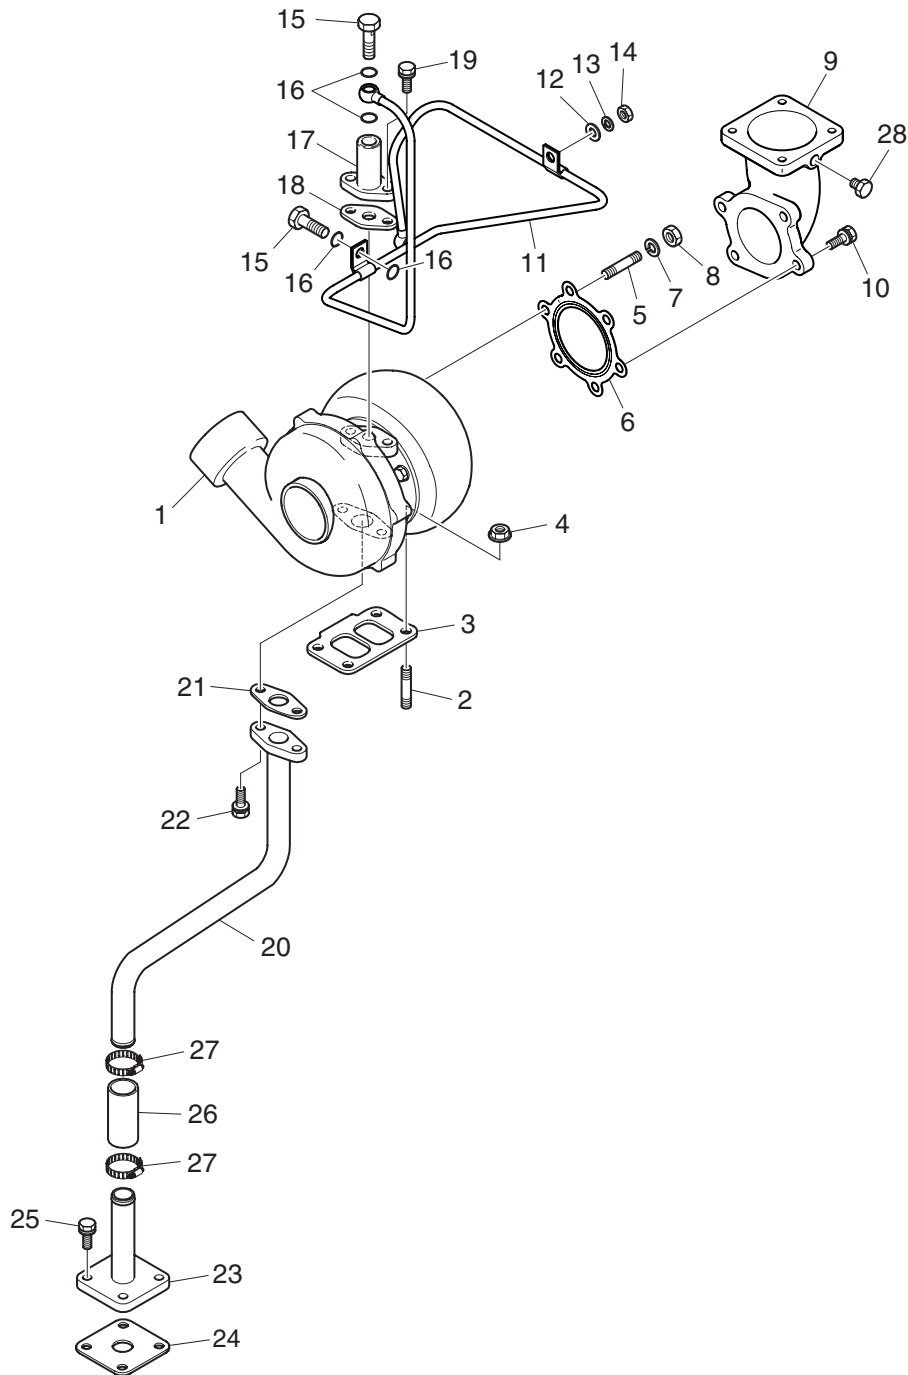


 
H091-DE08-007/121023

 Fig.0940 INTAKE STAKE(1)

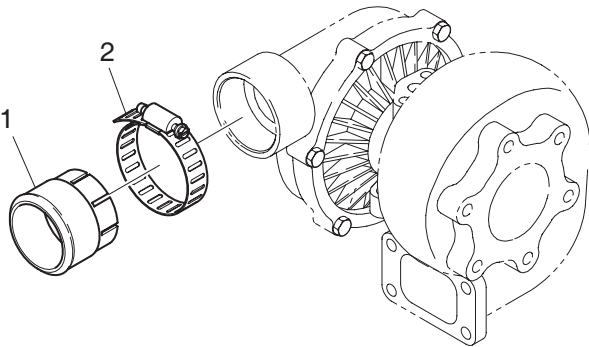


 
TURBOCHARGER

 Fig.0940 INTAKE STAKE(2)

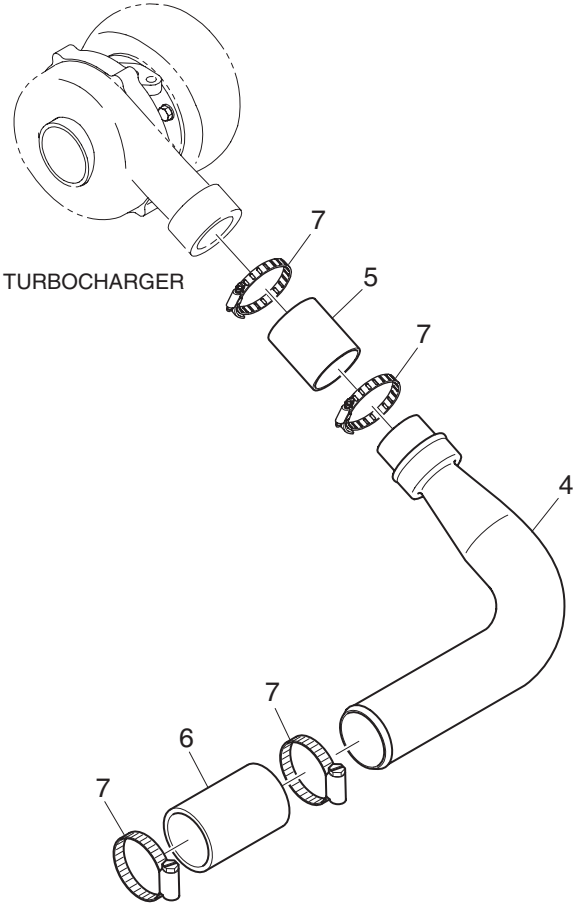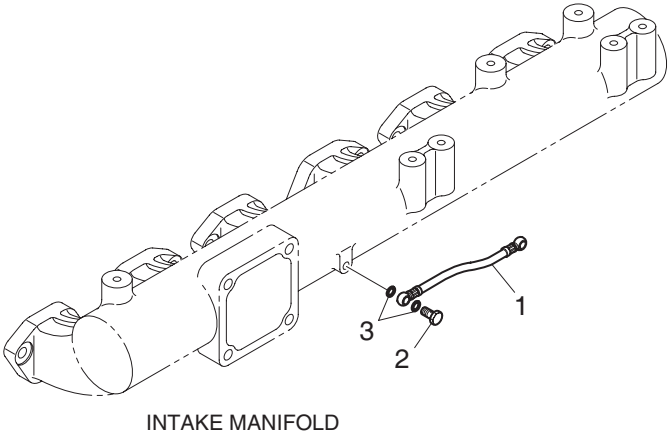


 
H094-DE08-006/121023

 Fig.0940 INTAKE STAKE(3)

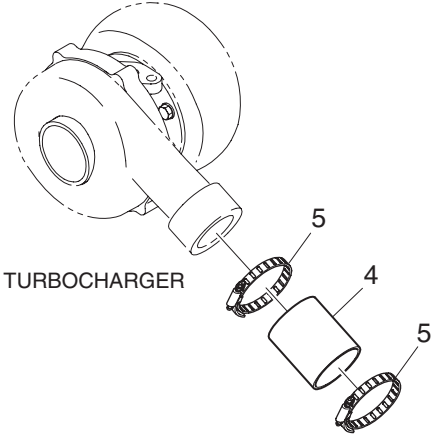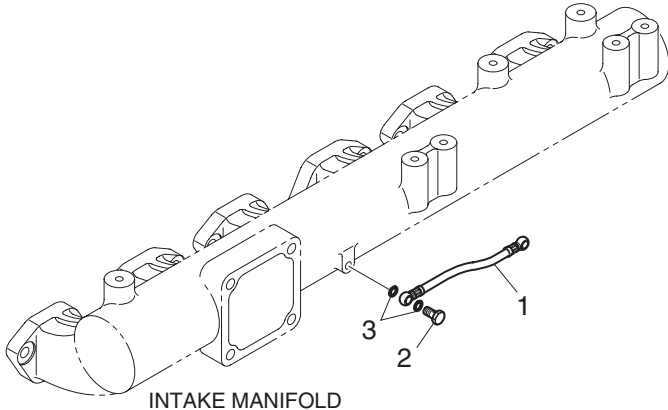


H094-DE08-007/121023

Fig.0940 INTAKE STAKE(4)

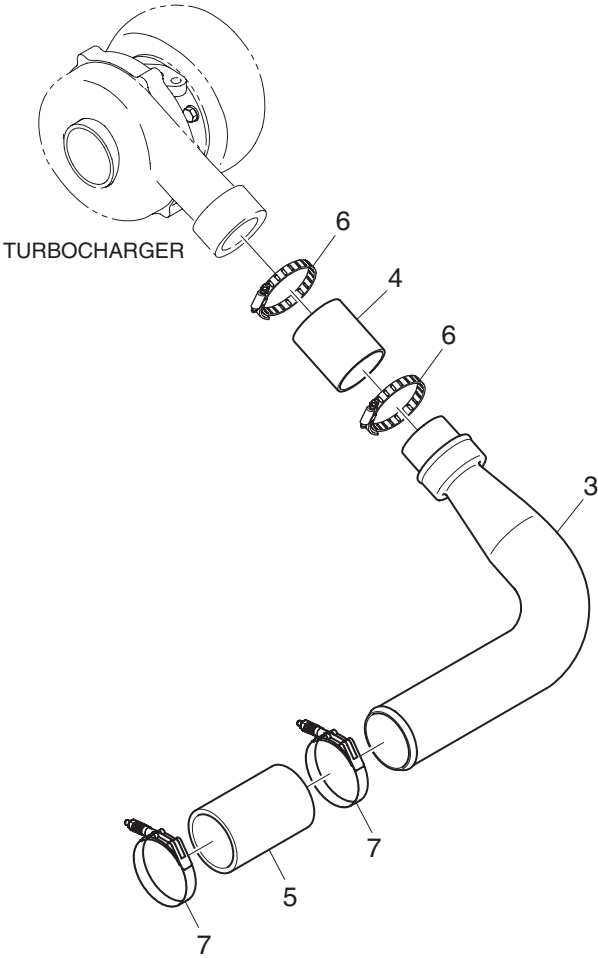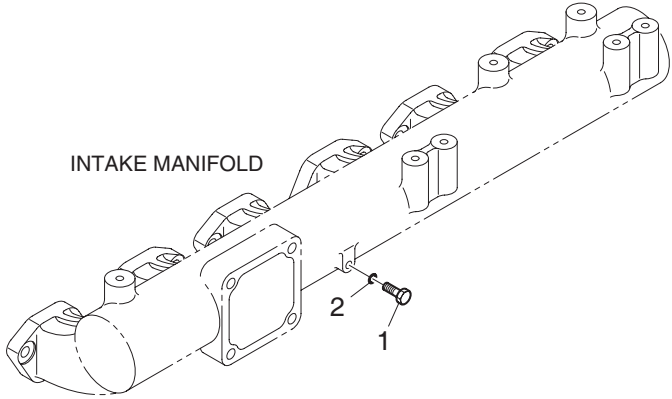


H094-DE08-009/121005

 Fig.0950 INTERCOOLER

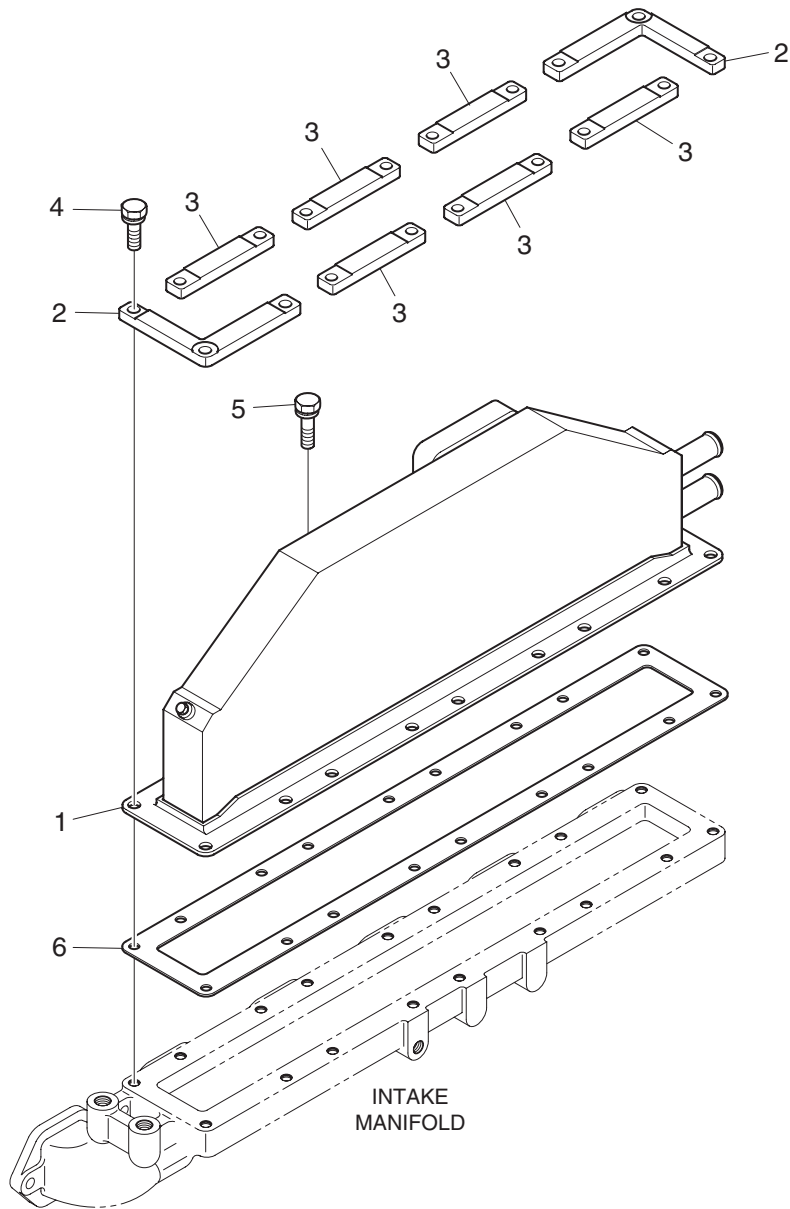

H095-DE08-001/121023

  
Fig.1010 INJECTION NOZZLE(1)

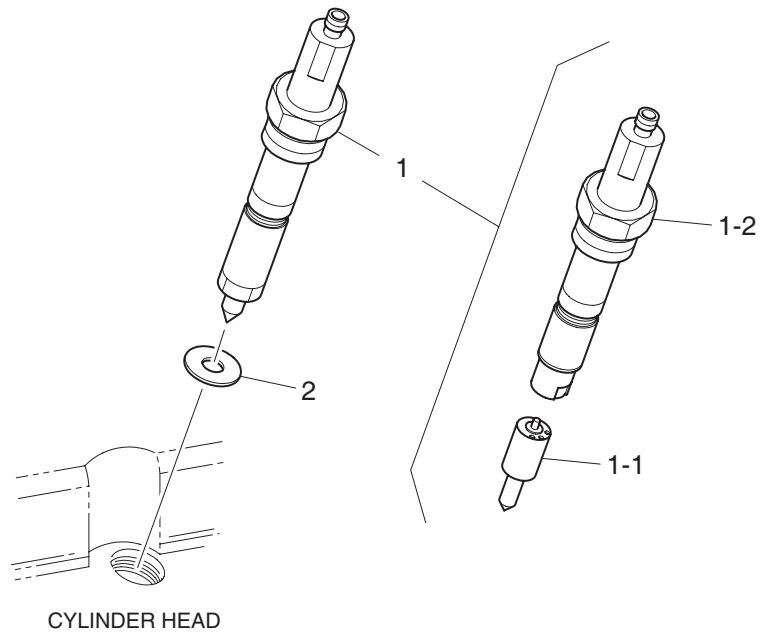

L101-DE08-001/121023

 


Fig.1010 INJECTION NOZZLE(2)

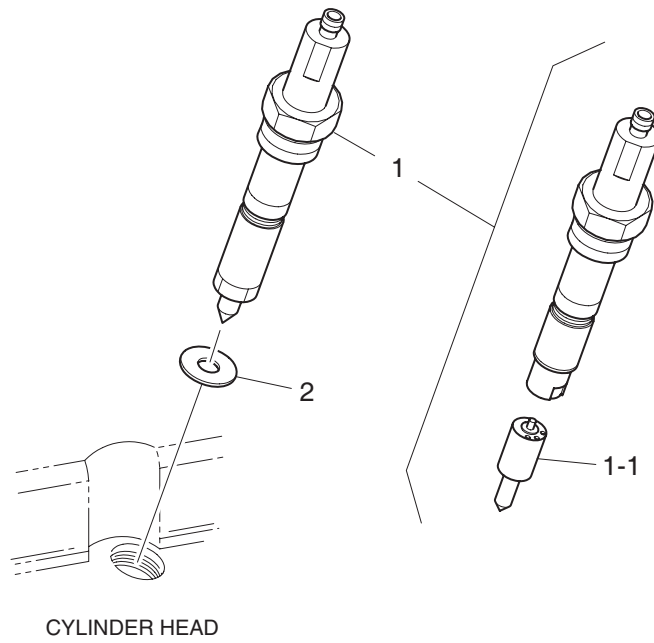


L101-DE08-002/121023

Fig.1010 INJECTION NOZZLE(3)

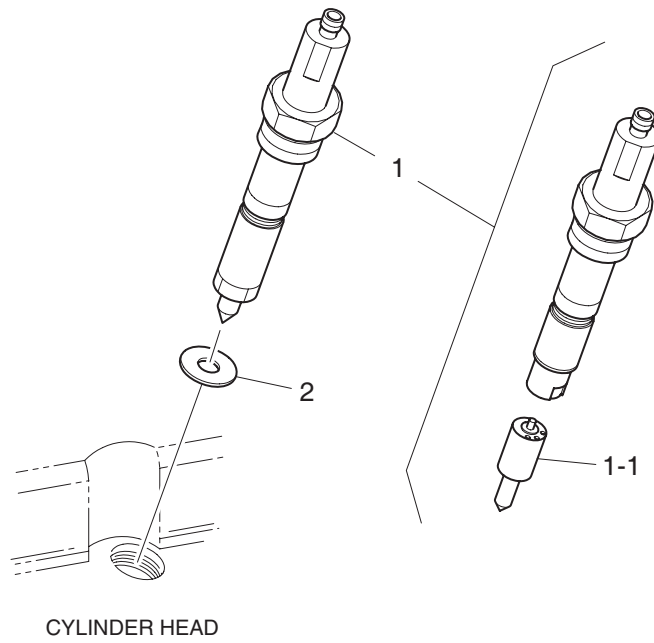


L101-DE08-005/121023

 Fig.1010 INJECTION NOZZLE(4)

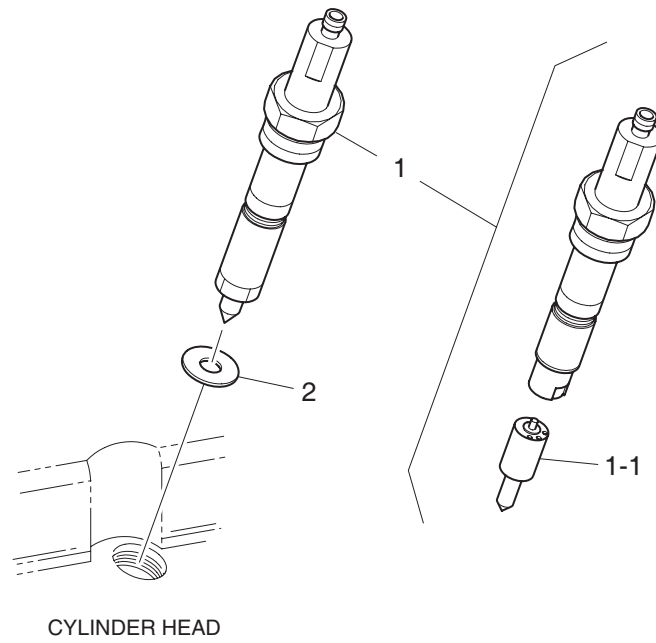


L101-DE08-007/121023

 Fig.1010 INJECTION NOZZLE(5)

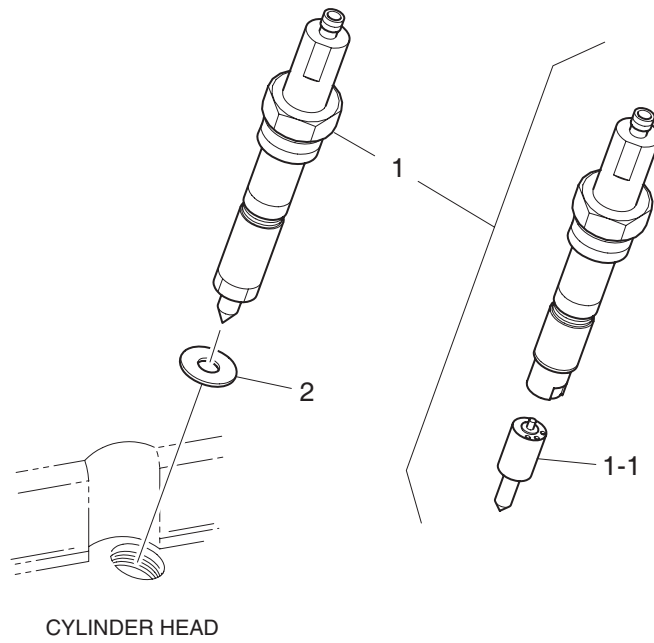


L101-DE08-008/121023

 Fig.1010 INJECTION NOZZLE(6)

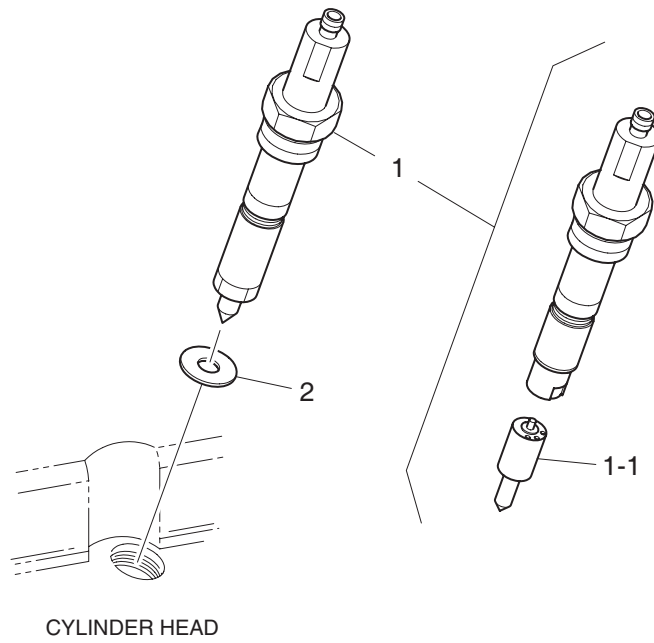


L101-DE08-009/121023

 Fig.1030 INJECTION PIPE(1)

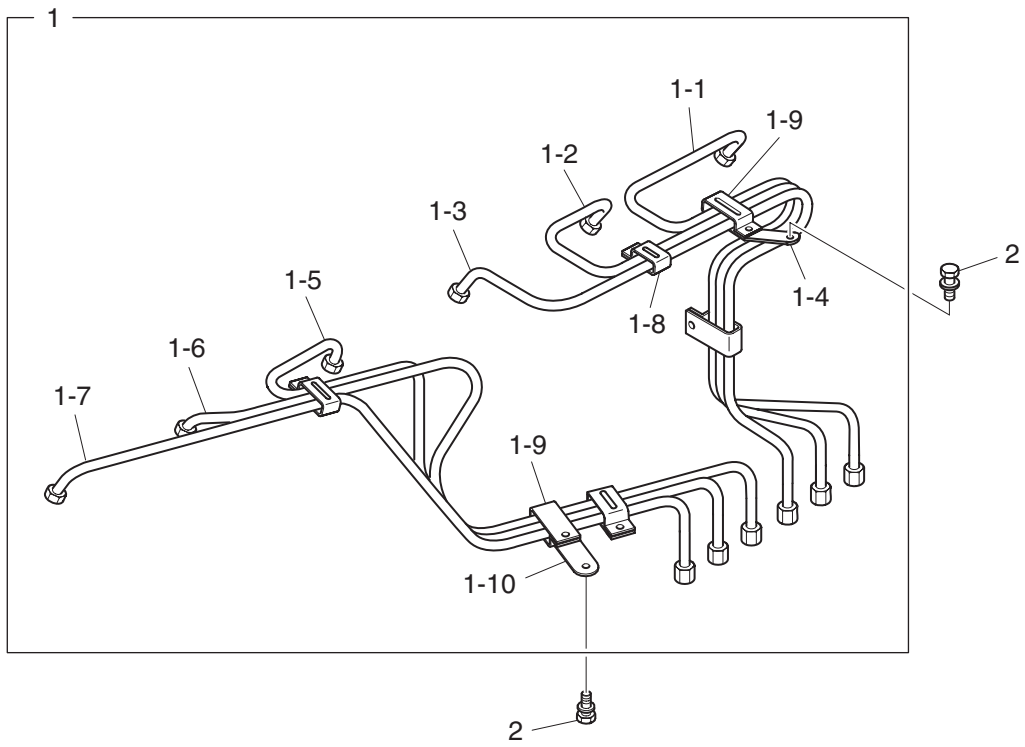


L103-DE08-004/121023

 Fig.1030 INJECTION PIPE(2)

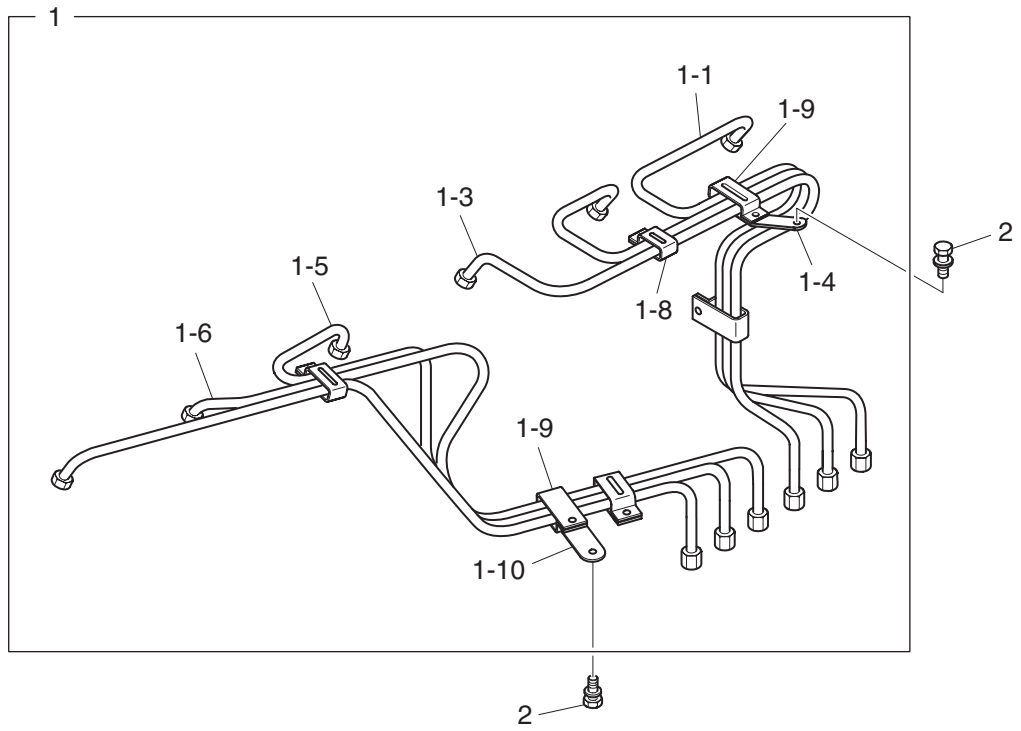

L103-DE08-005/121023

  
Fig.1030 INJECTION PIPE(3)

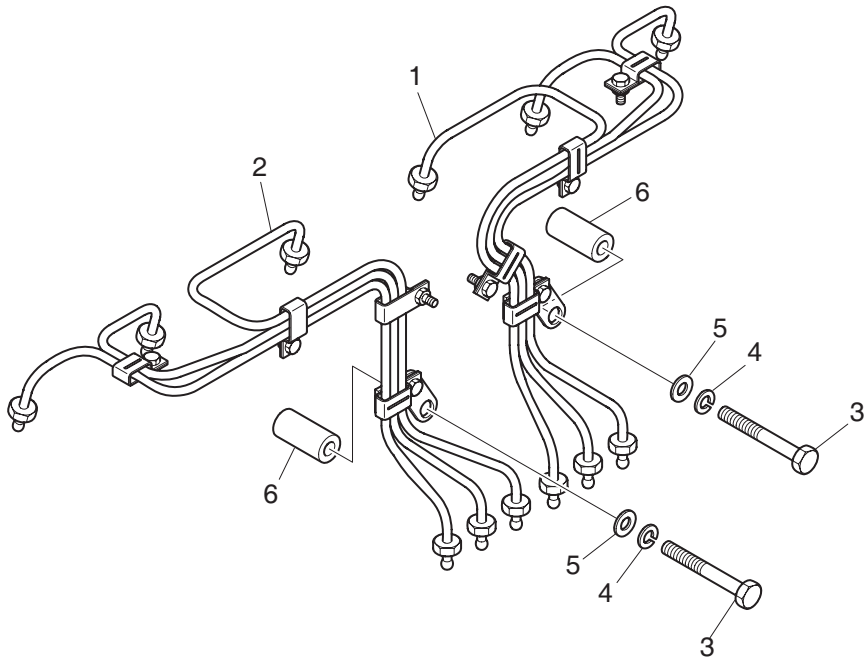

L103-DE08-010/121023

 


Fig.1110 INJECTION PUMP(1)

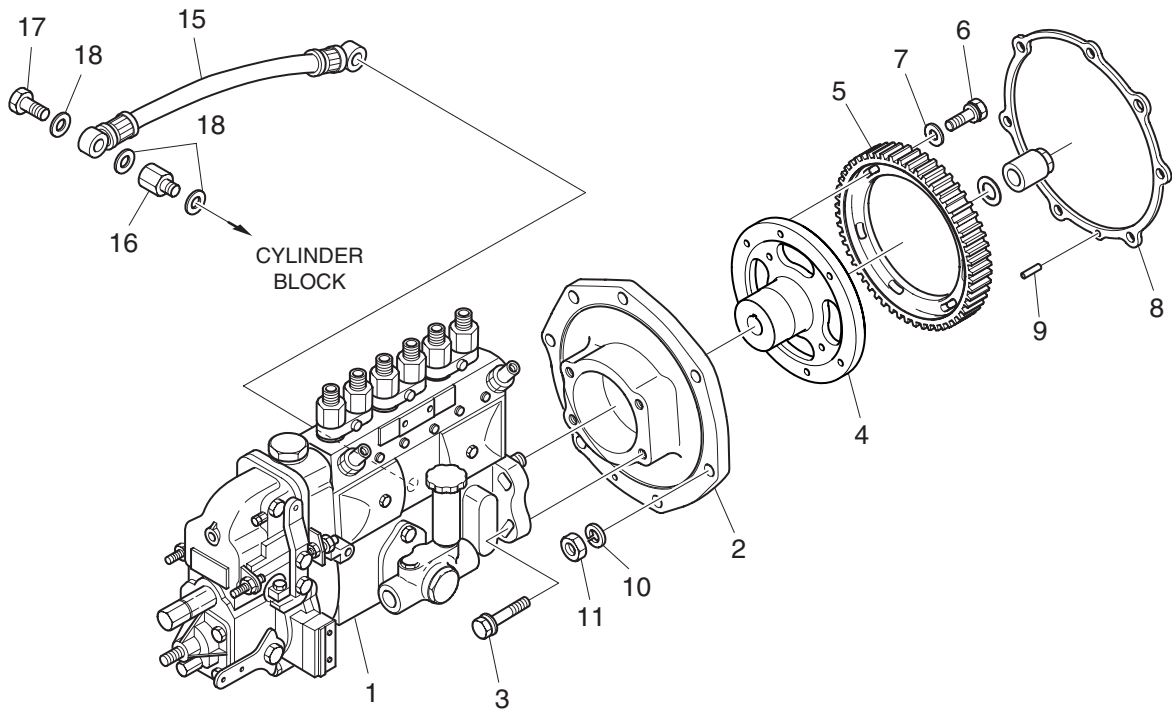


L111-DE08-003/121023

Fig.1110 INJECTION PUMP(2)

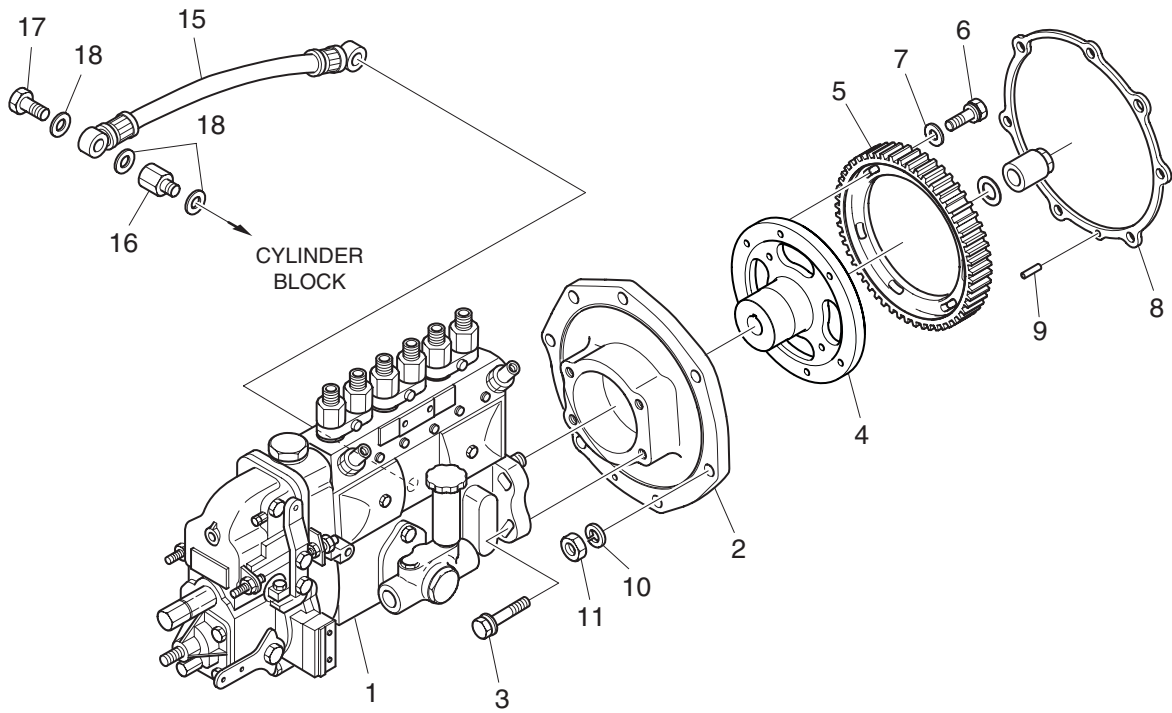


L111-DE08-007/121023

 Fig.1110 INJECTION PUMP(3)

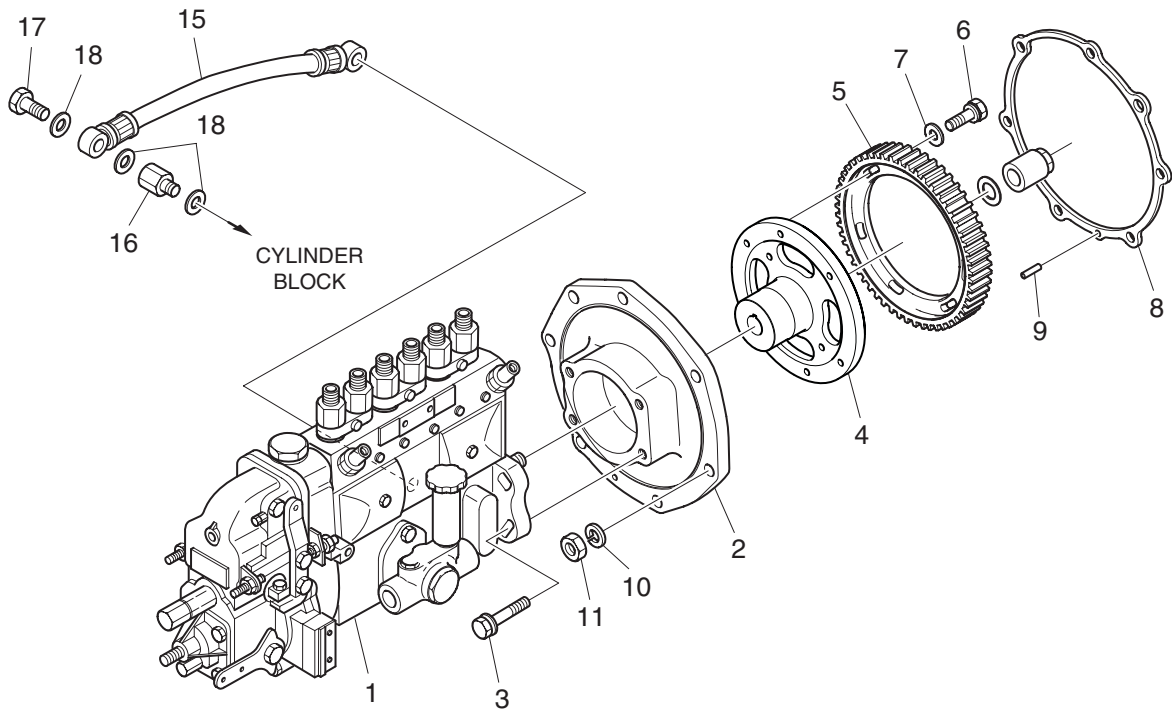


L111-DE08-011/121023

 Fig.1110 INJECTION PUMP(4)

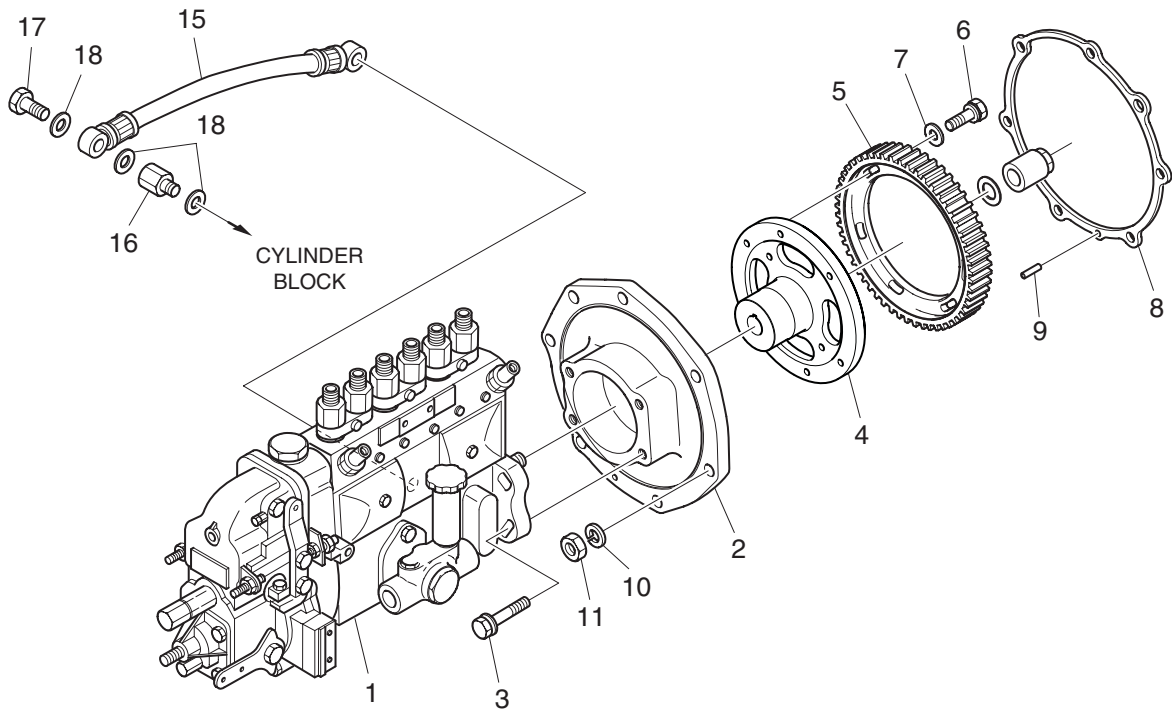


L111-DE08-012/121023

 Fig.1110 INJECTION PUMP(5)

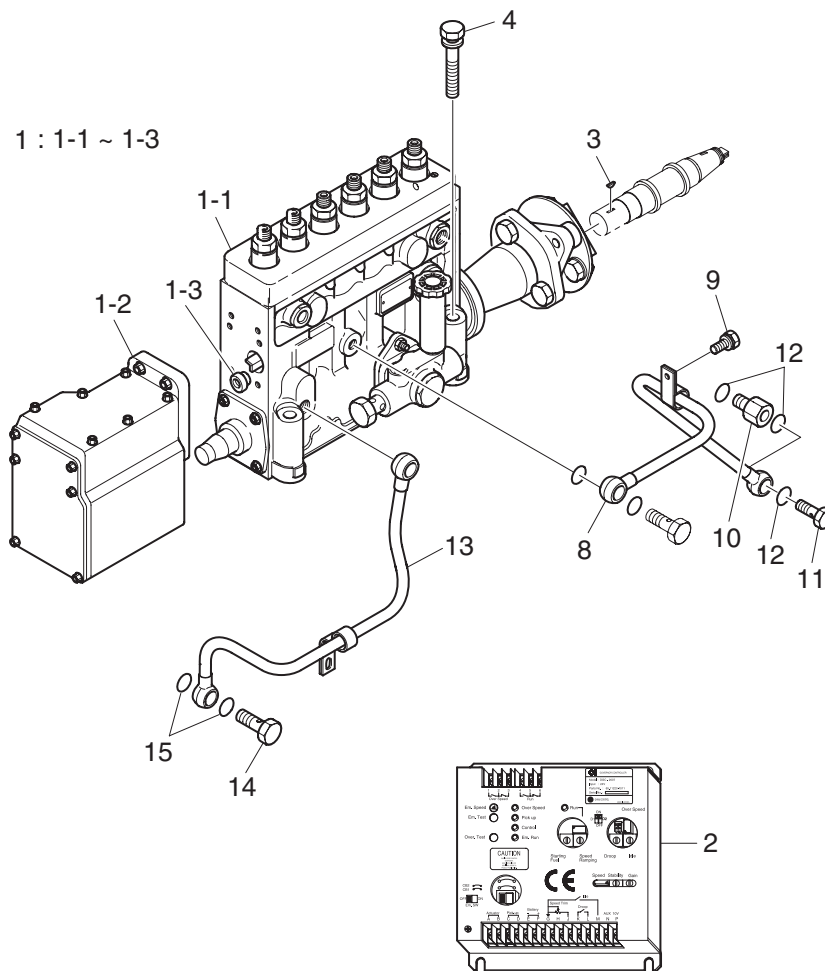


L111-DE08-019/121023

 Fig.1110 INJECTION PUMP(6)

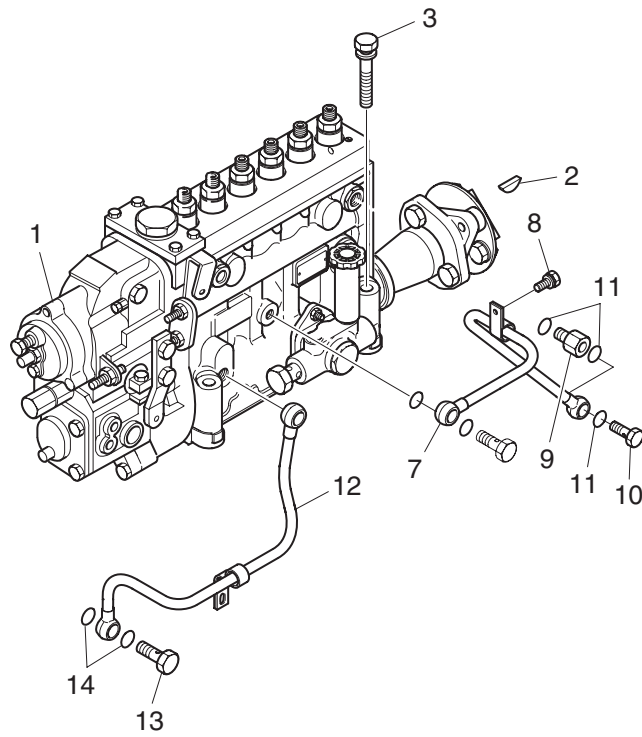


L111-DE08-022/121023

 Fig.1110 INJECTION PUMP(7)

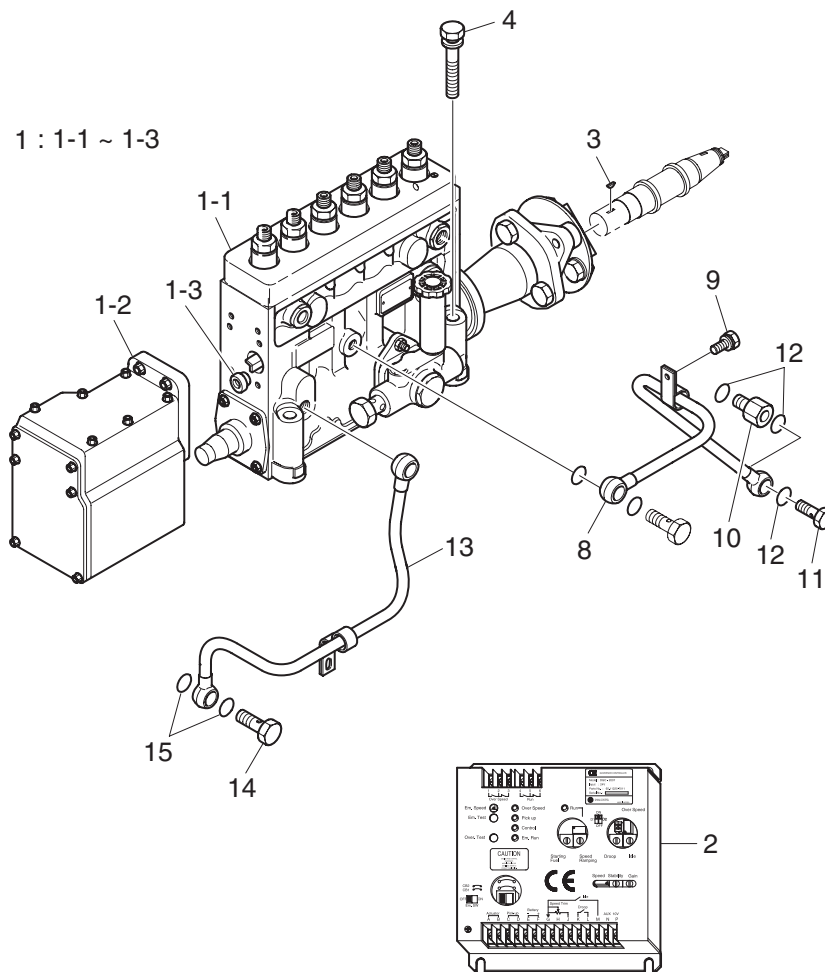

L111-DE08-029/121023

  
Fig.1130 INJECTION PUMP DRIVE

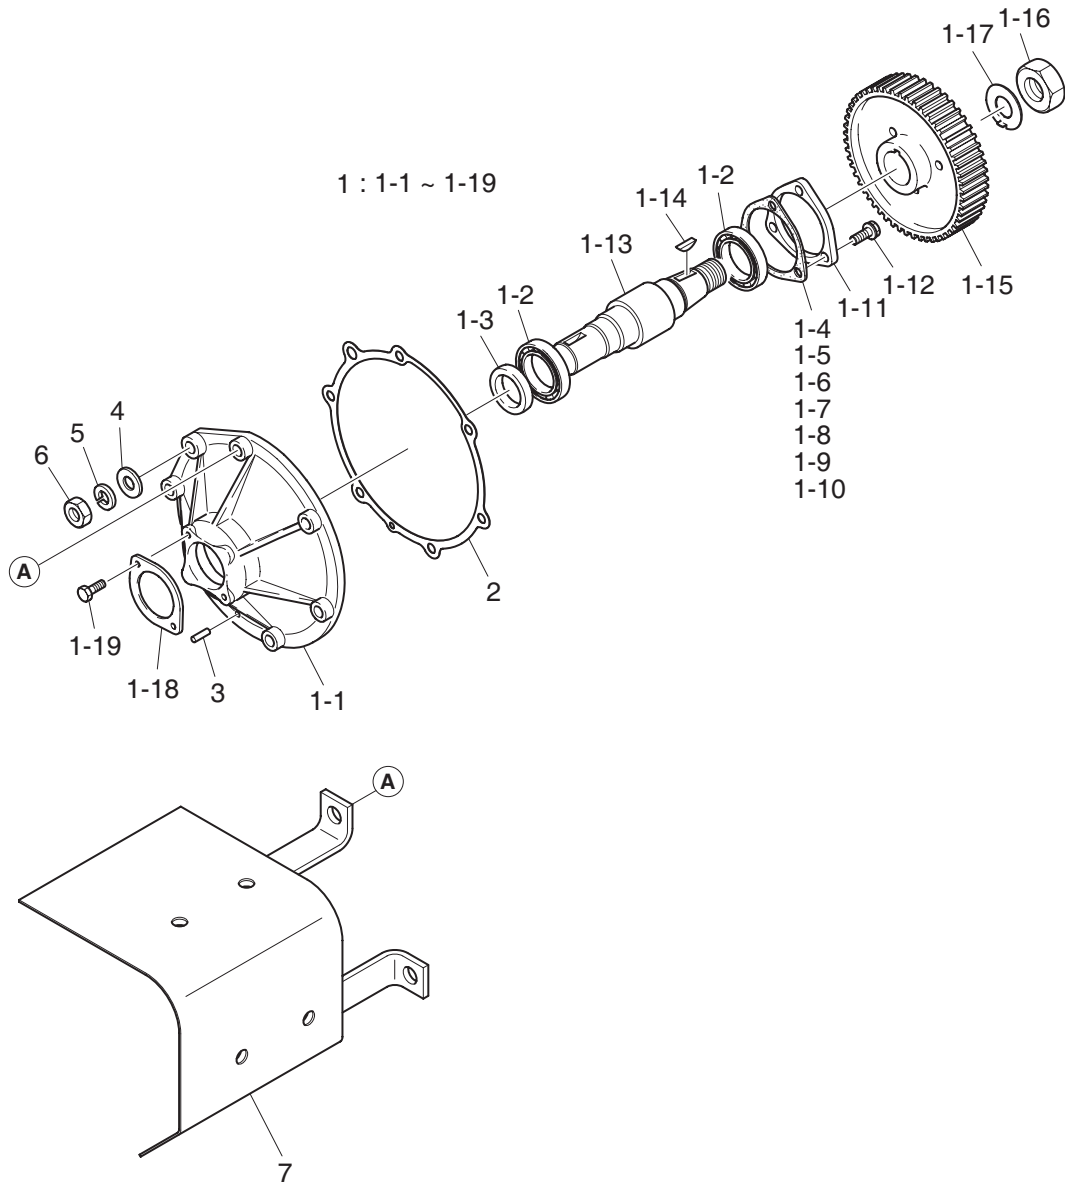

L113-DE08-004/121005

 


Fig.1140 INJECTION PUMP MOUNTING(1)

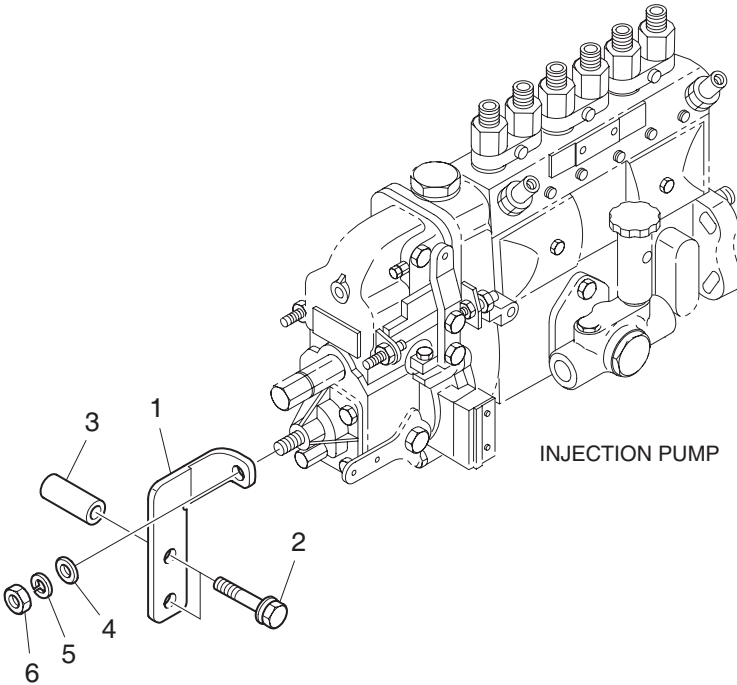


L114-DE08-004/121023

Fig.1140 INJECTION PUMP MOUNTING(2)

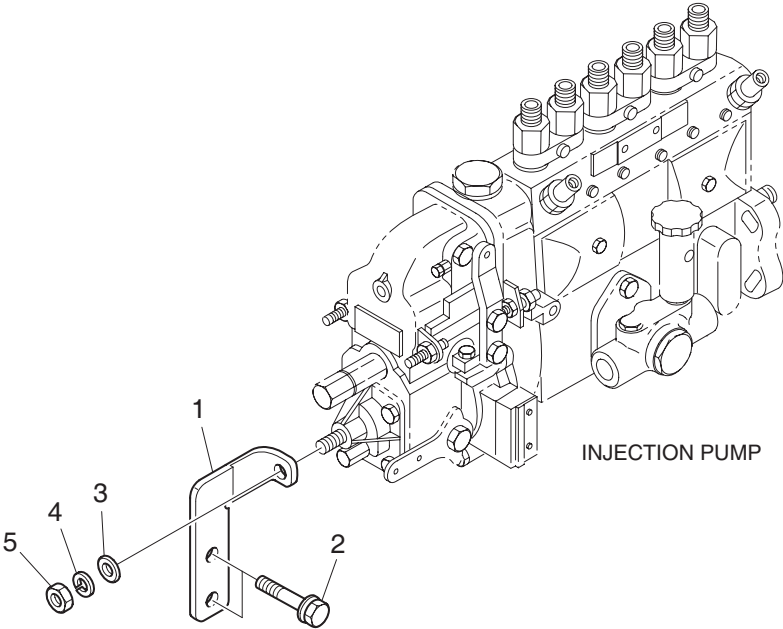


L114-DE08-005/121023

 Fig.1140 INJECTION PUMP MOUNTING(3)

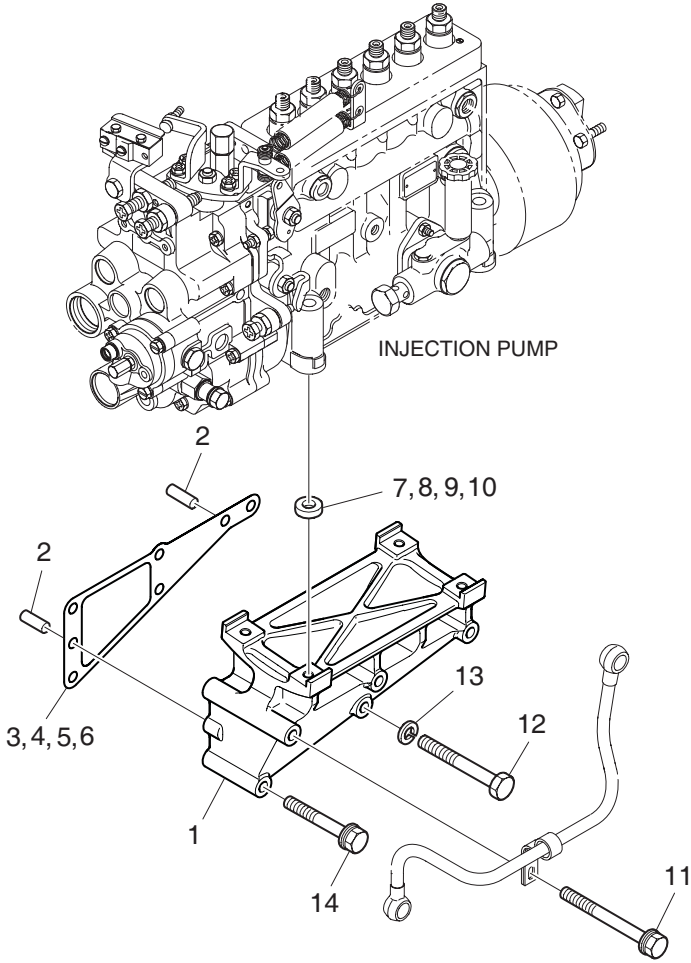


L114-DE08-009/121023

 Fig.1160 ENGINE CONTROL(1)

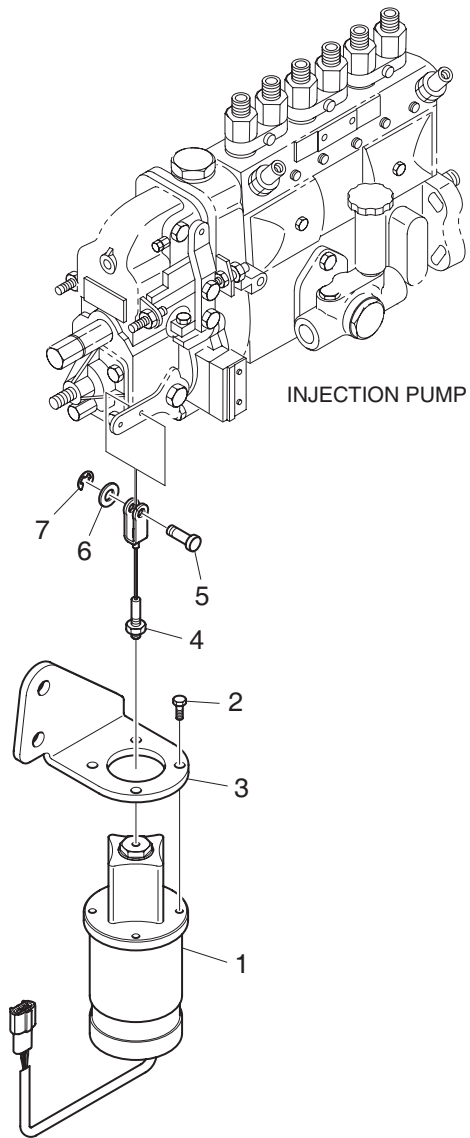


N116-DE08-001/121023

 Fig.1160 ENGINE CONTROL(2)

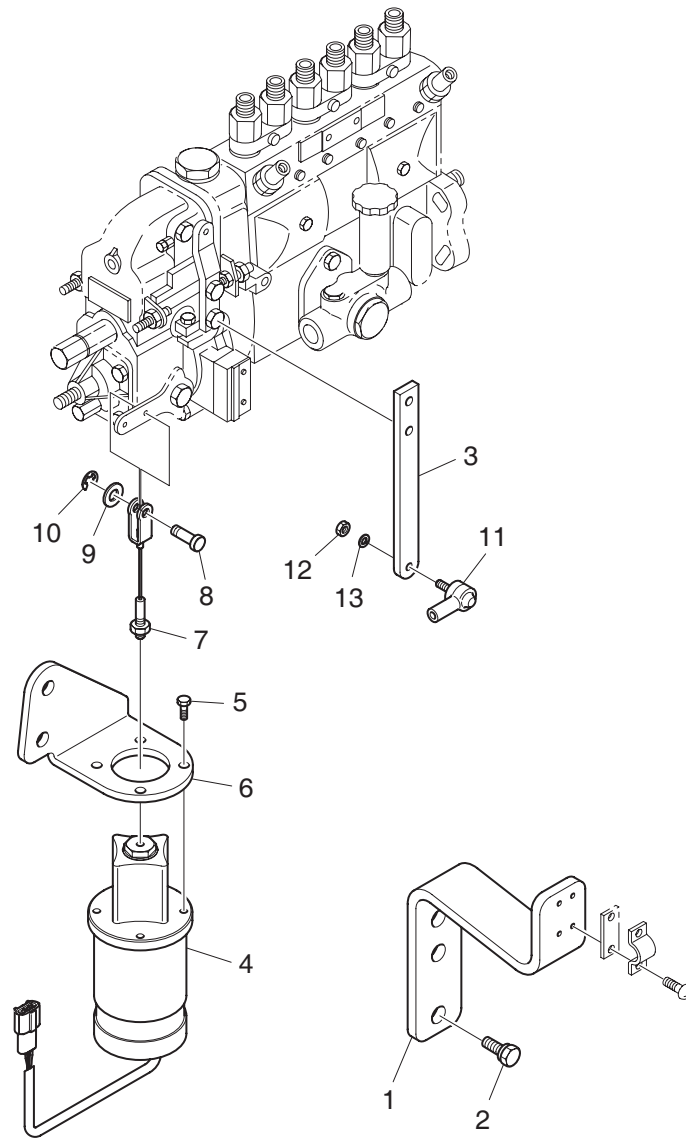


N116-DE08-002/121023

 Fig.1160 ENGINE CONTROL(3)

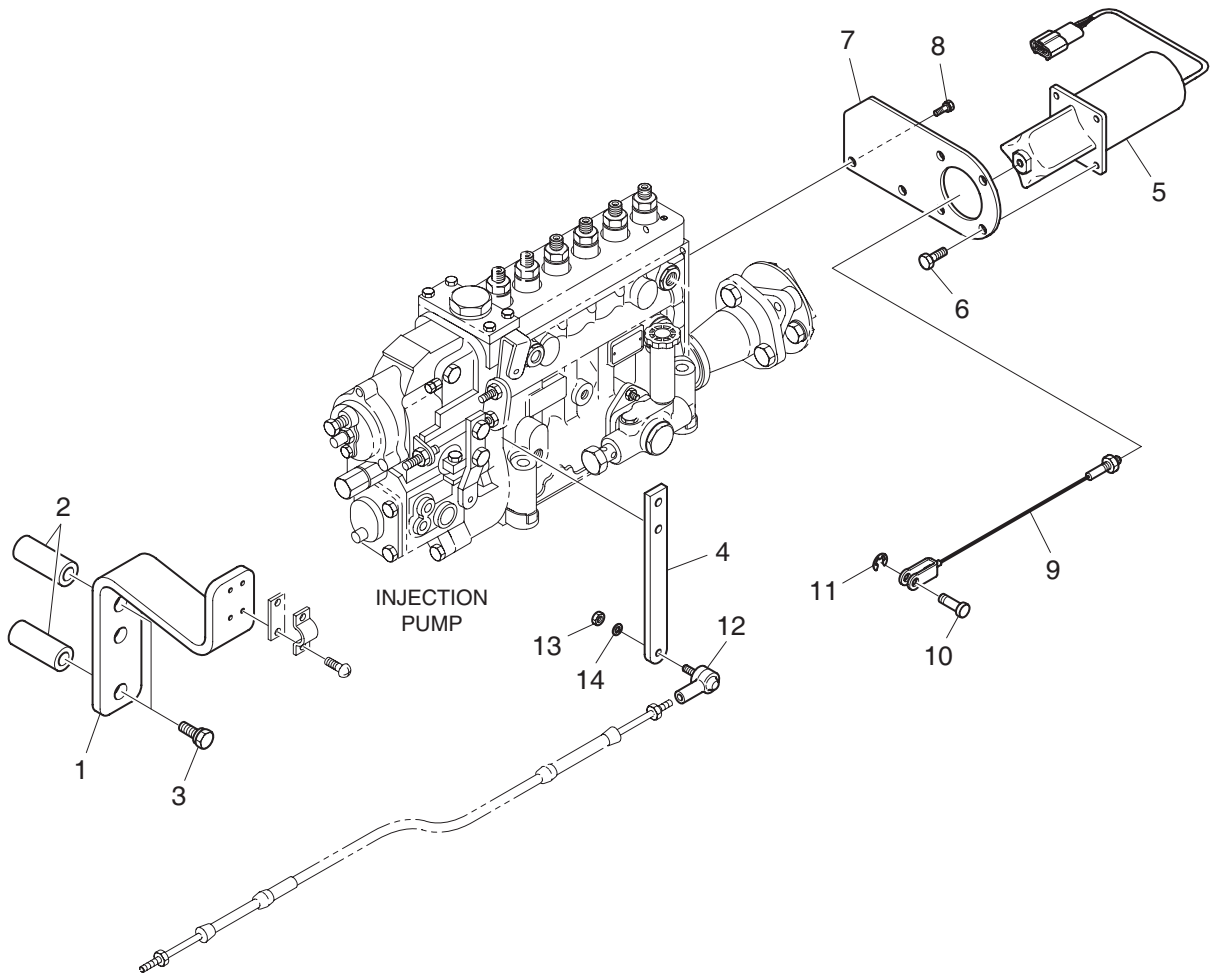


N116-DE08-008/121023

 Fig.1230 FUEL LINE(1)

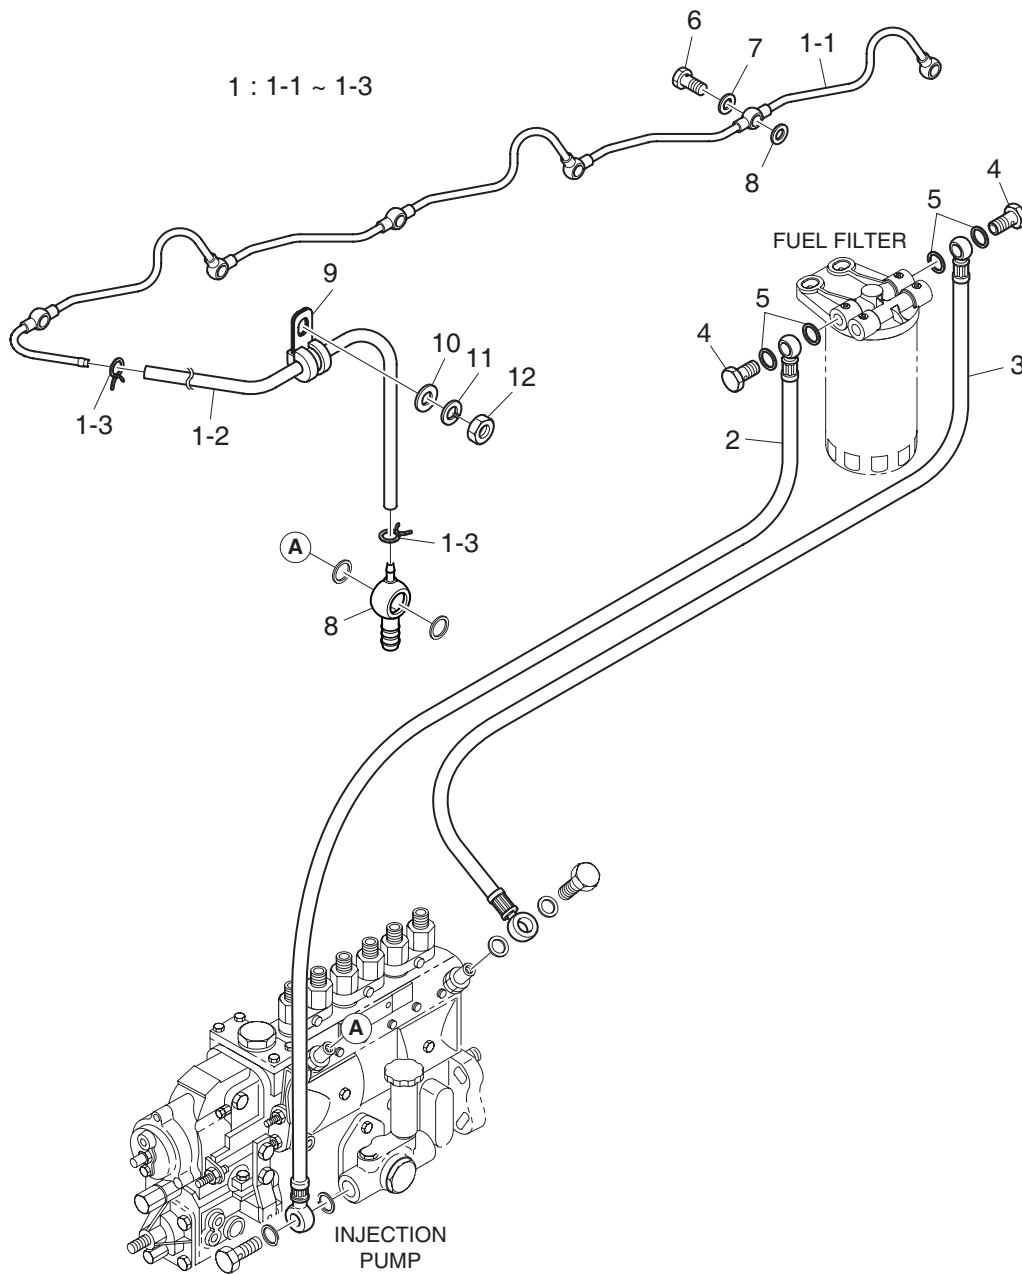

F123-DE08-007/121023

  
Fig.1230 FUEL LINE(2)

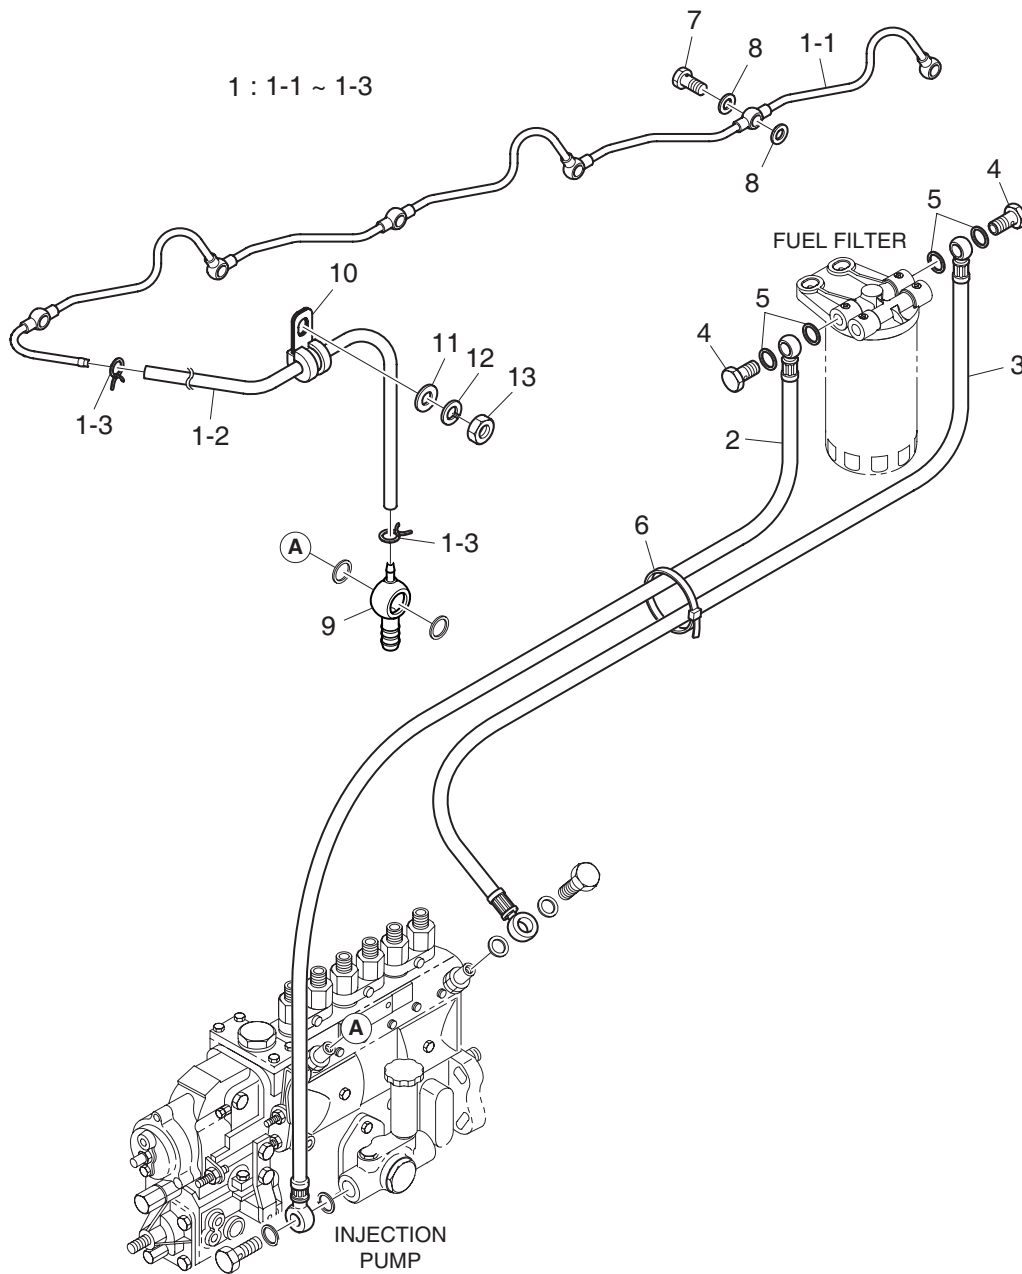

F123-DE08-015/121023

 


Fig.1230 FUEL LINE(3)

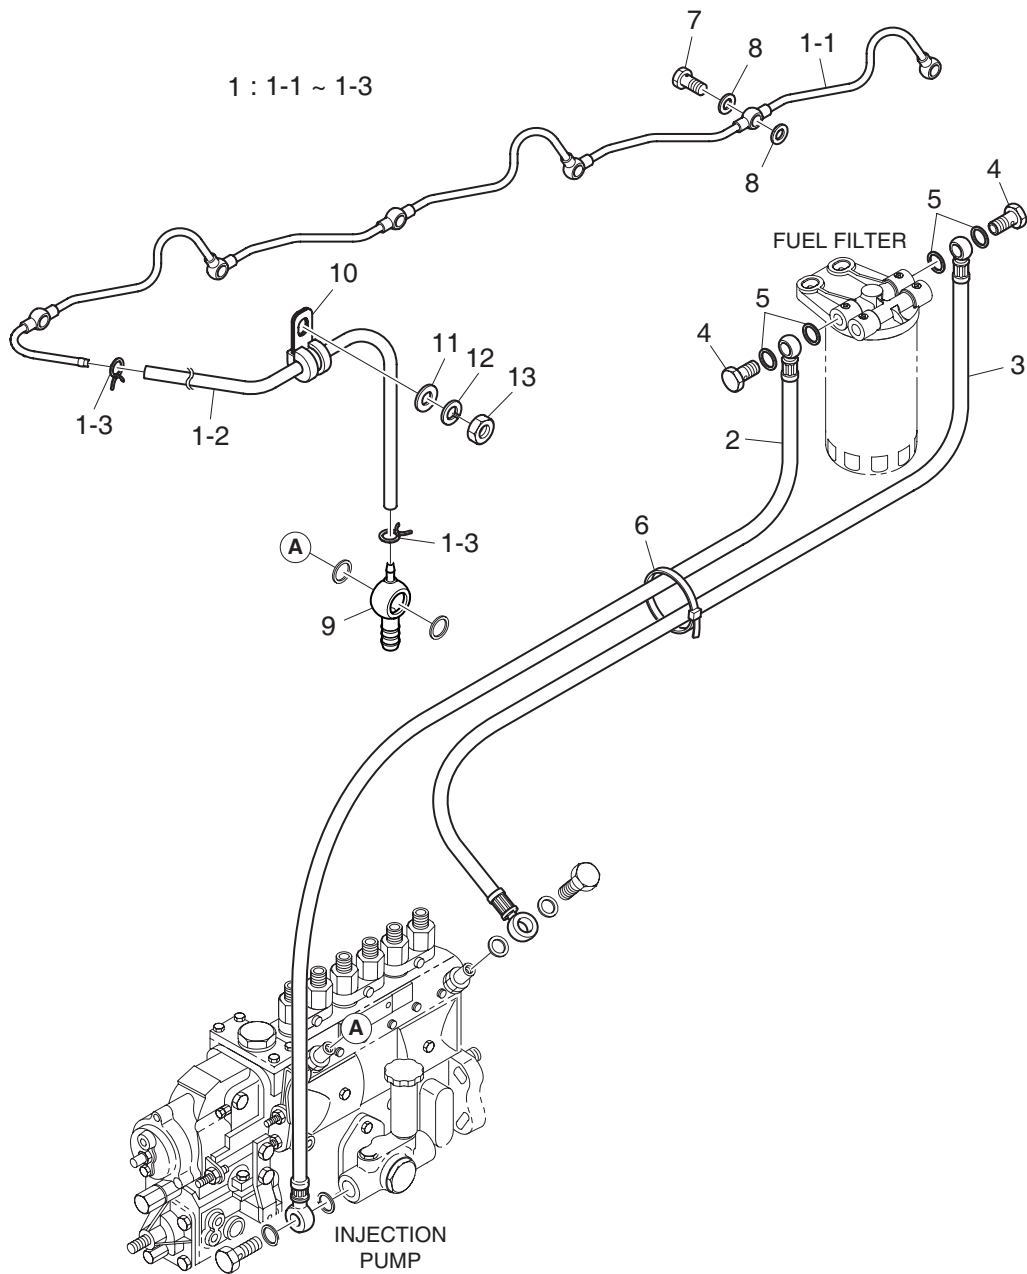


F123-DE08-017/121023

Fig.1250 FUEL FILTER(1)

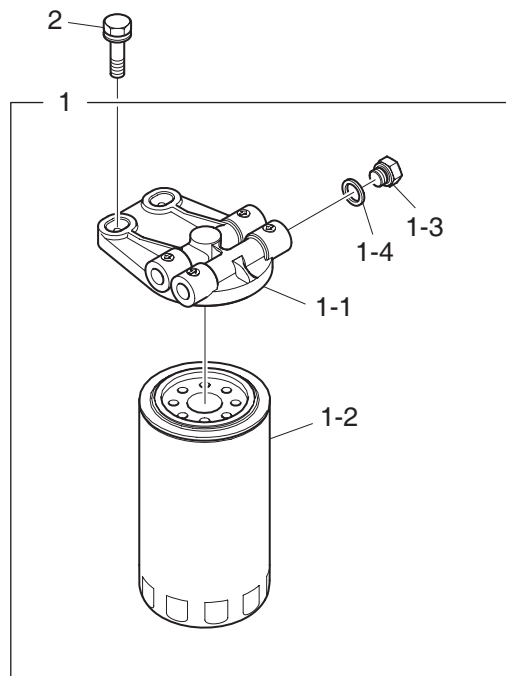


F125-DL11-002/120918

 Fig.1250 FUEL FILTER(2)

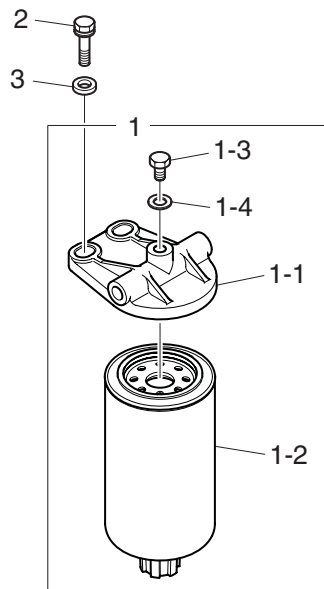


F125-DE08-004/121023

 Fig.1910 ALTERNATOR MOUNTING

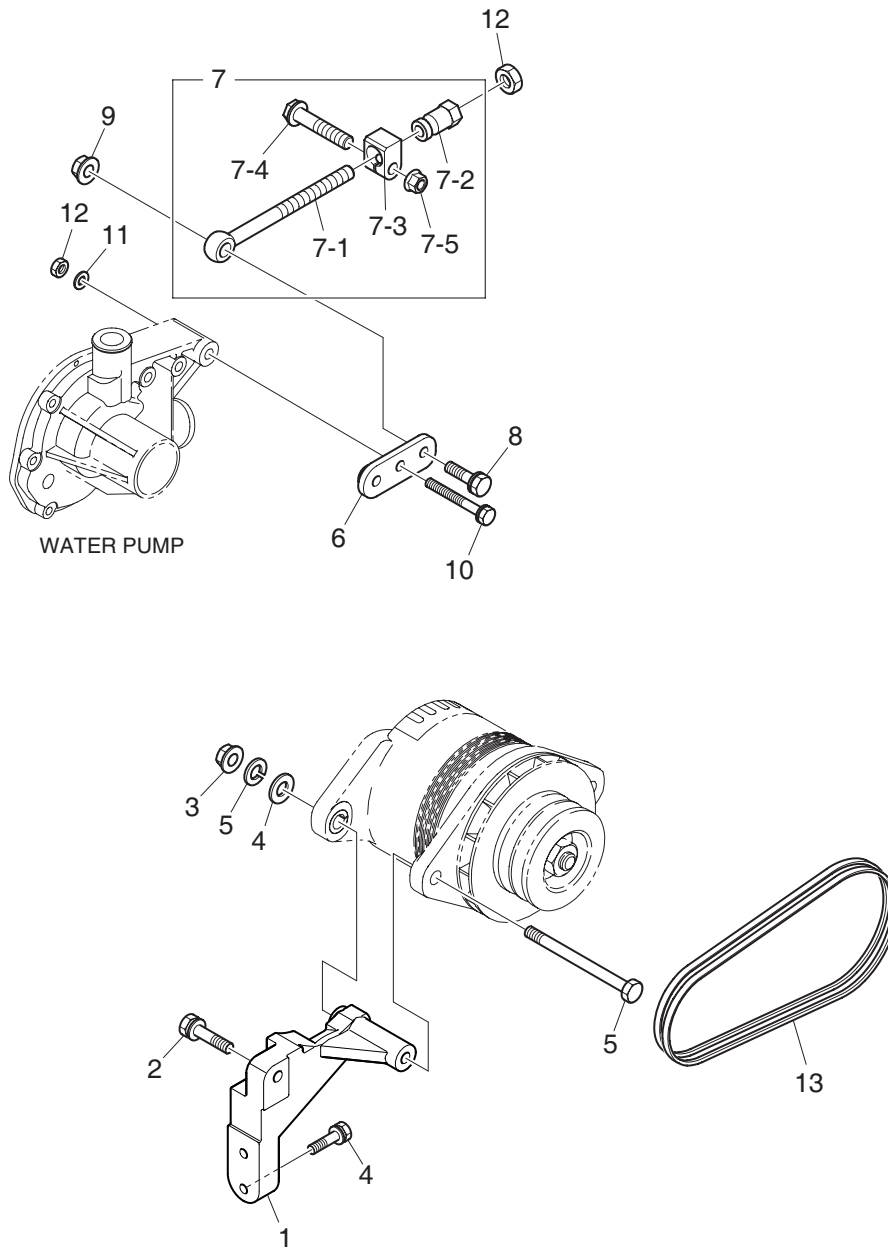


M191-DE08-007/121023

 Fig.1920 ENGINE LIFTING(1)

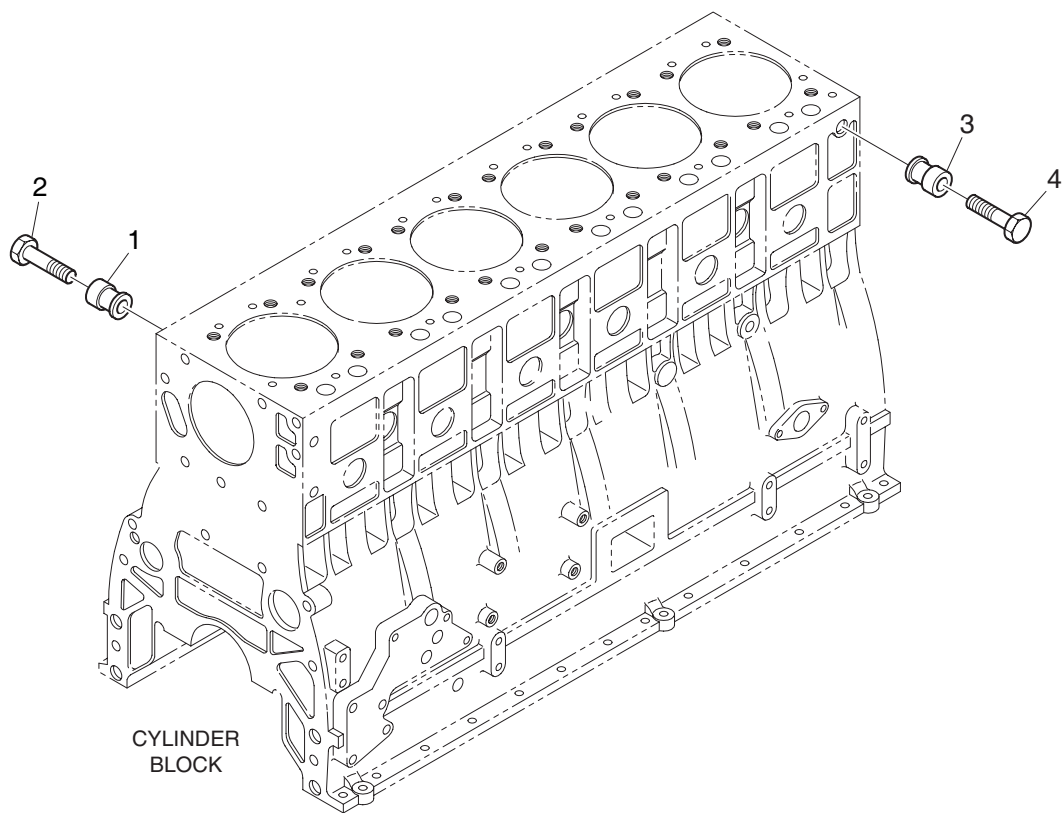


P192-DE08-003/121023

 Fig.1920 ENGINE LIFTING(2)

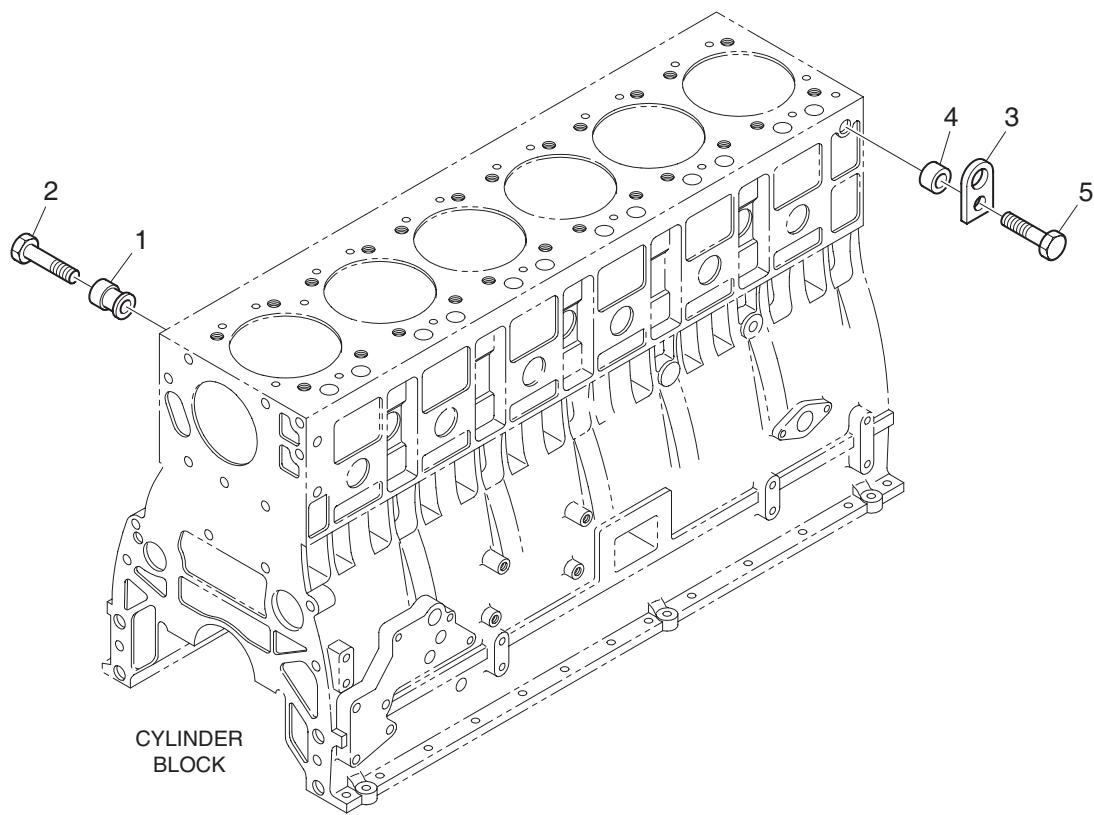


P192-DE08-006/121023

 Fig.1920 ENGINE LIFTING(3)

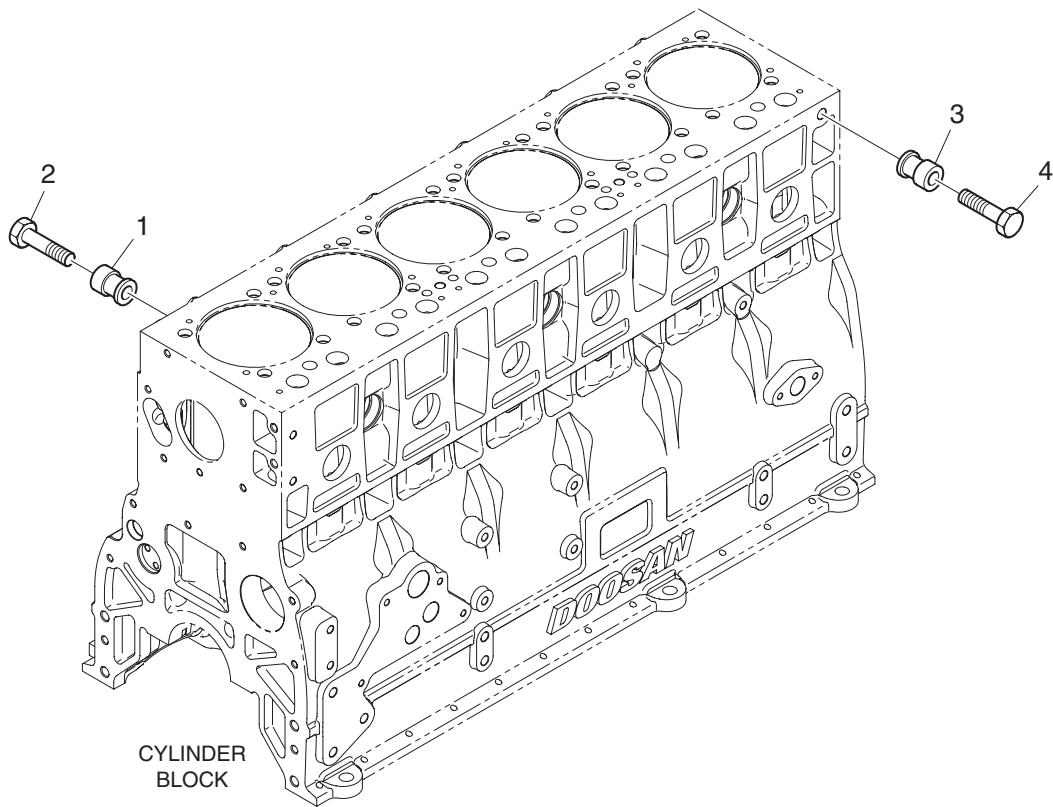

P192-DE08-008/121005

  
Fig.2610 ALTERNATOR

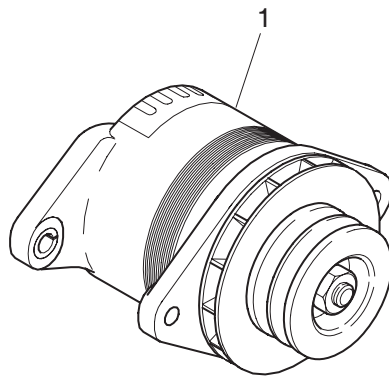

M261-DE08-001/121023

 


Fig.2620 STARTER(1)

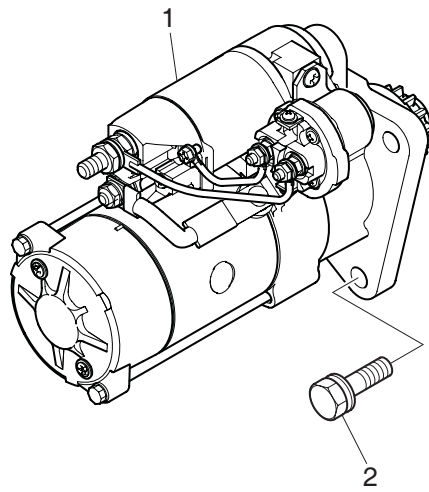


M262-DE08-004/121023

Fig.2620 STARTER(2)

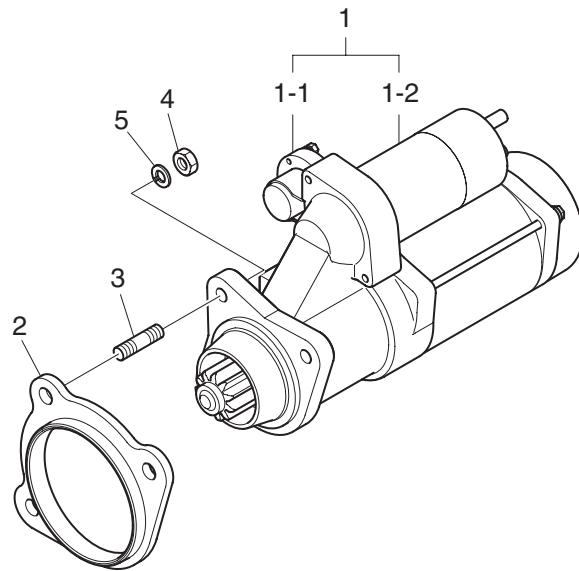


M262-DE08-009/121005

 Fig.2740 SWITCH & SENSOR(1)

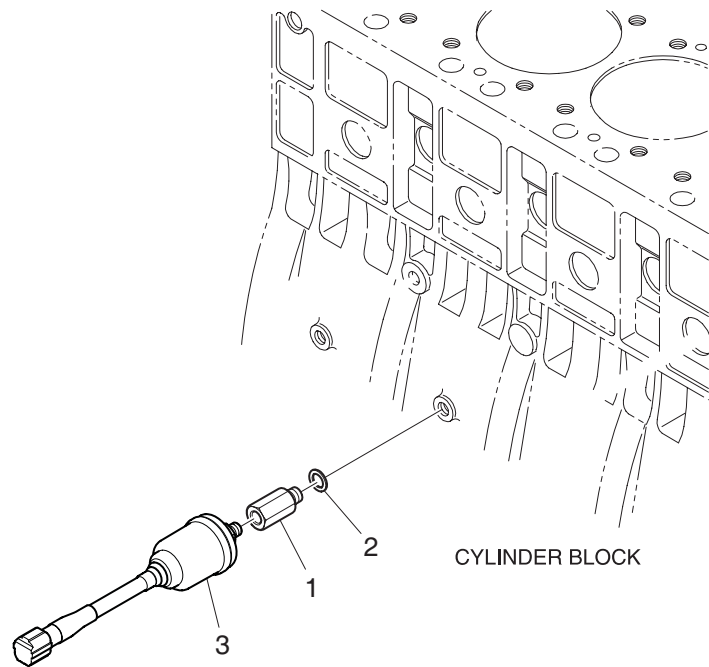


M274-DE08-003/121023

 Fig.2740 SWITCH & SENSOR(2)

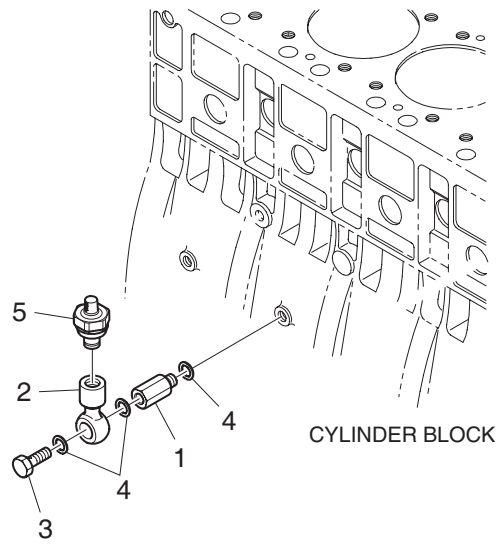


M274-DE08-004/121023

 Fig.2740 SWITCH & SENSOR(3)

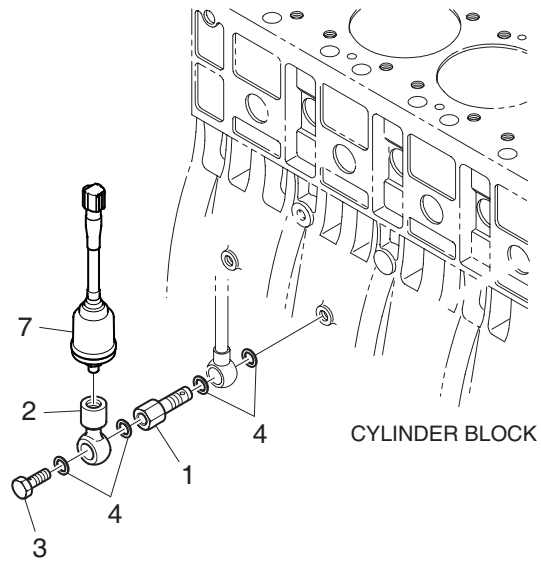


M274-DE08-006/121023

 Fig.2740 SWITCH & SENSOR(4)

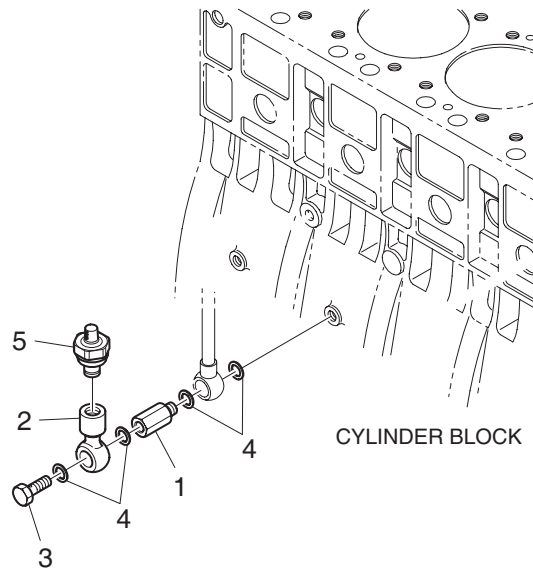


M274-DE08-007/121023

 Fig.2740 SWITCH & SENSOR(5)

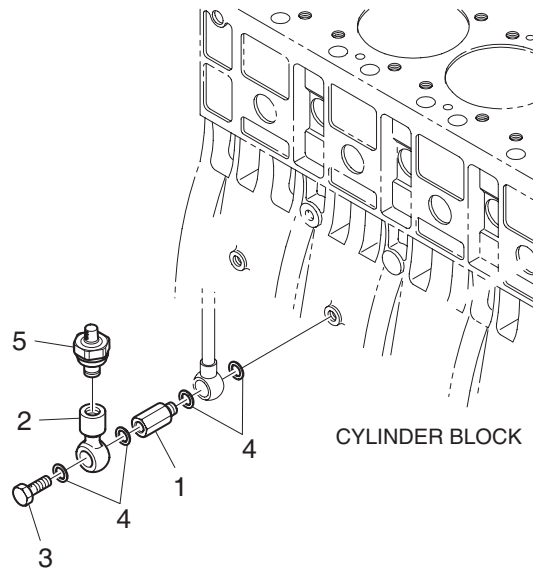

M274-DE08-011/121023

  
Fig.2910 WIRE HARNESS

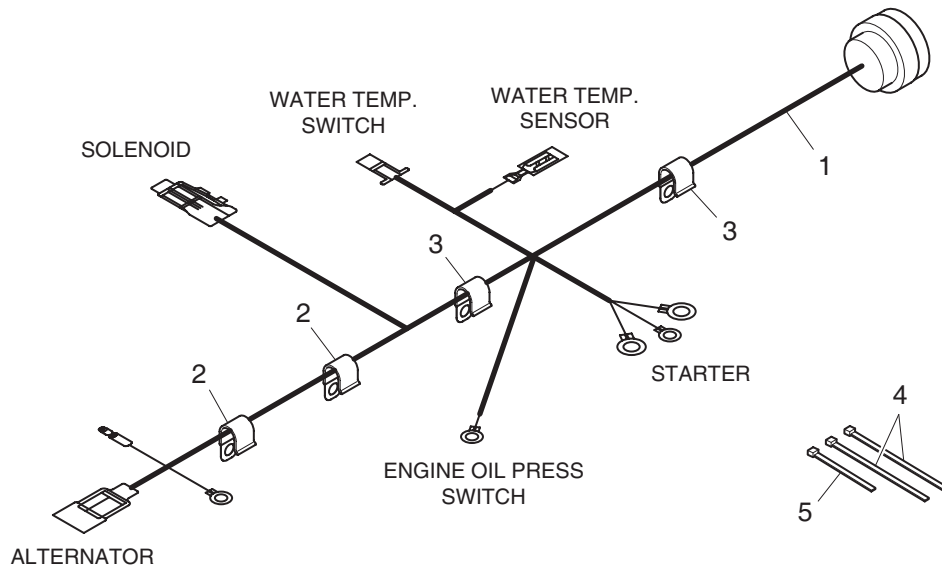

M291-DE08-001/121023

 


Fig.4150 ENGINE MOUNTING(1)

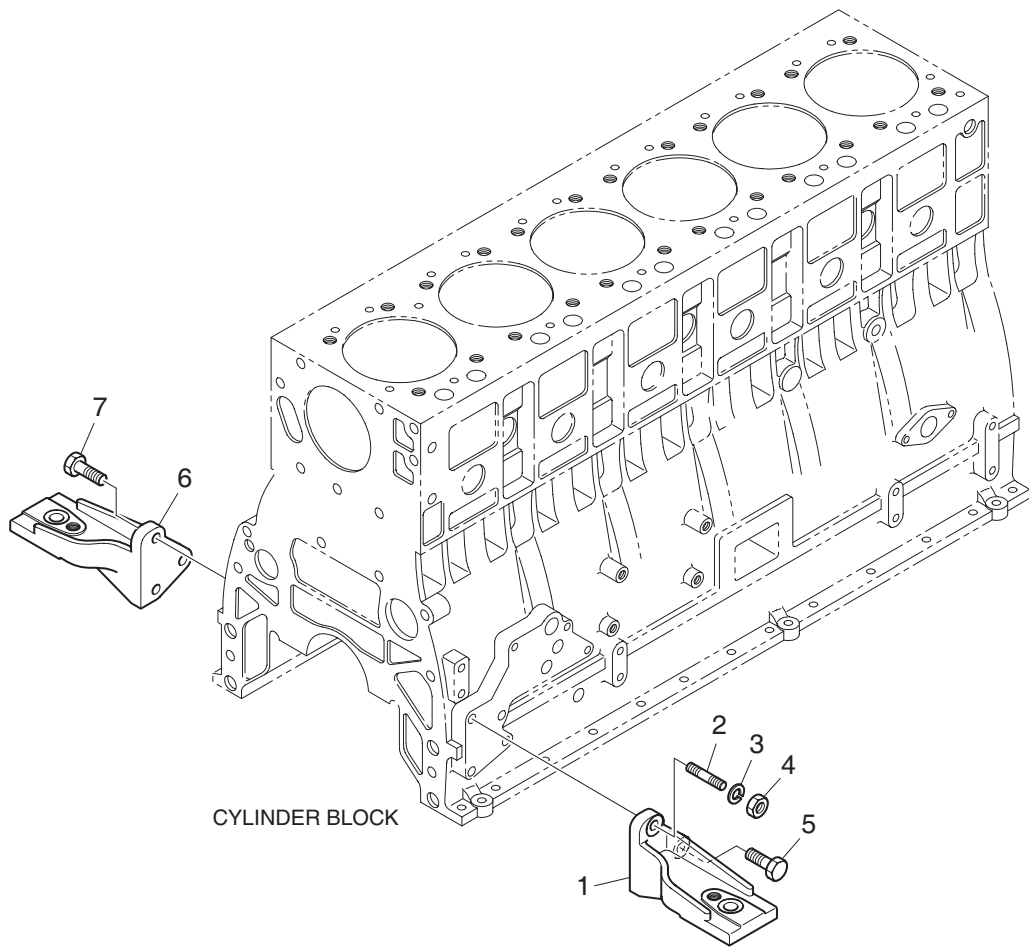


P415-DE08-004/121023

Fig.4150 ENGINE MOUNTING(2)

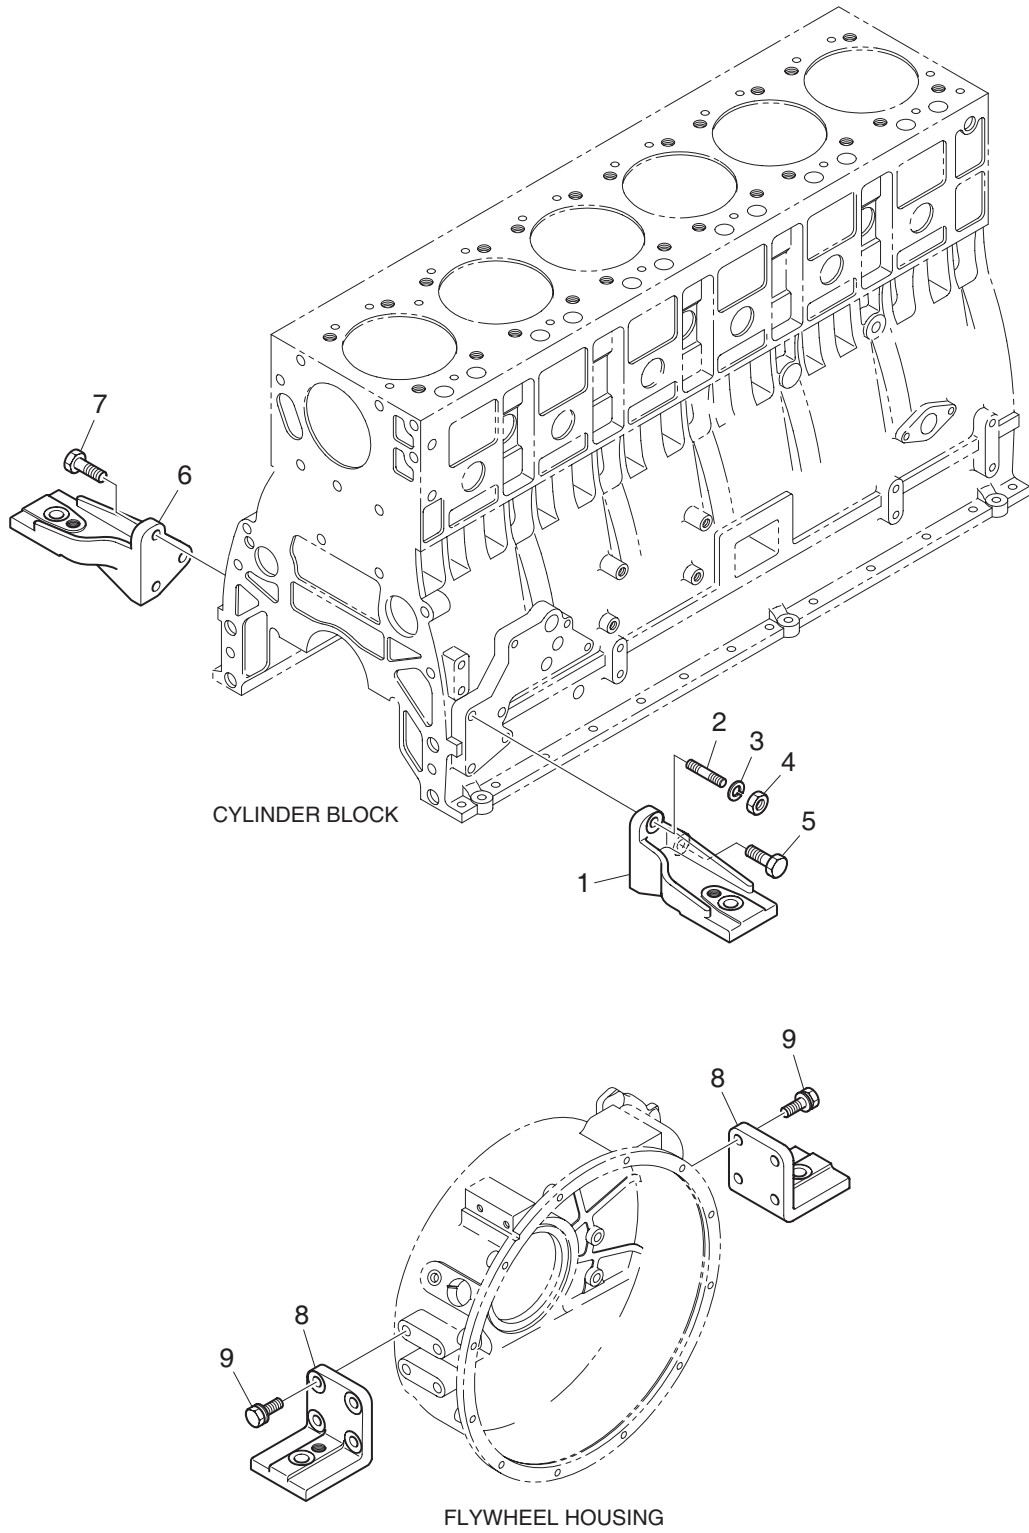


P415-DE08-006/121023

 Fig.4150 ENGINE MOUNTING(3)

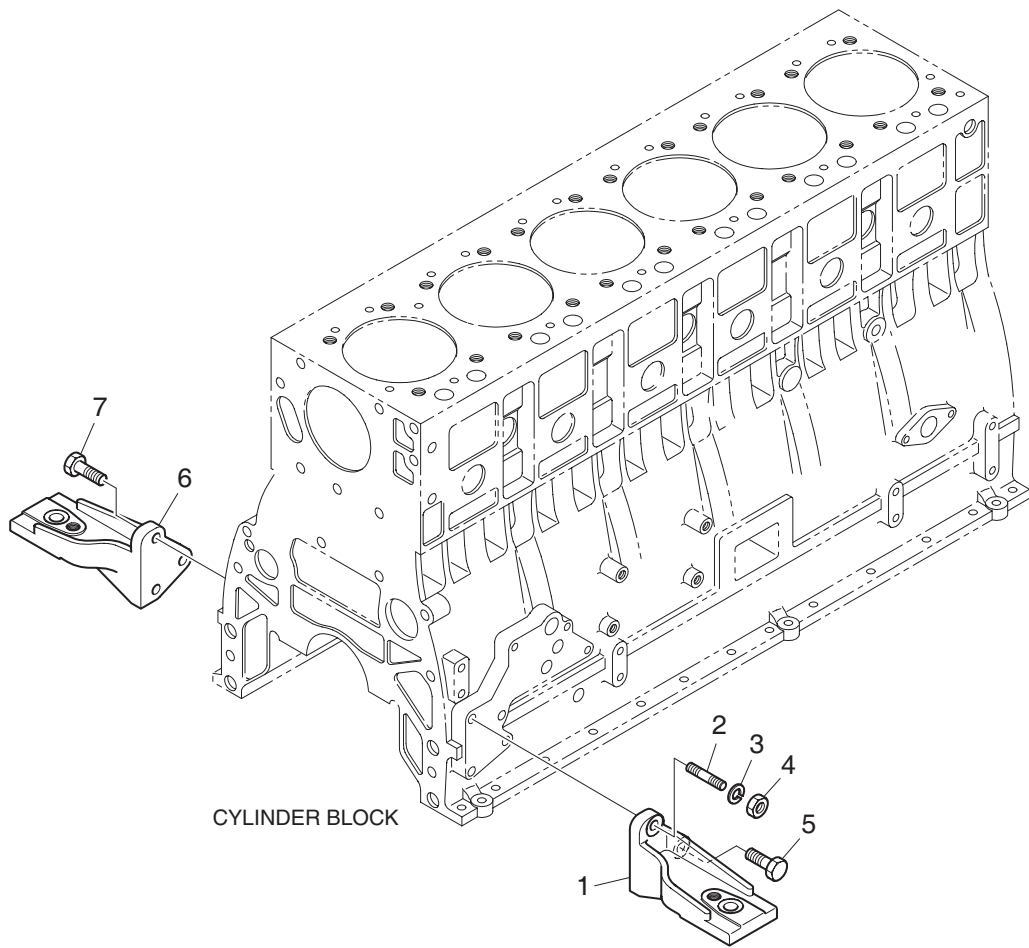


P415-DE08-011/121023

 Fig.4150 ENGINE MOUNTING(4)

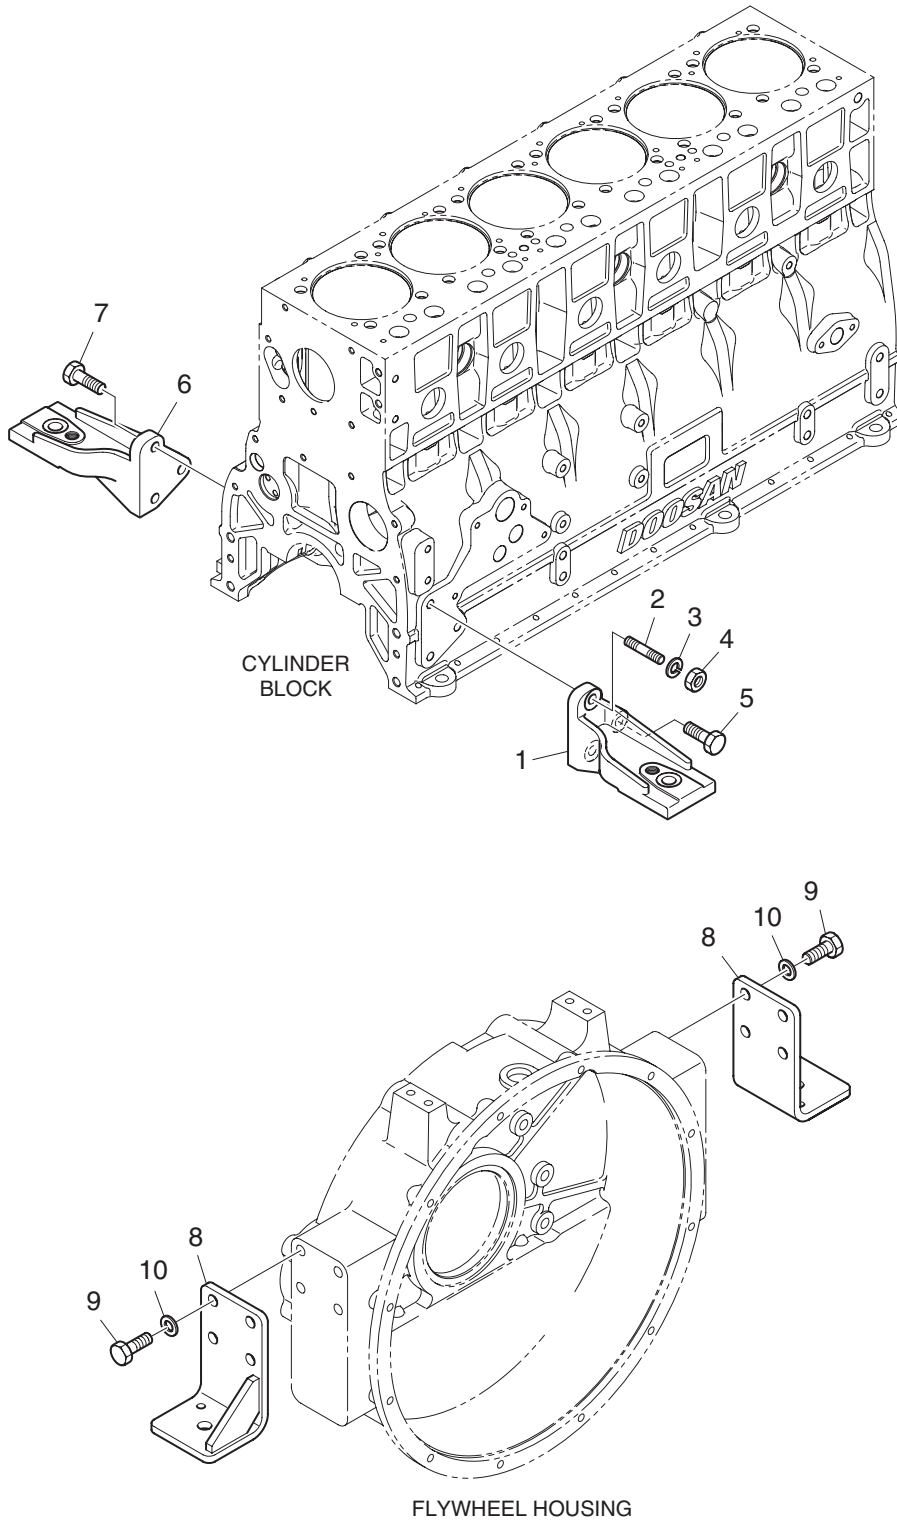


P415-DE08-012/121005

 Fig.8900 ACCESSORIES(1)

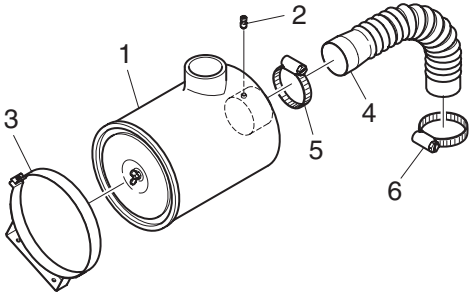


Q890-DE08-002/121023

 Fig.8900 ACCESSORIES(2)

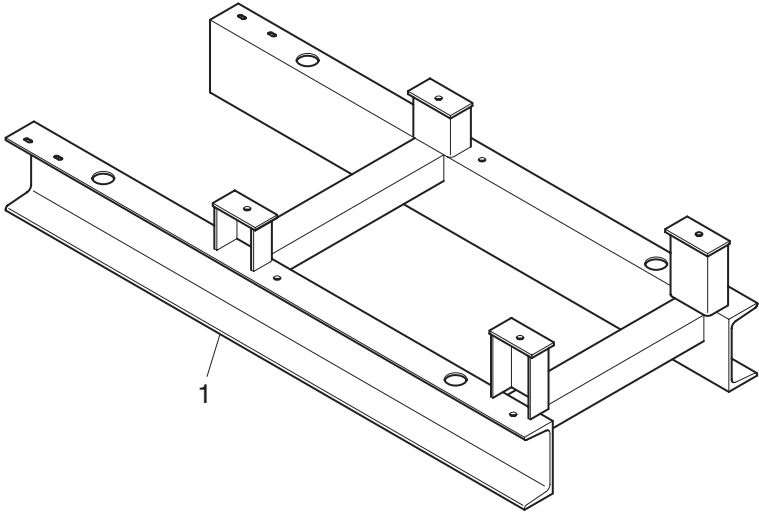


Q890-DE08-003/121023

 Fig.8900 ACCESSORIES(3)

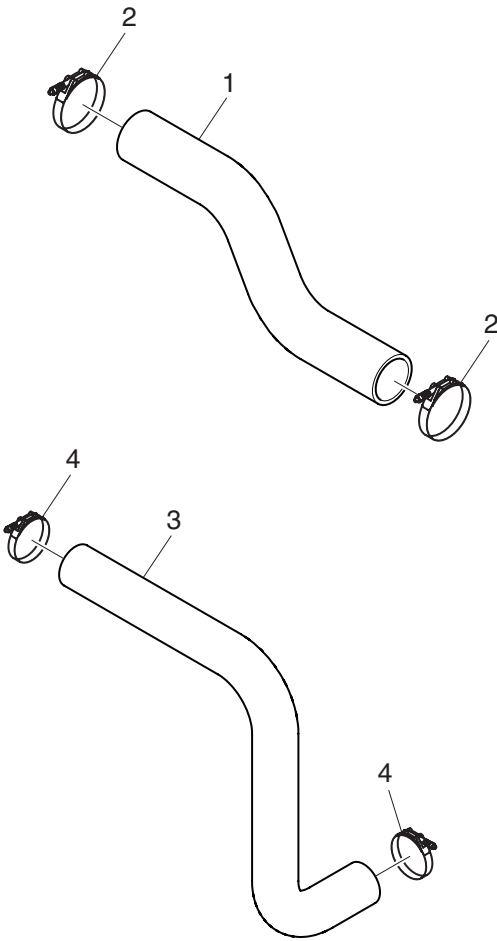

Q890-DE08-004/121023

  
Fig.8900 ACCESSORIES(4)

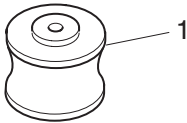

Q890-DB58-012/121022

 


Fig.8900 ACCESSORIES(5)

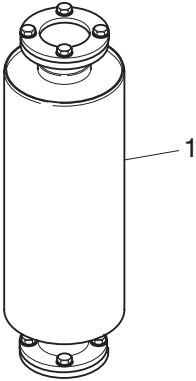


Q890-DB58-013/121022

Fig.8900 ACCESSORIES(6)

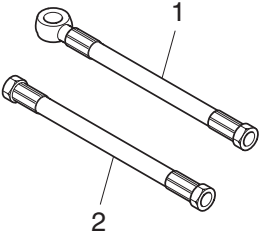

Q890-DB58-015/121022

 Fig.8900 ACCESSORIES(7)

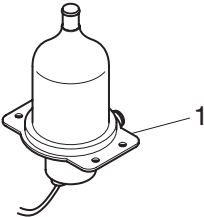

Q890-DB58-016/121022

Fig.8900 ACCESSORIES(8)




1




2

 Fig.8900 ACCESSORIES(9)

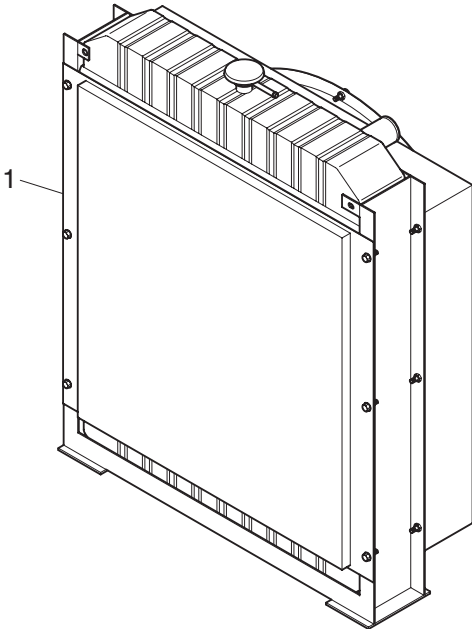


Q890-DE08-034/121023

 Fig.8900 ACCESSORIES(10)

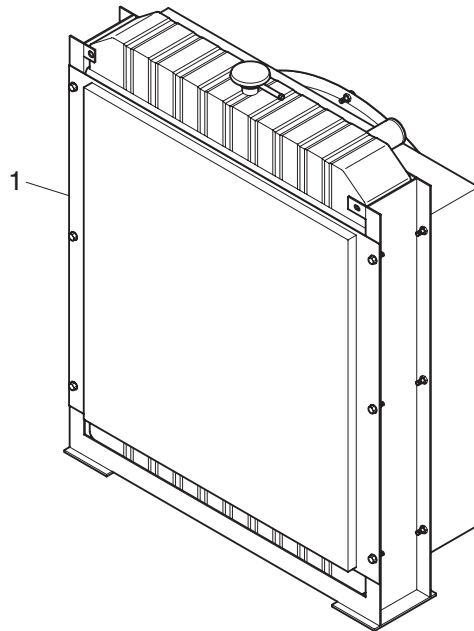


Q890-DE08-035/121023

 Fig.8900 ACCESSORIES(11)

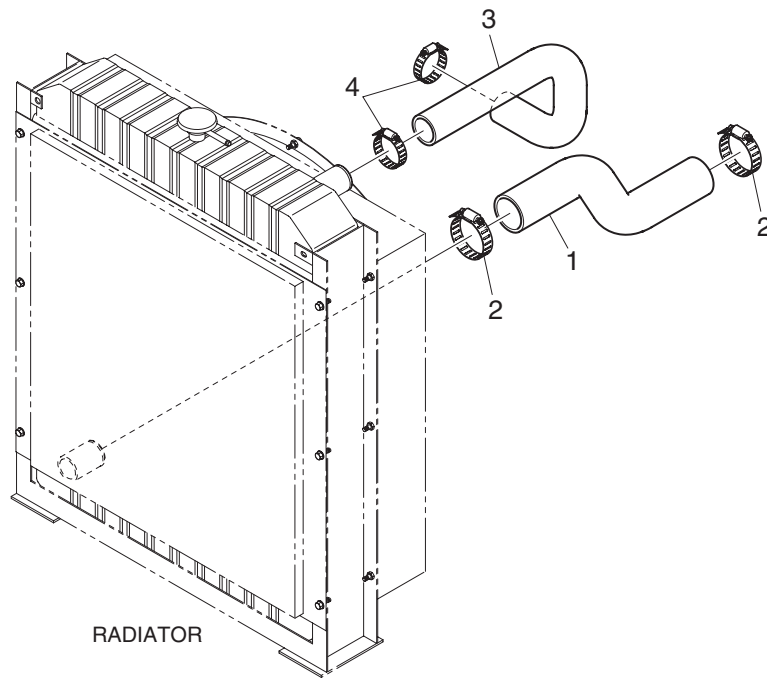

Q890-DE08-036/121023

  
Fig.8900 ACCESSORIES(12)

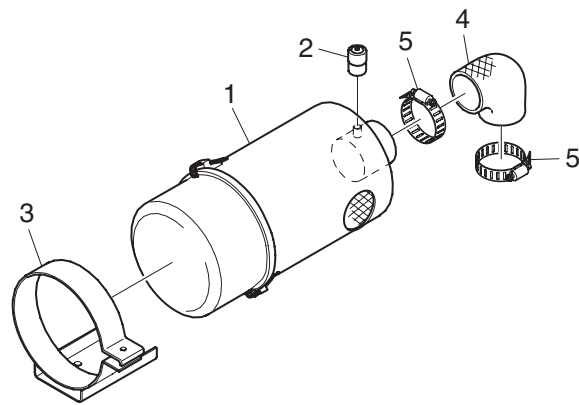

Q890-DE08-037/121023

 


Fig.8900 ACCESSORIES(13)

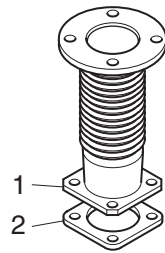


Q890-DE08-038/121023

 Fig.8900 ACCESSORIES(14)

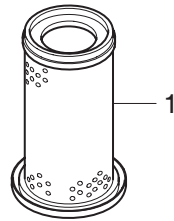


 
 
 
 
Q890-DE08-039/121005

 Fig.8900 ACCESSORIES(15)

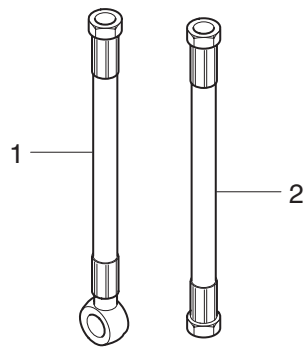


 
Q890-DE08-042/121005

 Fig.8900 ACCESSORIES(16)

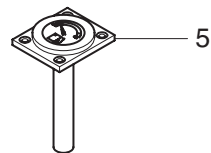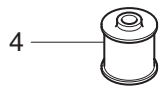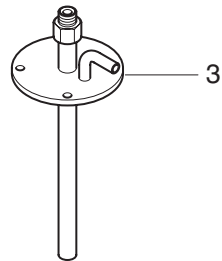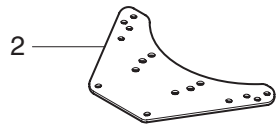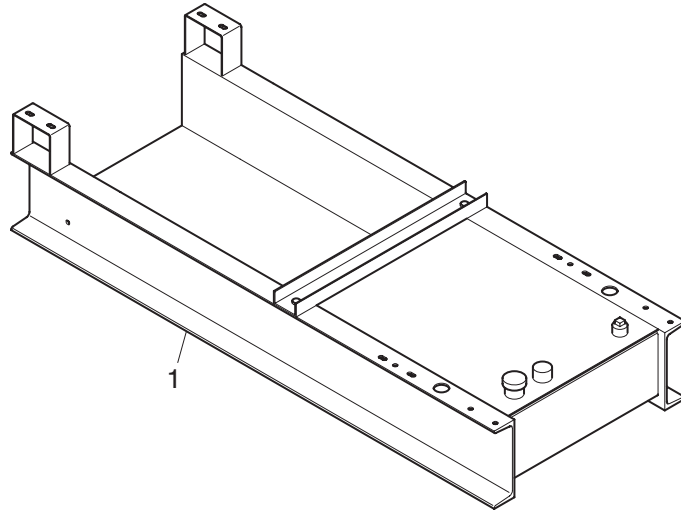


Q890-DE08-044/121023

Fig.8900 ACCESSORIES(17)

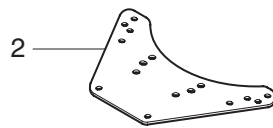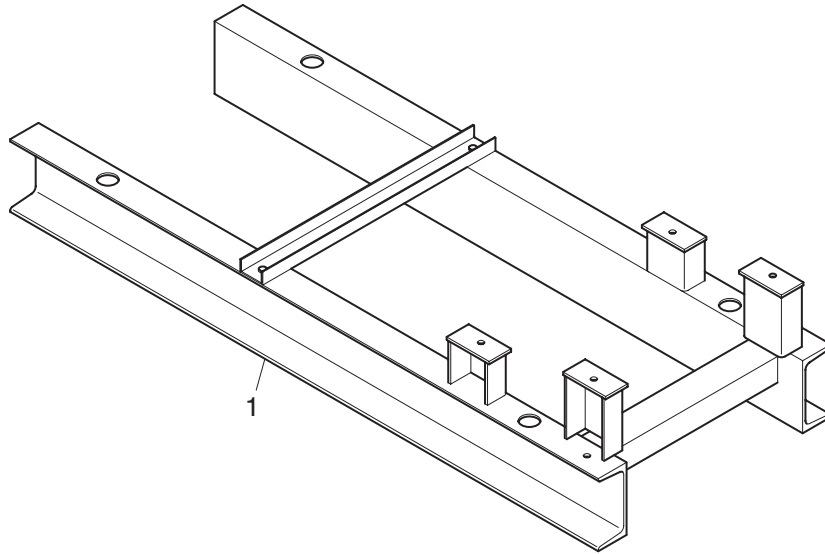


Q890-DE08-045/121023

 Fig.8900 ACCESSORIES(18)

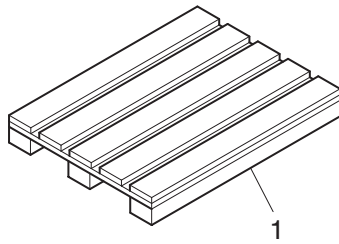


Q890-DE08-046/121023

 Fig.8900 ACCESSORIES(19)

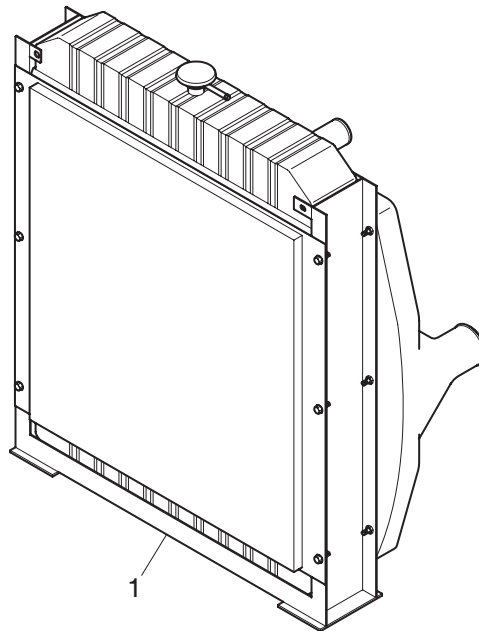

Q890-DE08-049/121005

  
Fig.8900 ACCESSORIES(20)

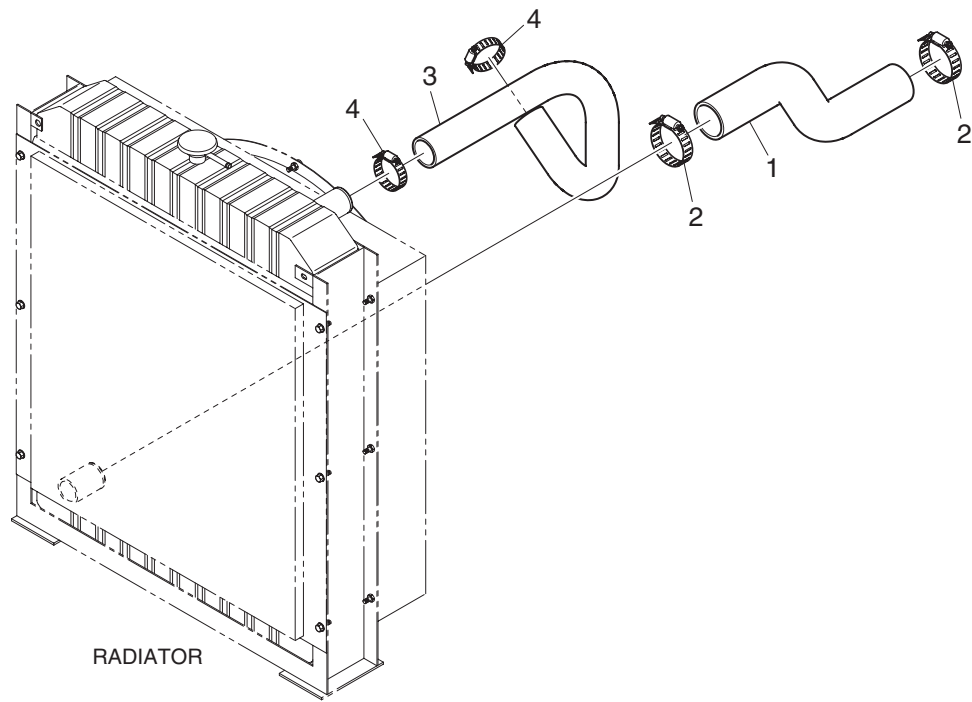

Q890-DE08-050/121023

 


Fig.8900 ACCESSORIES(21)

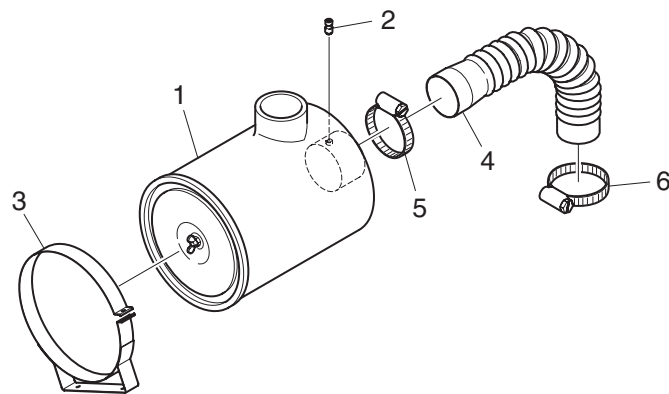


 
 
 
 
Q890-DE08-051/121005

 Fig.8900 ACCESSORIES(22)

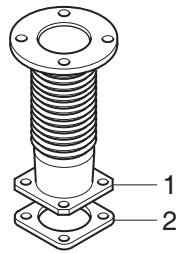


 
Q890-DE08-052/121005

 Fig.8900 ACCESSORIES(23)

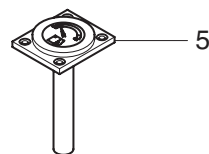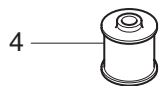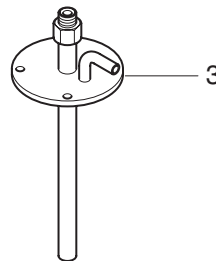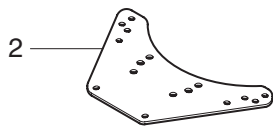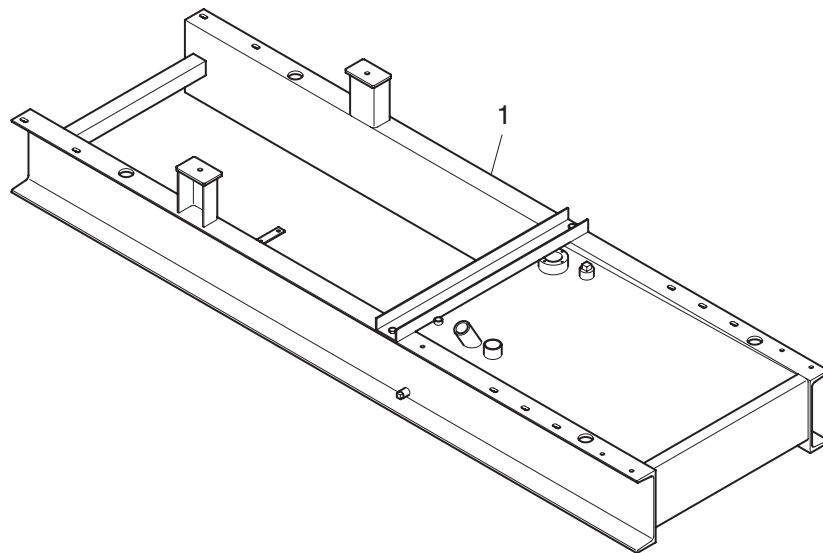


Q890-DE08-053/121023

Fig.8900 ACCESSORIES(24)

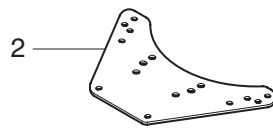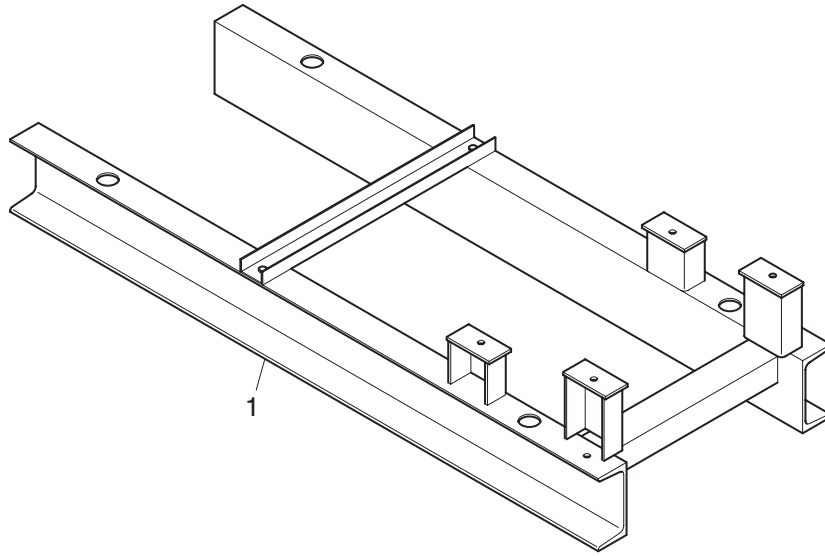


Q890-DE08-054/121023

 Fig.8900 ACCESSORIES (25)

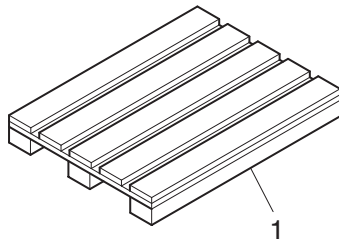


Q890-DE08-055/121023

 Fig.8900 ACCESSORIES(26)

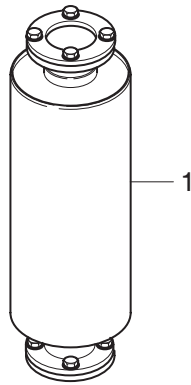


Q890-DE08-056/121005

 Fig.8900 ACCESSORIES(27)

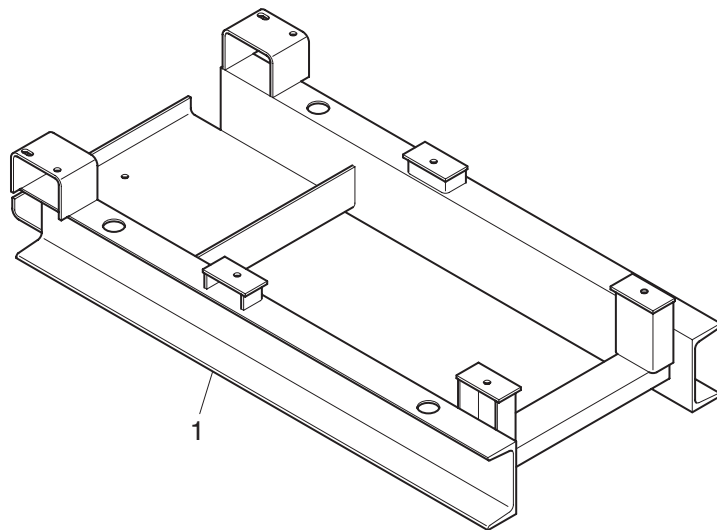

Q890-DE08-057/121023

 Fig.9880 SPARE PART(1)

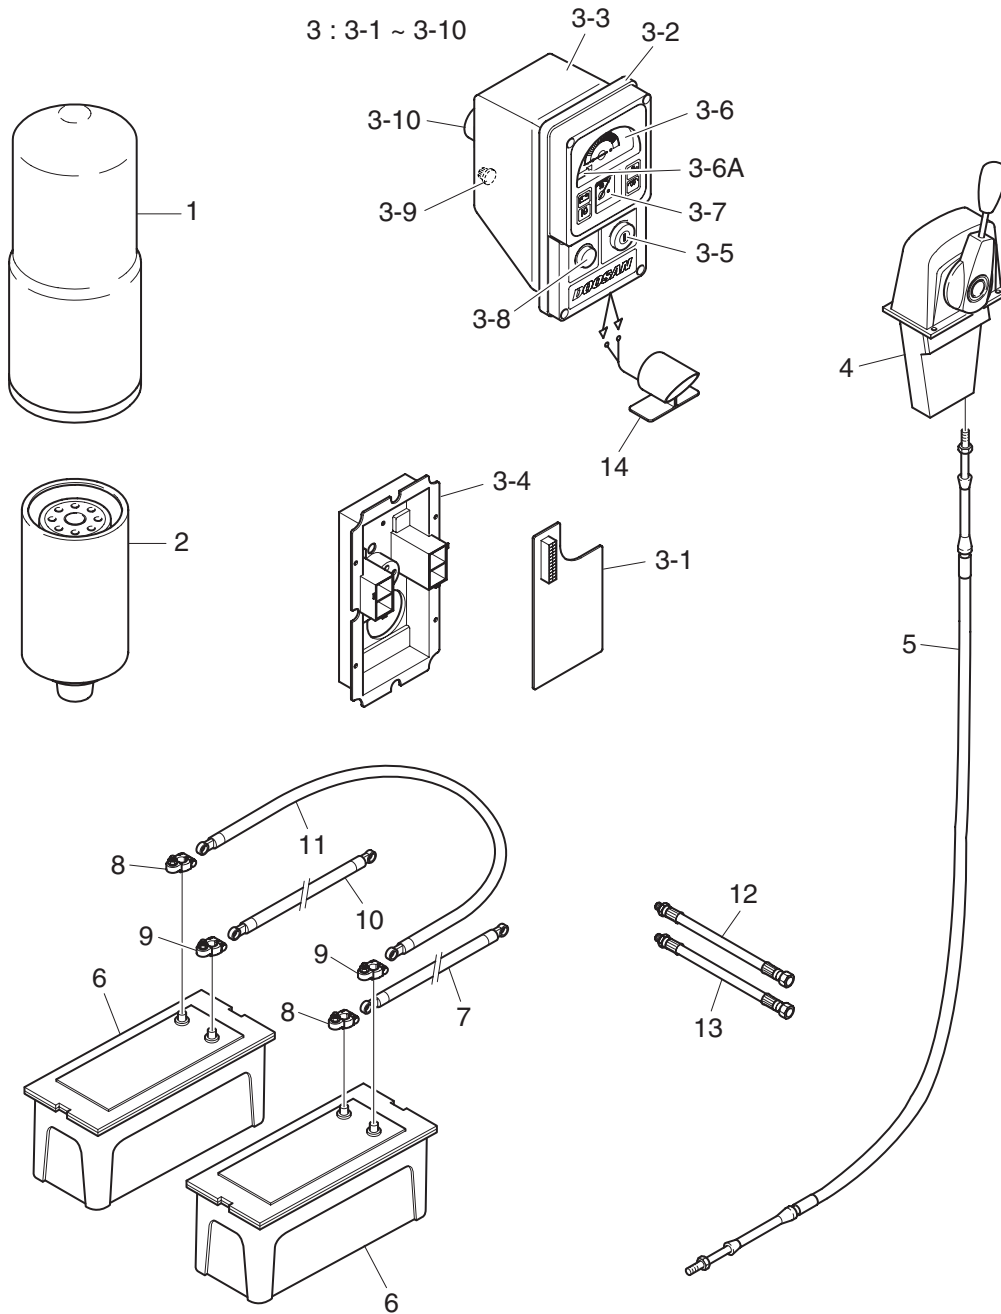

Q988-DE08-003/121023



Fig.9880 SPARE PART(2)


 
 
 
 
 
 
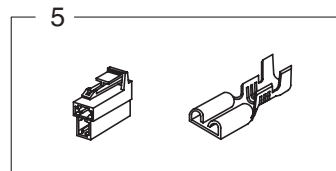 


Fig.9880 SPARE PART(3)

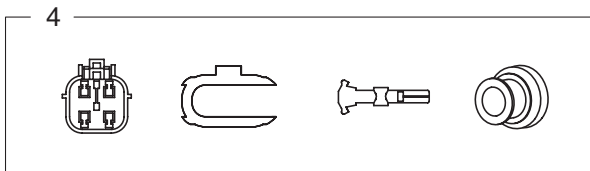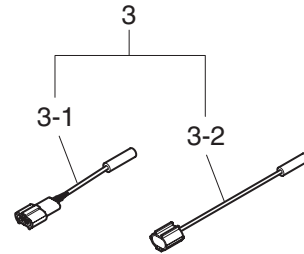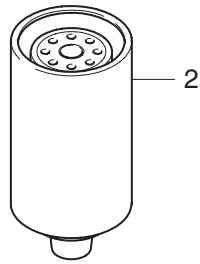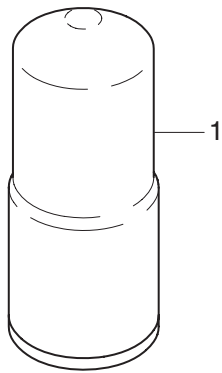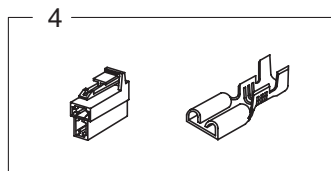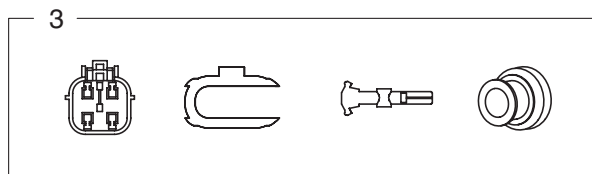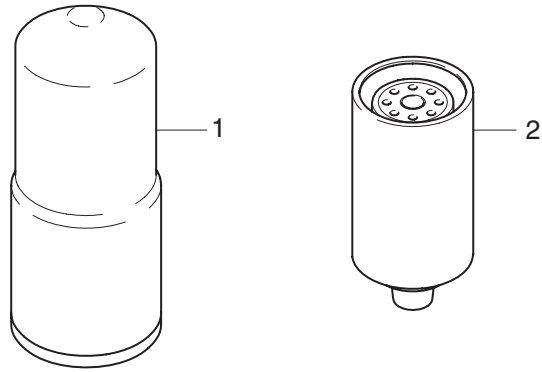 

Q988-DE08-005/121023

Fig.9880 SPARE PART(4)



 
 
 
 
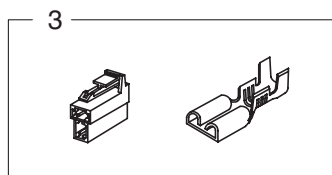 


Fig.9880 SPARE PART(5)

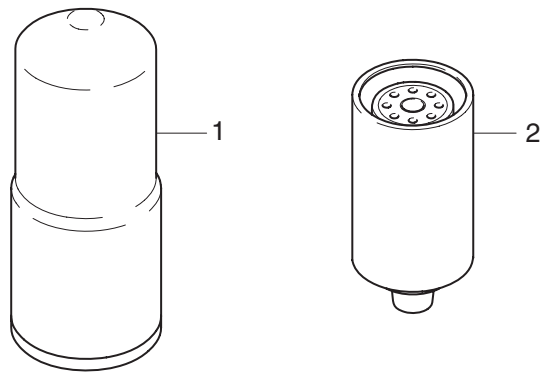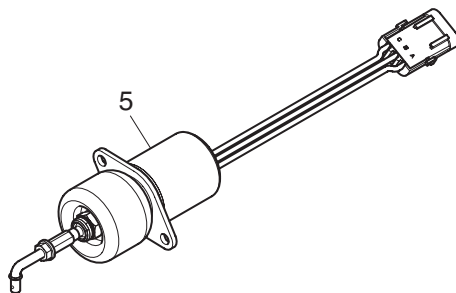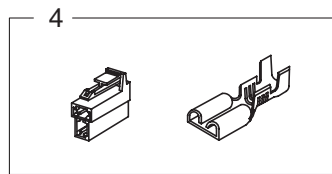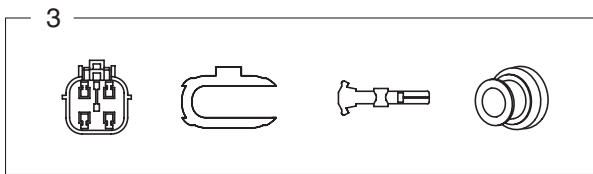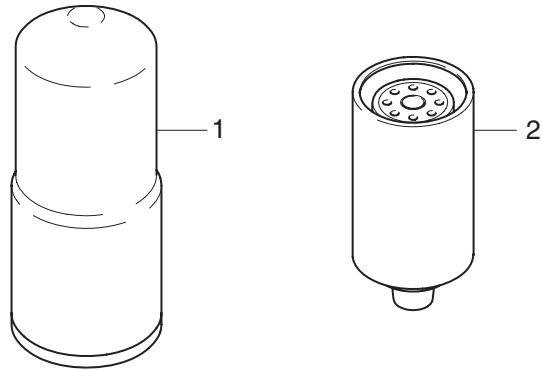 

Q988-DE08-008/121023

 Fig.9880 SPARE PART(6)

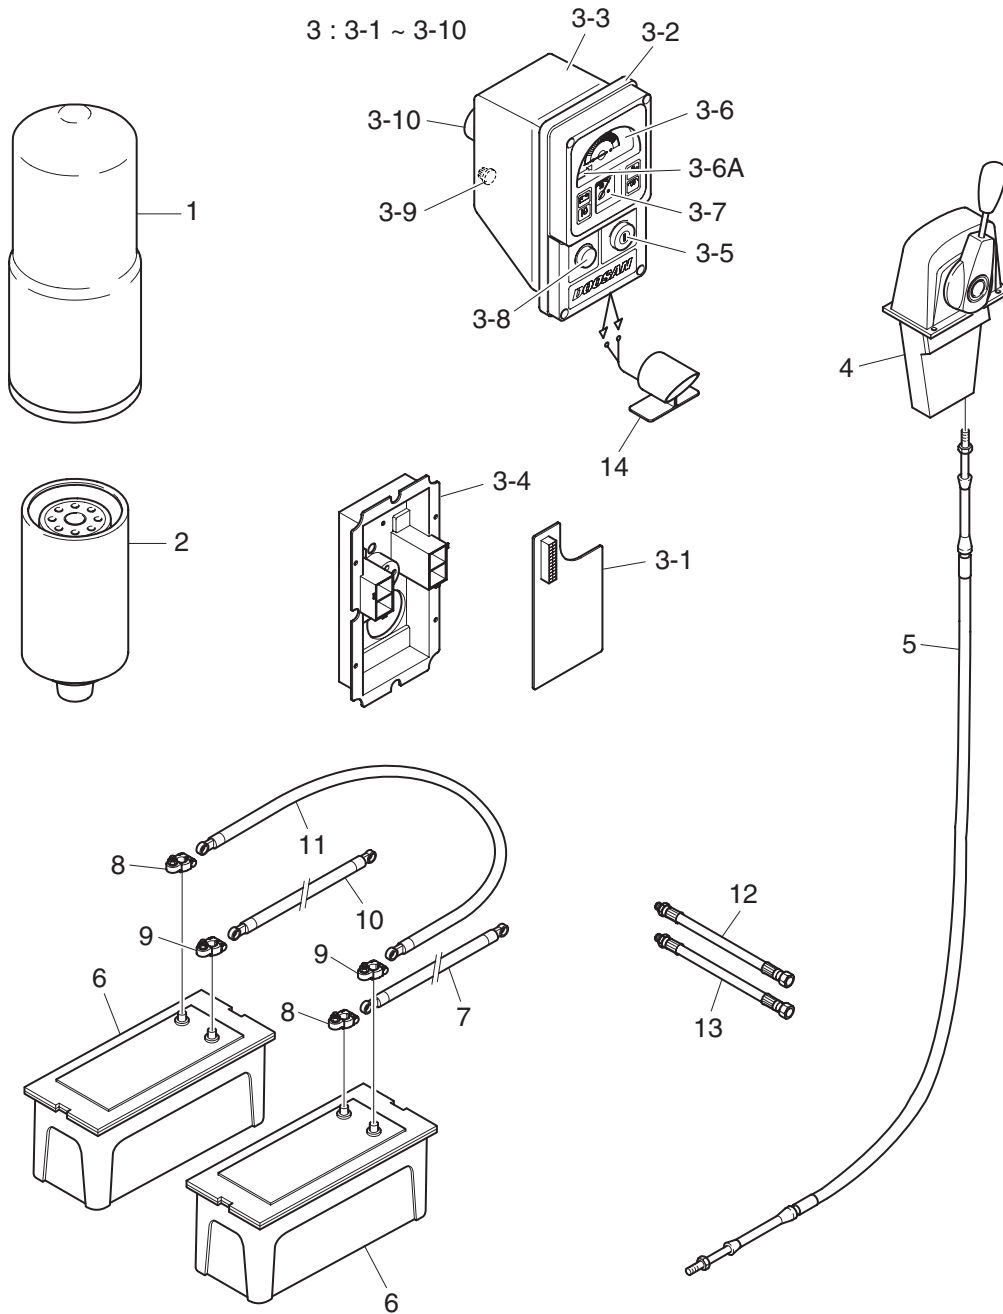

Q988-DE08-009/121023

Fig.9880 SPARE PART(7)

